

# Shop Manual

BULLDOZER

***D61EXi -24***  
***D61PXi -24***

SERIAL NUMBERS    D61EXi-40001    and up  
                                 D61PXi-40001

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-21
Foreword, Safety, Basic Information .....	00-27
How to Read the Shop Manual .....	00-27
Safety Notice for Operation .....	00-29
Precautions to Prevent Fire .....	00-37
Procedures If Fire Occurs .....	00-39
Precautions When You Discard Waste Materials .....	00-40
Procedures for Exhaust Gas Regulations .....	00-41
Precautions for DEF .....	00-42
Store DEF .....	00-43
Precautions When You Handle Hydraulic Equipment .....	00-44
Precautions When You Disconnect and Connect Pipings .....	00-47
Precautions When You Handle Electrical Equipment .....	00-54
Precautions When You Handle Fuel System Equipment .....	00-56
Precautions When You Handle Intake System Equipment .....	00-57
Practical Use of KOMTRAX .....	00-58
Disconnect and Connect Push-Pull Type Coupler .....	00-59
Precautions for Disconnection and Connection of Connectors .....	00-63
Disconnect and Connect Deutsch Connector .....	00-67
How to Disconnect and Connect Slide Lock Type Connector .....	00-68
Disconnect and Connect Connector with Lock to Pull .....	00-70
Disconnect and Connect Connector with Lock to Push .....	00-71
Disconnect and Connect Connector with Housing to Rotate .....	00-73
How to Read the Codes for Electric Cable .....	00-74
Explanation of Terms for Maintenance Standard .....	00-78
Standard Tightening Torque Table .....	00-81
Conversion Table .....	00-88
01 Specification .....	01-1
Table of Contents .....	01-2
Abbreviation List .....	01-3
Specifications .....	01-9
Specification Drawing .....	01-9
Specifications .....	01-13
Weight Table .....	01-24
Table of Fuel, Coolant, and Lubricants .....	01-28
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Abbreviation List .....	10-6
Urea SCR System .....	10-12
Layout Drawing of Urea SCR System .....	10-12
Urea SCR System Diagram .....	10-15
Function of Urea SCR System .....	10-16
Component Parts of Urea SCR System .....	10-32
Boot-up System .....	10-41
Layout Drawing of Boot-up System (Machine with KOMTRAX Terminal) .....	10-41
Layout Drawing of Boot-up System (Machine with Gateway Function Controller) .....	10-42
System Operating Lamp System .....	10-43
Battery Disconnect Switch .....	10-46
Engine System .....	10-48
Layout Drawing of Engine System .....	10-48
Engine Control System .....	10-50
Automatic Idle Stop System .....	10-62
Component Parts of Engine System .....	10-66
Cooling System .....	10-85
Layout Drawing of Cooling System .....	10-85

Cooling Fan Control System .....	10-87
Component Parts of Cooling System .....	10-90
Control System .....	10-100
Layout Drawing of Control System (Machine with KOMTRAX Terminal) .....	10-100
Layout Drawing of Control System (Machine with Gateway Function Controller) .....	10-101
Machine Monitor System.....	10-102
KOMTRAX System .....	10-104
Component Parts of Control System .....	10-106
Hydraulic System .....	10-142
Layout Drawing of Hydraulic System.....	10-142
CLSS .....	10-143
Component Parts of Hydraulic System.....	10-146
Power Train System.....	10-181
Layout Drawing of HST System .....	10-181
Operation of HST System .....	10-182
Steering and Brake Control System .....	10-184
HST Control System .....	10-186
Parking Brake Control System .....	10-197
Component Parts of Power Train System.....	10-200
Work Equipment System.....	10-236
Work Equipment Control .....	10-236
Layout Drawing of Front Work Equipment.....	10-239
Layout Drawing of Fixed Multi-Shank Ripper .....	10-240
Component Parts of Work Equipment System .....	10-241
ICT System .....	10-260
Layout Drawing of ICT System.....	10-260
System Diagram of ICT Control System.....	10-262
Blade Control System .....	10-264
Smooth Start System .....	10-270
Slip Control System.....	10-272
Assist Control System.....	10-273
HST Speed Range Control System.....	10-275
Component Parts of ICT System.....	10-277
Undercarriage and Frame .....	10-300
Main Frame.....	10-300
Suspension .....	10-301
Track Frame and Idler Cushion .....	10-304
Work Equipment .....	10-307
Structure of Front Work Equipment.....	10-307
Structure of Fixed Multi-Shank Ripper.....	10-308
CAB Related Parts.....	10-309
ROPS CAB .....	10-309
CAB Mount .....	10-312
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Abbreviation List .....	20-3
Standard Value Table for Engine .....	20-9
Standard Value Table for Engine: D61EXI-24.....	20-9
Standard Value Table for Engine: D61PXI-24.....	20-13
Standard Value Table for Machine.....	20-17
Standard Value Table for Machine: D61EXI-24 .....	20-17
Standard Value Table for Machine: D61PXI-24 .....	20-34
Machine Posture and Procedures to Measure Performance .....	20-51
30 Testing and Adjusting .....	30-1
Table of Contents .....	30-2
Precautions Before Work .....	30-6
Abbreviation List .....	30-7
Related Information on Testing and Adjusting .....	30-13

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$