

# Shop Manual

BULLDOZER

***D65EX -18***

***D65PX -18***

***D65WX -18***

SERIAL NUMBERS      D65EX- 90997  
D65PX- 90997      and up  
D65WX- 90997



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-19
Foreword, Safety, Basic Information .....	00-25
How to Read the Shop Manual .....	00-25
Safety Notice for Operation .....	00-27
Precautions to Prevent Fire .....	00-35
Procedures If Fire Occurs .....	00-37
Precautions When You Discard Waste Materials .....	00-38
Procedures for Exhaust Gas Regulations .....	00-39
Precautions for DEF .....	00-40
Store DEF .....	00-41
Precautions When You Handle Hydraulic Equipment .....	00-42
Precautions When You Disconnect and Connect Pipings .....	00-45
Precautions When You Handle Electrical Equipment .....	00-52
Precautions When You Handle Fuel System Equipment .....	00-54
Precautions When You Handle Intake System Equipment .....	00-55
Practical Use of KOMTRAX .....	00-56
Disconnect and Connect Push-Pull Type Coupler .....	00-57
Precautions for Disconnection and Connection of Connectors .....	00-61
Disconnect and Connect Deutsch Connector .....	00-65
How to Disconnect and Connect Slide Lock Type Connector .....	00-66
Disconnect and Connect Connector with Lock to Pull .....	00-68
Disconnect and Connect Connector with Lock to Push .....	00-69
Disconnect and Connect Connector with Housing to Rotate .....	00-71
How to Read the Codes for Electric Cable .....	00-72
Explanation of Terms for Maintenance Standard .....	00-76
Standard Tightening Torque Table .....	00-79
Conversion Table .....	00-86
01 Specification .....	01-1
Table of Contents .....	01-2
Abbreviation List .....	01-3
Specifications .....	01-9
Specification Drawing .....	01-9
Specifications .....	01-15
Weight Table .....	01-36
Table of Fuel, Coolant, and Lubricants .....	01-46
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Abbreviation List .....	10-5
Urea SCR System .....	10-11
Layout Drawing of Urea SCR System .....	10-11
Urea SCR System Diagram .....	10-13
Function of Urea SCR System .....	10-14
Component Parts of Urea SCR System .....	10-31
Boot-up System .....	10-40
Layout Drawing of Boot-up System (Machine with KOMTRAX Terminal) .....	10-40
System Operating Lamp System .....	10-42
Battery Disconnect Switch .....	10-44
Engine System .....	10-46
Layout Drawing of Engine System .....	10-46
Engine Control System .....	10-48
Automatic Idle Stop System .....	10-53
Component Parts of Engine System .....	10-56
Cooling System .....	10-75
Layout Drawing of Cooling System .....	10-75
Cooling Fan Control System .....	10-77

Component Parts of Cooling System .....	10-80
Control System .....	10-97
Layout Drawing of Control System (Machine with KOMTRAX Terminal) .....	10-97
Machine Monitor System.....	10-98
KOMTRAX System .....	10-100
Component Parts of Control System .....	10-101
Hydraulic System .....	10-129
Layout Drawing of Hydraulic System.....	10-129
CLSS .....	10-130
Component Parts of Hydraulic System.....	10-133
Power Train System.....	10-184
Layout Drawing of Power Train System .....	10-184
Operation of Power Train System .....	10-187
Transmission, Steering, and Brake Control .....	10-188
Palm Command Control System .....	10-190
HSS System.....	10-194
Centralized Pressure Pickup Port.....	10-197
Component Parts of Power Train System.....	10-198
Work Equipment System.....	10-267
Work Equipment Control .....	10-267
Layout of Tilt Dozer, Power Tilt Pitch Dozer and Angle Dozer Series .....	10-270
Layout of Power Angle Power Tilt Dozer Series .....	10-271
Layout Drawing of Fixed Multi-Shank Ripper .....	10-272
Component Parts of Work Equipment System .....	10-273
Undercarriage and Frame .....	10-302
Main Frame.....	10-302
Suspension .....	10-304
Track Frame and Idler Cushion .....	10-307
Work Equipment .....	10-310
Structure of Front Work Equipment (For Tilt Dozer and Power Tilt Pitch Dozer Series).....	10-310
Structure of Front Work Equipment (For Power Angle Power Tilt Dozer Series).....	10-311
Structure of Front Work Equipment (Angle Dozer Series) .....	10-312
Structure of Fixed Multi-Shank Ripper.....	10-313
CAB Related Parts.....	10-314
ROPS CAB .....	10-314
CAB Mount .....	10-316
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Abbreviation List .....	20-3
Standard Value Table for Engine.....	20-9
Standard Value Table for Engine: D65EX-18.....	20-9
Standard Value Table for Engine: D65PX-18.....	20-14
Standard Value Table for Engine: D65WX-18.....	20-19
Standard Value Table for Machine.....	20-24
Standard Value Table for Machine: D65EX-18 .....	20-24
Standard Value Table for Machine: D65PX-18 .....	20-39
Standard Value Table for Machine: D65WX-18 .....	20-54
Machine Posture and Procedures to Measure Performance .....	20-69
Standard Value Table for Electricity.....	20-71
Standard Value Table for Electricity.....	20-71
30 Testing and Adjusting .....	30-1
Table of Contents .....	30-2
Precautions Before Work .....	30-5
Abbreviation List .....	30-6
Related Information on Testing and Adjusting .....	30-12
Tools for Testing and Adjusting.....	30-12
Sketch of Tools for Testing and Adjusting .....	30-18
Engine and Cooling System .....	30-19

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$