

# Shop Manual

BULLDOZER

***D65EX -18***

***D65PX -18***

***D65WX -18***

SERIAL NUMBERS      D65EX- 91310  
                                 D65PX- 91310    and up  
                                 D65WX-91310



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-20
Foreword, Safety, Basic Information .....	00-26
How to Read the Shop Manual .....	00-26
Safety Notice for Operation .....	00-28
Precautions to Prevent Fire .....	00-36
Procedures If Fire Occurs .....	00-38
Precautions When You Discard Waste Materials .....	00-39
Procedures for Exhaust Gas Regulations .....	00-40
Precautions for DEF .....	00-41
Store DEF .....	00-42
Precautions When You Handle Hydraulic Equipment .....	00-43
Precautions When You Disconnect and Connect Pipings .....	00-46
Precautions When You Handle Electrical Equipment .....	00-53
Precautions When You Handle Fuel System Equipment .....	00-55
Precautions When You Handle Intake System Equipment .....	00-56
Practical Use of KOMTRAX .....	00-57
Disconnect and Connect Push-Pull Type Coupler .....	00-58
Precautions for Disconnection and Connection of Connectors .....	00-62
Disconnect and Connect Deutsch Connector .....	00-66
How to Disconnect and Connect Slide Lock Type Connector .....	00-67
Disconnect and Connect Connector with Lock to Pull .....	00-69
Disconnect and Connect Connector with Lock to Push .....	00-70
Disconnect and Connect Connector with Housing to Rotate .....	00-72
How to Read the Codes for Electric Cable .....	00-73
Explanation of Terms for Maintenance Standard .....	00-77
Standard Tightening Torque Table .....	00-80
Conversion Table .....	00-87
01 Specification .....	01-1
Table of Contents .....	01-2
Abbreviation List .....	01-3
Specifications .....	01-9
Specification Drawing .....	01-9
Specifications .....	01-17
Weight Table .....	01-46
Table of Fuel, Coolant, and Lubricants .....	01-58
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Abbreviation List .....	10-5
Urea SCR System .....	10-11
Layout Drawing of Urea SCR System .....	10-11
Urea SCR System Diagram .....	10-13
Function of Urea SCR System .....	10-14
Component Parts of Urea SCR System .....	10-31
Boot-up System .....	10-40
Layout Drawing of Boot-up System (Machine with KOMTRAX Terminal) .....	10-40
Layout Drawing of Boot-up System (Machine with Gateway Function Controller) .....	10-42
System Operating Lamp System .....	10-44
Battery Disconnect Switch .....	10-47
Engine System .....	10-49
Layout Drawing of Engine System .....	10-49
Engine Control System .....	10-51
Automatic Idle Stop System .....	10-62
Component Parts of Engine System .....	10-66
Cooling System .....	10-86
Layout Drawing of Cooling System .....	10-86

Cooling Fan Control System .....	10-88
Component Parts of Cooling System .....	10-91
Control System .....	10-108
Layout Drawing of Control System (Machine with KOMTRAX Terminal) .....	10-108
Layout Drawing of Control System (Machine with Gateway Function Controller) .....	10-109
Machine Monitor System.....	10-110
KOMTRAX System .....	10-112
Component Parts of Control System .....	10-114
Hydraulic System .....	10-148
Layout Drawing of Hydraulic System.....	10-148
CLSS .....	10-149
Component Parts of Hydraulic System.....	10-152
Power Train System.....	10-204
Layout Drawing of Power Train System .....	10-204
Operation of Power Train System .....	10-207
Transmission, Steering, and Brake Control .....	10-208
Palm Command Control System .....	10-210
HSS System.....	10-214
Centralized Pressure Pickup Port.....	10-217
Component Parts of Power Train System.....	10-218
Work Equipment System.....	10-289
Work Equipment Control .....	10-289
Layout Drawing of Tilt Dozer, Power Tilt Pitch Dozer, Angle Dozer and Semi-U Dozer Series .....	10-292
Layout of Power Angle Power Tilt Dozer Series .....	10-294
Layout Drawing of Fixed Multi-Shank Ripper .....	10-295
Component Parts of Work Equipment System .....	10-296
Undercarriage and Frame .....	10-325
Main Frame.....	10-325
Suspension .....	10-327
Track Frame and Idler Cushion .....	10-330
Work Equipment .....	10-333
Structure of Front Work Equipment (For Tilt Dozer and Power Tilt Pitch Dozer Series).....	10-333
Structure of Front Work Equipment (For Power Angle Power Tilt Dozer Series).....	10-334
Structure of Front Work Equipment (Angle Dozer Series) .....	10-335
Structure of Fixed Multi-Shank Ripper.....	10-336
CAB Related Parts.....	10-337
ROPS CAB .....	10-337
CAB Mount .....	10-340
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Abbreviation List .....	20-3
Standard Value Table for Engine .....	20-9
Standard Value Table for Engine: D65EX-18.....	20-9
Standard Value Table for Engine: D65PX-18.....	20-14
Standard Value Table for Engine: D65WX-18.....	20-19
Standard Value Table for Machine.....	20-24
Standard Value Table for Machine: D65EX-18 .....	20-24
Standard Value Table for Machine: D65PX-18 .....	20-39
Standard Value Table for Machine: D65WX-18 .....	20-54
Machine Posture and Procedures to Measure Performance .....	20-69
Standard Value Table for Electricity.....	20-71
Standard Value Table for Electricity.....	20-71
30 Testing and Adjusting .....	30-1
Table of Contents .....	30-2
Precautions Before Work .....	30-5
Abbreviation List .....	30-6
Related Information on Testing and Adjusting .....	30-12
Tools for Testing and Adjusting.....	30-12

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$