

Shop Manual

BULLDOZER

D65EX -18EO

D65PX -18EO

D65WX -18EO

SERIAL NUMBERS D65EX- 91845
D65PX- 91845 and up
D65WX-91845

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-20
Foreword, Safety, Basic Information.....	00-26
How to Read the Shop Manual	00-26
Safety Notice for Operation	00-28
Precautions to Prevent Fire.....	00-36
Procedures If Fire Occurs	00-38
Precautions When You Discard Waste Materials.....	00-39
Procedures for Exhaust Gas Regulations.....	00-40
Precautions for DEF.....	00-41
Store DEF	00-42
Precautions When You Handle Hydraulic Equipment.....	00-43
Precautions When You Disconnect and Connect Pipings.....	00-46
Precautions When You Handle Electrical Equipment	00-53
Precautions When You Handle Fuel System Equipment	00-55
Precautions When You Handle Intake System Equipment	00-56
Practical Use of KOMTRAX	00-57
Disconnect and Connect Push-Pull Type Coupler	00-58
Precautions for Disconnection and Connection of Connectors	00-62
Disconnect and Connect Deutsch Connector	00-66
How to Disconnect and Connect Slide Lock Type Connector	00-67
Disconnect and Connect Connector with Lock to Pull	00-69
Disconnect and Connect Connector with Lock to Push	00-70
Disconnect and Connect Connector with Housing to Rotate	00-72
How to Read the Codes for Electric Cable	00-73
Explanation of Terms for Maintenance Standard	00-77
Standard Tightening Torque Table.....	00-80
Conversion Table	00-87
01 Specification.....	01-1
Table of Contents	01-2
Abbreviation List	01-3
Specifications	01-9
Specification Drawing.....	01-9
Specifications.....	01-14
Weight Table	01-40
Table of Fuel, Coolant, and Lubricants	01-52
10 Structure and Function	10-1
Table of Contents	10-2
Abbreviation List	10-5
Urea SCR System.....	10-11
Layout Drawing of Urea SCR System	10-11
Urea SCR System Diagram	10-13
Function of Urea SCR System	10-14
Component Parts of Urea SCR System	10-30
Boot-up System	10-39
Layout Drawing of Boot-up System (Machine with KOMTRAX Terminal)	10-39
Layout Drawing of Boot-up System (Machine with Gateway Function Controller)	10-41
System Operating Lamp System.....	10-43
Battery Disconnect Switch.....	10-46
Engine System.....	10-48
Layout Drawing of Engine System	10-48
Engine Control System	10-50
Automatic Idle Stop System	10-61
Component Parts of Engine System	10-65
Cooling System.....	10-84
Layout Drawing of Cooling System	10-84

Cooling Fan Control System	10-86
Component Parts of Cooling System	10-89
Control System	10-106
Layout Drawing of Control System (Machine with KOMTRAX Terminal)	10-106
Layout Drawing of Control System (Machine with Gateway Function Controller)	10-107
Machine Monitor System.....	10-108
KOMTRAX System	10-110
Component Parts of Control System	10-112
Hydraulic System	10-145
Layout Drawing of Hydraulic System.....	10-145
CLSS	10-146
Component Parts of Hydraulic System.....	10-149
Power Train System.....	10-200
Layout Drawing of Power Train System	10-200
Operation of Power Train System	10-203
Transmission, Steering, and Brake Control	10-204
Palm Command Control System	10-206
HSS System.....	10-210
Centralized Pressure Pickup Port.....	10-213
Component Parts of Power Train System.....	10-214
Work Equipment System.....	10-283
Work Equipment Control	10-283
Layout Drawing of Tilt Dozer, Power Tilt Pitch Dozer, Angle Dozer and Semi-U Dozer Series	10-286
Layout of Power Angle Power Tilt Dozer Series	10-288
Layout Drawing of Fixed Multi-Shank Ripper	10-289
Component Parts of Work Equipment System	10-290
Undercarriage and Frame	10-319
Main Frame.....	10-319
Suspension	10-321
Track Frame and Idler Cushion	10-324
Work Equipment	10-327
Structure of Front Work Equipment (For Tilt Dozer and Power Tilt Pitch Dozer Series)	10-327
Structure of Front Work Equipment (For Power Angle Power Tilt Dozer Series).....	10-328
Structure of Front Work Equipment (Angle Dozer Series)	10-329
Structure of Fixed Multi-Shank Ripper.....	10-330
CAB Related Parts	10-331
ROPS CAB	10-331
CAB Mount	10-334
20 Standard Value Table	20-1
Table of Contents	20-2
Abbreviation List	20-3
Standard Value Table for Engine	20-9
Standard Value Table for Engine: D65EX-18E0	20-9
Standard Value Table for Engine: D65PX-18E0	20-14
Standard Value Table for Engine: D65WX-18E0	20-19
Standard Value Table for Machine.....	20-24
Standard Value Table for Machine: D65EX-18E0	20-24
Standard Value Table for Machine: D65PX-18E0	20-39
Standard Value Table for Machine: D65WX-18E0	20-54
Machine Posture and Procedures to Measure Performance	20-69
Standard Value Table for Electricity	20-71
Standard Value Table for Electricity.....	20-71
30 Testing and Adjusting	30-1
Table of Contents	30-2
Precautions Before Work	30-5
Abbreviation List	30-6
Related Information on Testing and Adjusting	30-12
Tools for Testing and Adjusting.....	30-12

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$