

# Shop Manual

BULLDOZER

**D65EX-18MO**

SERIAL NUMBERS 96001 and up

**KOMATSU**



---

## **00 Index and Foreword**

---

# Index

00 Index and Foreword .....	00-1
Foreword, Safety, Basic Information .....	00-19
How to Read the Shop Manual .....	00-19
Safety Notice for Operation .....	00-21
Precautions to Prevent Fire .....	00-29
Procedures If Fire Occurs .....	00-31
Precautions When You Discard Waste Materials .....	00-32
Actions Taken to Meet Exhaust Gas Regulations .....	00-33
Precautions for DEF .....	00-34
Store DEF .....	00-35
Precautions When You Handle Hydraulic Equipment .....	00-36
Precautions When You Disconnect and Connect Pipings .....	00-39
Precautions When You Handle Electrical Equipment .....	00-46
Precautions When You Handle Fuel System Equipment .....	00-48
Precautions When You Handle Intake System Equipment .....	00-49
Practical Use of KOMTRAX .....	00-50
Disconnect and Connect Push-Pull Type Coupler .....	00-51
Precautions for Disconnection and Connection of Connectors .....	00-55
Disconnect and Connect Deutsch Connector .....	00-59
How to Disconnect and Connect Slide Lock Type Connector .....	00-60
Disconnect and Connect Connector with Lock to Pull .....	00-62
Disconnect and Connect Connector with Lock to Push .....	00-63
Disconnect and Connect Connector with Housing to Rotate .....	00-65
How to Read the Codes for Electric Cable .....	00-66
Explanation of Terms for Maintenance Standard .....	00-70
Standard Tightening Torque Table .....	00-73
Conversion Table .....	00-80
Abbreviation List .....	00-85
01 Specification.....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Specifications .....	01-5
Weight Table .....	01-10
Fuel, Coolant, Lubricant .....	01-12
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Urea SCR System .....	10-5
Layout Drawing of Urea SCR System .....	10-5
Urea SCR System Diagram .....	10-7
Function of Urea SCR System .....	10-8
Component Parts of Urea SCR System .....	10-29
Boot-up System .....	10-38
Layout Drawing of Boot-up System (Machine with KOMTRAX Terminal) .....	10-38
Layout Drawing of Boot-up System (Machine with Gateway Function Controller) .....	10-40
System Operating Lamp System .....	10-42
Battery Disconnect Switch .....	10-45
Engine System .....	10-47
Layout Drawing of Engine System .....	10-47
Engine Control System .....	10-49
Automatic Idle Stop System .....	10-60
Component Parts of Engine System .....	10-64
Cooling System .....	10-83
Layout Drawing of Cooling System .....	10-83
Layout Drawing of Cooling System (Trimming Dozer Specification) .....	10-85
Cooling Fan Control System .....	10-87

Component Parts of Cooling System .....	10-90
Control System .....	10-107
Layout Drawing of Control System (Machine with KOMTRAX Terminal) .....	10-107
Layout Drawing of Control System (Machine with Gateway Function Controller) .....	10-108
Machine Monitor System.....	10-109
KOMTRAX System .....	10-111
Component Parts of Control System .....	10-113
Hydraulic System .....	10-148
Layout Drawing of Hydraulic System.....	10-148
CLSS .....	10-149
Component Parts of Hydraulic System.....	10-152
Power Train System.....	10-203
Layout Drawing of Power Train System .....	10-203
Operation of Power Train System .....	10-206
Transmission, Steering, and Brake Control .....	10-207
Palm Command Control System .....	10-209
HSS System.....	10-213
Centralized Pressure Pickup Port.....	10-216
Component Parts of Power Train System.....	10-217
Work Equipment System.....	10-286
Work Equipment Control .....	10-286
Layout Drawing of Tilt Dozer, Power Tilt Pitch Dozer, Angle Dozer and Semi-U Dozer Series .....	10-289
Layout Drawing of Fixed Multi-Shank Ripper .....	10-291
Component Parts of Work Equipment System .....	10-292
Undercarriage and Frame .....	10-315
Main Frame.....	10-315
Suspension .....	10-317
Track Frame and Idler Cushion .....	10-320
Work Equipment .....	10-323
Structure of Front Work Equipment (For Tilt Dozer and Power Tilt Pitch Dozer Series) .....	10-323
Structure of Front Work Equipment (Angle Dozer Series) .....	10-324
Structure of Front Work Equipment (Trimming Dozer Specification) .....	10-325
Structure of Fixed Multi-Shank Ripper.....	10-326
CAB Related Parts .....	10-327
ROPS CAB .....	10-327
CAB Mount .....	10-329
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Engine .....	20-3
Standard Value Table for Engine: D65EX-18M0 .....	20-3
Standard Value Table for Machine.....	20-8
Standard Value Table for Machine: D65EX-18M0 .....	20-8
Machine Posture and Procedures to Measure Performance .....	20-24
30 Testing and Adjusting .....	30-1
Table of Contents .....	30-2
Precautions Before Work .....	30-5
Related Information on Testing and Adjusting .....	30-6
Tools for Testing and Adjusting.....	30-6
Sketch of Tools for Testing and Adjusting .....	30-12
Engine and Cooling System .....	30-13
Examine Engine Speed.....	30-13
Examine Boost Pressure.....	30-16
Examine Exhaust Gas Temperature.....	30-18
Examine Exhaust Gas Color .....	30-20
Examine Mass Air Flow and Temperature Sensor.....	30-22
Examine and Adjust Valve Clearance.....	30-24
Examine Compression Pressure.....	30-27
Examine Blowby Pressure .....	30-29

It's a preview. You can download the full file by  
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$