

Shop Manual

BULLDOZER

D65EXi -18
D65PXi -18

SERIAL NUMBERS D65EXi-90023 and up
 D65PXi-90023

00 INDEX AND FOREWORD

INDEX

| | |
|--|-------|
| 00 INDEX AND FOREWORD | 00-1 |
| ABBREVIATION LIST | 00-23 |
| FOREWORD, SAFETY, BASIC INFORMATION | 00-29 |
| HOW TO READ THE SHOP MANUAL | 00-29 |
| SAFETY NOTICE FOR OPERATION | 00-31 |
| PRECAUTIONS TO PREVENT FIRE | 00-39 |
| ACTIONS IF FIRE OCCURS | 00-40 |
| PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS | 00-40 |
| ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS | 00-41 |
| PRECAUTIONS FOR DEF | 00-42 |
| STORE AdBlue/DEF | 00-43 |
| PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT | 00-44 |
| PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS | 00-47 |
| PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT | 00-54 |
| PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT | 00-56 |
| PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT | 00-57 |
| PRACTICAL USE OF KOMTRAX | 00-58 |
| DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER | 00-59 |
| PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS | 00-63 |
| METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR | 00-67 |
| METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR | 00-68 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL .. | 00-70 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH .. | 00-71 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE . | 00-73 |
| HOW TO READ ELECTRICAL WIRE CODE | 00-74 |
| EXPLANATION OF TERMS FOR MAINTENANCE STANDARD | 00-78 |
| STANDARD TIGHTENING TORQUE TABLE | 00-81 |
| CONVERSION TABLE | 00-88 |
| 01 SPECIFICATIONS | 01-1 |
| CONTENTS | 01-2 |
| ABBREVIATION LIST | 01-3 |
| SPECIFICATIONS | 01-9 |
| SPECIFICATION DRAWING | 01-9 |
| SPECIFICATIONS | 01-13 |
| WEIGHT TABLE | 01-27 |
| TABLE OF FUEL, COOLANT, AND LUBRICANTS | 01-33 |
| 10 STRUCTURE AND FUNCTION | 10-1 |
| CONTENTS | 10-2 |
| ABBREVIATION LIST | 10-6 |
| UREA SCR SYSTEM | 10-12 |
| LAYOUT DRAWING OF UREA SCR SYSTEM | 10-12 |
| UREA SCR SYSTEM DIAGRAM | 10-14 |
| FUNCTION OF UREA SCR SYSTEM | 10-15 |
| COMPONENT PARTS OF UREA SCR SYSTEM | 10-31 |
| BOOT-UP SYSTEM | 10-40 |
| LAYOUT DRAWING OF BOOT-UP SYSTEM | 10-40 |
| SYSTEM OPERATING LAMP SYSTEM | 10-42 |
| BATTERY DISCONNECT SWITCH | 10-44 |
| ENGINE SYSTEM | 10-46 |
| LAYOUT DRAWING OF ENGINE SYSTEM | 10-46 |
| ENGINE CONTROL SYSTEM | 10-48 |
| AUTOMATIC IDLE STOP SYSTEM | 10-53 |
| COMPONENT PARTS OF ENGINE SYSTEM | 10-56 |
| COOLING SYSTEM | 10-76 |
| LAYOUT DRAWING OF COOLING SYSTEM | 10-76 |

| | |
|---|--------|
| COOLING FAN CONTROL SYSTEM..... | 10-78 |
| COMPONENT PARTS OF COOLING SYSTEM..... | 10-81 |
| CONTROL SYSTEM..... | 10-98 |
| LAYOUT DRAWING OF CONTROL SYSTEM | 10-98 |
| MACHINE MONITOR SYSTEM | 10-99 |
| KOMTRAX SYSTEM..... | 10-100 |
| COMPONENT PARTS OF CONTROL SYSTEM..... | 10-101 |
| HYDRAULIC SYSTEM..... | 10-130 |
| LAYOUT DRAWING OF HYDRAULIC SYSTEM | 10-130 |
| CLSS | 10-131 |
| COMPONENT PARTS OF HYDRAULIC SYSTEM | 10-134 |
| POWER TRAIN SYSTEM | 10-187 |
| LAYOUT DRAWING OF POWER TRAIN SYSTEM..... | 10-187 |
| OPERATION OF POWER TRAIN SYSTEM..... | 10-189 |
| TRANSMISSION, STEERING, AND BRAKE CONTROL | 10-190 |
| PALM COMMAND CONTROL SYSTEM..... | 10-192 |
| HSS SYSTEM..... | 10-196 |
| CENTRALIZED PRESSURE PICKUP PORT..... | 10-199 |
| COMPONENT PARTS OF POWER TRAIN SYSTEM..... | 10-200 |
| WORK EQUIPMENT SYSTEM | 10-271 |
| WORK EQUIPMENT CONTROL | 10-271 |
| LAYOUT OF TILT DOZER AND POWER TILT PITCH DOZER SERIES | 10-274 |
| LAYOUT OF POWER ANGLE POWER TILT DOZER SERIES | 10-275 |
| LAYOUT OF FIXED MULTI-SHANK RIPPER..... | 10-276 |
| COMPONENT PARTS OF WORK EQUIPMENT SYSTEM..... | 10-277 |
| ICT SYSTEM | 10-306 |
| LAYOUT DRAWING OF ICT SYSTEM..... | 10-306 |
| ICT CONTROL SYSTEM DIAGRAM..... | 10-309 |
| BLADE CONTROL SYSTEM | 10-311 |
| SMOOTH START SYSTEM | 10-317 |
| SLIP CONTROL SYSTEM | 10-319 |
| ASSIST CONTROL SYSTEM | 10-321 |
| COMPONENT PARTS OF ICT SYSTEM | 10-323 |
| UNDERCARRIAGE AND FRAME..... | 10-354 |
| MAIN FRAME | 10-354 |
| SUSPENSION | 10-356 |
| TRACK FRAME AND IDLER CUSHION | 10-359 |
| WORK EQUIPMENT..... | 10-362 |
| STRUCTURE OF FRONT WORK EQUIPMENT (FOR TILT DOZER AND POWER TILT PITCH DOZER SERIES)..... | 10-362 |
| STRUCTURE OF FRONT WORK EQUIPMENT (FOR POWER ANGLE POWER TILT DOZER SERIES)..... | 10-363 |
| STRUCTURE OF FIXED MULTI-SHANK RIPPER..... | 10-364 |
| CAB AND ITS ATTACHMENTS | 10-365 |
| ROPS CAB | 10-365 |
| CAB MOUNT | 10-367 |
| 20 STANDARD VALUE TABLE | 20-1 |
| CONTENTS | 20-2 |
| ABBREVIATION LIST | 20-3 |
| STANDARD VALUE TABLE FOR ENGINE | 20-9 |
| STANDARD VALUE TABLE FOR ENGINE: D65EXI-18 | 20-9 |
| STANDARD VALUE TABLE FOR ENGINE: D65PXI-18 | 20-14 |
| STANDARD VALUE TABLE FOR MACHINE..... | 20-19 |
| STANDARD VALUE TABLE FOR MACHINE: D65EXI-18 | 20-19 |
| STANDARD VALUE TABLE FOR MACHINE: D65PXI-18 | 20-36 |
| MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE | 20-54 |
| STANDARD VALUE TABLE FOR ELECTRICAL | 20-57 |
| STANDARD VALUE TABLE FOR ELECTRICITY | 20-57 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$