

Shop Manual

BULLDOZER

D65EXi -18
D65PXi -18

SERIAL NUMBERS D65EXi-90023 and up
 D65PXi-90023

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-22
Foreword, Safety, Basic Information	00-28
How to Read the Shop Manual	00-28
Safety Notice for Operation	00-30
Precautions to Prevent Fire	00-38
Procedures If Fire Occurs	00-39
Precautions When You Discard Waste Materials	00-39
Procedures for Exhaust Gas Regulations	00-40
Precautions for DEF	00-41
Store DEF	00-42
Precautions When You Handle Hydraulic Equipment	00-43
Precautions When You Disconnect and Connect Pipings	00-46
Precautions When You Handle Electrical Equipment	00-53
Precautions When You Handle Fuel System Equipment	00-55
Precautions When You Handle Intake System Equipment	00-56
Practical Use of KOMTRAX	00-57
Disconnect and Connect Push-Pull Type Coupler	00-58
Precautions for Disconnection and Connection of Connectors	00-62
Disconnect and Connect Deutsch Connector	00-66
How to Disconnect and Connect Slide Lock Type Connector	00-67
Disconnect and Connect Connector with Lock to Pull	00-69
Disconnect and Connect Connector with Lock to Push	00-70
Disconnect and Connect Connector with Housing to Rotate	00-72
How to Read the Codes for Electric Cable	00-73
Explanation of Terms for Maintenance Standard	00-77
Standard Tightening Torque Table	00-80
Conversion Table	00-87
01 Specification	01-1
Table of Contents	01-2
Abbreviation List	01-3
Specifications	01-9
Specification Drawing	01-9
Specifications	01-13
Weight Table	01-27
Table of Fuel, Coolant, and Lubricants	01-33
10 Structure and Function	10-1
Table of Contents	10-2
Abbreviation List	10-6
Urea SCR System	10-12
Layout Drawing of Urea SCR System	10-12
Urea SCR System Diagram	10-14
Function of Urea SCR System	10-15
Component Parts of Urea SCR System	10-31
Boot-up System	10-40
Layout Drawing of Boot-up System (Machine with KOMTRAX Terminal)	10-40
System Operating Lamp System	10-42
Battery Disconnect Switch	10-44
Engine System	10-46
Layout Drawing of Engine System	10-46
Engine Control System	10-48
Automatic Idle Stop System	10-53
Component Parts of Engine System	10-56
Cooling System	10-76
Layout Drawing of Cooling System	10-76
Cooling Fan Control System	10-78

Component Parts of Cooling System	10-81
Control System	10-98
Layout Drawing of Control System (Machine with KOMTRAX Terminal)	10-98
Machine Monitor System.....	10-99
KOMTRAX System	10-101
Component Parts of Control System	10-102
Hydraulic System	10-131
Layout Drawing of Hydraulic System.....	10-131
CLSS	10-132
Component Parts of Hydraulic System.....	10-135
Power Train System.....	10-189
Layout Drawing of Power Train System	10-189
Operation of Power Train System	10-191
Transmission, Steering, and Brake Control	10-192
Palm Command Control System	10-194
HSS System.....	10-198
Centralized Pressure Pickup Port.....	10-201
Component Parts of Power Train System.....	10-202
Work Equipment System.....	10-272
Work Equipment Control	10-272
Layout of Tilt Dozer and Power Tilt Pitch Dozer Series	10-275
Layout of Power Angle Power Tilt Dozer Series	10-276
Layout Drawing of Fixed Multi-Shank Ripper	10-277
Component Parts of Work Equipment System	10-278
ICT System	10-307
Layout Drawing of ICT System.....	10-307
System Diagram of ICT Control System.....	10-310
Blade Control System	10-312
Smooth Start System	10-318
Slip Control System.....	10-320
Assist Control System.....	10-322
Component Parts of ICT System.....	10-324
Undercarriage and Frame	10-355
Main Frame.....	10-355
Suspension	10-357
Track Frame and Idler Cushion	10-360
Work Equipment	10-363
Structure of Front Work Equipment (For Tilt Dozer and Power Tilt Pitch Dozer Series).....	10-363
Structure of Front Work Equipment (For Power Angle Power Tilt Dozer Series).....	10-364
Structure of Fixed Multi-Shank Ripper.....	10-365
CAB Related Parts.....	10-366
ROPS CAB	10-366
CAB Mount	10-368
20 Standard Value Table	20-1
Table of Contents	20-2
Abbreviation List	20-3
Standard Value Table for Engine	20-9
Standard Value Table for Engine: D65EXI-18.....	20-9
Standard Value Table for Engine: D65PXI-18.....	20-14
Standard Value Table for Machine.....	20-19
Standard Value Table for Machine: D65EXI-18	20-19
Standard Value Table for Machine: D65PXI-18	20-35
Machine Posture and Procedures to Measure Performance	20-52
Standard Value Table for Electricity.....	20-54
Standard Value Table for Electricity.....	20-54
30 Testing and Adjusting	30-1
Table of Contents	30-2
Precautions Before Work	30-6

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$