

# Shop Manual

BULLDOZER

***D65PXi-18***

Radio control specification

SERIAL NUMBERS 90023 and up



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-23
FOREWORD, SAFETY, BASIC INFORMATION .....	00-29
HOW TO READ THE SHOP MANUAL .....	00-29
SAFETY NOTICE FOR OPERATION .....	00-31
PRECAUTIONS TO PREVENT FIRE .....	00-39
ACTIONS IF FIRE OCCURS .....	00-41
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....	00-42
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS .....	00-43
PRECAUTIONS FOR DEF .....	00-44
STORE AdBlue/DEF .....	00-45
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-46
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS .....	00-49
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT .....	00-56
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-58
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-59
PRACTICAL USE OF KOMTRAX .....	00-60
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-61
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-65
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-69
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-72
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-73
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-75
HOW TO READ ELECTRICAL WIRE CODE .....	00-76
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD .....	00-80
STANDARD TIGHTENING TORQUE TABLE .....	00-83
CONVERSION TABLE .....	00-90
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATIONS .....	01-9
SPECIFICATION DRAWING .....	01-9
SPECIFICATIONS .....	01-11
WEIGHT TABLE .....	01-16
TABLE OF FUEL, COOLANT, AND LUBRICANTS .....	01-18
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
ABBREVIATION LIST .....	10-6
UREA SCR SYSTEM .....	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM .....	10-12
UREA SCR SYSTEM DIAGRAM .....	10-14
FUNCTION OF UREA SCR SYSTEM .....	10-15
COMPONENT PARTS OF UREA SCR SYSTEM .....	10-31
BOOT-UP SYSTEM .....	10-40
LAYOUT DRAWING OF BOOT-UP SYSTEM .....	10-40
SYSTEM OPERATING LAMP SYSTEM .....	10-42
BATTERY DISCONNECT SWITCH .....	10-44
ENGINE SYSTEM .....	10-46
LAYOUT DRAWING OF ENGINE SYSTEM .....	10-46
ENGINE CONTROL SYSTEM .....	10-48
AUTOMATIC IDLE STOP SYSTEM .....	10-53
COMPONENT PARTS OF ENGINE SYSTEM .....	10-56
COOLING SYSTEM .....	10-76
LAYOUT DRAWING OF COOLING SYSTEM .....	10-76

COOLING FAN CONTROL SYSTEM.....	10-78
COMPONENT PARTS OF COOLING SYSTEM.....	10-81
CONTROL SYSTEM.....	10-98
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-98
MACHINE MONITOR SYSTEM .....	10-99
KOMTRAX SYSTEM.....	10-100
COMPONENT PARTS OF CONTROL SYSTEM.....	10-101
HYDRAULIC SYSTEM.....	10-130
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-130
CLSS .....	10-131
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-134
POWER TRAIN SYSTEM .....	10-188
LAYOUT DRAWING OF POWER TRAIN SYSTEM.....	10-188
OPERATION OF POWER TRAIN SYSTEM.....	10-190
TRANSMISSION, STEERING, AND BRAKE CONTROL .....	10-191
PALM COMMAND CONTROL SYSTEM.....	10-193
HSS SYSTEM.....	10-197
CENTRALIZED PRESSURE PICKUP PORT.....	10-200
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-201
WORK EQUIPMENT SYSTEM .....	10-278
WORK EQUIPMENT CONTROL .....	10-278
LAYOUT OF TILT DOZER AND POWER TILT PITCH DOZER SERIES .....	10-280
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-281
ICT SYSTEM .....	10-301
LAYOUT DRAWING OF ICT SYSTEM.....	10-301
ICT CONTROL SYSTEM DIAGRAM.....	10-304
BLADE CONTROL SYSTEM .....	10-306
SMOOTH START SYSTEM .....	10-312
SLIP CONTROL SYSTEM .....	10-314
ASSIST CONTROL SYSTEM .....	10-316
COMPONENT PARTS OF ICT SYSTEM .....	10-318
RADIO CONTROL SYSTEM.....	10-341
LAYOUT DRAWING OF RADIO CONTROL SYSTEM.....	10-341
SPECIFICATIONS OF RADIO CONTROL SYSTEM.....	10-342
COMPONENT PARTS OF RADIO CONTROL SYSTEM .....	10-343
UNDERCARRIAGE AND FRAME.....	10-350
MAIN FRAME .....	10-350
SUSPENSION .....	10-352
TRACK FRAME AND IDLER CUSHION .....	10-355
WORK EQUIPMENT.....	10-358
STRUCTURE OF FRONT WORK EQUIPMENT.....	10-358
CAB AND ITS ATTACHMENTS .....	10-359
ROPS CAB .....	10-359
CAB MOUNT .....	10-361
20 STANDARD VALUE TABLE .....	20-1
CONTENTS .....	20-2
ABBREVIATION LIST .....	20-3
STANDARD VALUE TABLE FOR ENGINE .....	20-9
STANDARD VALUE TABLE FOR ENGINE: D65PXI-18 .....	20-9
STANDARD VALUE TABLE FOR MACHINE.....	20-14
STANDARD VALUE TABLE FOR MACHINE: D65PXI-18 .....	20-14
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE .....	20-29
STANDARD VALUE TABLE FOR ELECTRICAL .....	20-30
STANDARD VALUE TABLE FOR ELECTRICITY .....	20-30
30 TESTING AND ADJUSTING .....	30-1
CONTENTS .....	30-2
ABBREVIATION LIST .....	30-6
RELATED INFORMATION ON TESTING AND ADJUSTING .....	30-12

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$