

Shop Manual

BULLDOZER

D65PX*i*-18

Radio control specification

SERIAL NUMBERS 90023 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-23
Foreword, Safety, Basic Information.....	00-29
How to Read the Shop Manual	00-29
Safety Notice for Operation	00-31
Precautions to Prevent Fire.....	00-39
Procedures If Fire Occurs	00-41
Precautions When You Discard Waste Materials.....	00-42
Procedures for Exhaust Gas Regulations.....	00-43
Precautions for DEF.....	00-44
Store DEF	00-45
Precautions When You Handle Hydraulic Equipment.....	00-46
Precautions When You Disconnect and Connect Pipings.....	00-49
Precautions When You Handle Electrical Equipment	00-56
Precautions When You Handle Fuel System Equipment	00-58
Precautions When You Handle Intake System Equipment	00-59
Practical Use of KOMTRAX	00-60
Disconnect and Connect Push-Pull Type Coupler	00-61
Precautions for Disconnection and Connection of Connectors	00-65
Disconnect and Connect Deutsch Connector	00-69
How to Disconnect and Connect Slide Lock Type Connector	00-70
Disconnect and Connect Connector with Lock to Pull	00-72
Disconnect and Connect Connector with Lock to Push	00-73
Disconnect and Connect Connector with Housing to Rotate	00-75
How to Read the Codes for Electric Cable	00-76
Explanation of Terms for Maintenance Standard	00-80
Standard Tightening Torque Table.....	00-83
Conversion Table	00-90
01 Specification.....	01-1
Table of Contents	01-2
Abbreviation List	01-3
Specifications	01-9
Specification Drawing.....	01-9
Specifications.....	01-11
Weight Table	01-16
Table of Fuel, Coolant, and Lubricants	01-18
10 Structure and Function	10-1
Table of Contents	10-2
Abbreviation List	10-6
Urea SCR System.....	10-12
Layout Drawing of Urea SCR System	10-12
Urea SCR System Diagram	10-14
Function of Urea SCR System	10-15
Component Parts of Urea SCR System	10-33
Boot-up System	10-43
Layout Drawing of Boot-up System (Machine with KOMTRAX Terminal)	10-43
Layout Drawing of Boot-up System (Machine with Gateway Function Controller)	10-45
System Operating Lamp System.....	10-47
Battery Disconnect Switch.....	10-50
Engine System.....	10-52
Layout Drawing of Engine System	10-52
Engine Control System	10-54
Automatic Idle Stop System	10-65
Component Parts of Engine System	10-69
Cooling System.....	10-89
Layout Drawing of Cooling System	10-89

Cooling Fan Control System	10-91
Component Parts of Cooling System	10-94
Control System	10-111
Layout Drawing of Control System (Machine with KOMTRAX Terminal)	10-111
Layout Drawing of Control System (Machine with Gateway Function Controller)	10-112
Machine Monitor System.....	10-113
KOMTRAX System	10-115
Component Parts of Control System	10-117
Hydraulic System	10-151
Layout Drawing of Hydraulic System.....	10-151
CLSS	10-152
Component Parts of Hydraulic System.....	10-155
Power Train System.....	10-209
Layout Drawing of Power Train System	10-209
Operation of Power Train System	10-211
Transmission, Steering, and Brake Control	10-212
Palm Command Control System	10-214
HSS System.....	10-218
Centralized Pressure Pickup Port.....	10-221
Component Parts of Power Train System.....	10-222
Work Equipment System.....	10-299
Work Equipment Control	10-299
Layout of Tilt Dozer and Power Tilt Pitch Dozer Series	10-301
Component Parts of Work Equipment System	10-302
ICT System	10-322
Layout Drawing of ICT System.....	10-322
System Diagram of ICT Control System.....	10-325
Blade Control System	10-327
Smooth Start System	10-333
Slip Control System.....	10-335
Assist Control System	10-337
Component Parts of ICT System.....	10-339
Radio Control System	10-362
Layout Drawing of Radio Control System.....	10-362
Specifications of Radio Control System.....	10-363
Component Parts of Radio Control System.....	10-364
Undercarriage and Frame	10-371
Main Frame.....	10-371
Suspension	10-373
Track Frame and Idler Cushion	10-376
Work Equipment	10-379
Structure of Front Work Equipment	10-379
CAB Related Parts	10-380
ROPS CAB	10-380
CAB Mount	10-383
20 Standard Value Table	20-1
Table of Contents	20-2
Abbreviation List	20-3
Standard Value Table for Engine	20-9
Standard Value Table for Engine: D65PXI-18	20-9
Standard Value Table for Machine.....	20-14
Standard Value Table for Machine: D65PXI-18	20-14
Machine Posture and Procedures to Measure Performance	20-29
Standard Value Table for Electricity	20-30
Standard Value Table for Electricity	20-30
30 Testing and Adjusting	30-1
Table of Contents	30-2
Precautions Before Work	30-6

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$