

# Shop Manual

BULLDOZER

**D85EX -15E0  
D85PX-15E0**

SERIAL NUMBERS

D85EX-11001      and up  
D85PX- 1201

ccot3

**KOMATSU**



**BULLDOZER**

**D85EX-15E0  
D85PX-15E0**

**Machine model      Serial number**

D85EX-15E0      11001 and up  
D85PX-15E0      1201 and up

---

**00 Index and foreword****Index**

---

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title .....	Form Number
Shop Manual, contents binder, binder label and tabs .....	SEN00060-14
00 Index and foreword .....	SEN00061-14
Index .....	SEN00069-14
Foreword and general information .....	SEN00070-04
01 Specification.....	SEN00062-03
Specification and technical data.....	SEN00071-03
10 Structure, function and maintenance standard .....	SEN00063-04
Engine and cooling system .....	SEN00293-00
Power train, Part 1 .....	SEN00295-01
Power train, Part 2 .....	SEN00297-01
Undercarriage and frame .....	SEN00298-01
Hydraulic system, Part 1 .....	SEN00299-02
Hydraulic system, Part 2 .....	SEN00300-00
Hydraulic system, Part 3 .....	SEN00302-00
Work equipment.....	SEN00305-01
Cab and its attachments .....	SEN00306-00
Electrical system.....	SEN00308-02
20 Standard value table .....	SEN00064-03
Standard service value table .....	SEN00629-03
30 Testing and adjusting .....	SEN00065-05
Testing and adjusting, Part 1.....	SEN00630-04
Testing and adjusting, Part 2.....	SEN00631-03
Testing and adjusting, Part 3.....	SEN00632-03
40 Troubleshooting .....	SEN00066-02
General information on troubleshooting.....	SEN00633-02
Troubleshooting by failure code (Display of code), Part 1 .....	SEN00634-01
Troubleshooting by failure code (Display of code), Part 2 .....	SEN00635-01
Troubleshooting by failure code (Display of code), Part 3 .....	SEN00636-01
Troubleshooting by failure code (Display of code), Part 4 .....	SEN00637-01
Troubleshooting of electrical system (E-mode).....	SEN00638-02
Troubleshooting of hydraulic and mechanical system (H-mode) .....	SEN00639-00
Troubleshooting of engine (S-mode).....	SEN00640-01
50 Disassembly and assembly .....	SEN00067-06
General information on disassembly and assembly .....	SEN01263-05
Engine and cooling system, Part 1 .....	SEN01264-01
Engine and cooling system, Part 2 .....	SEN01265-01
Power train, Part 1 .....	SEN01266-01

Power train, Part 2 .....	SEN01267-01
Undercarriage and frame, Part 1 .....	SEN01268-01
Undercarriage and frame, Part 2 .....	SEN01269-02
Hydraulic system .....	SEN01270-01
Work equipment.....	SEN01271-03
Cab and its attachments .....	SEN01272-01
Electrical system.....	SEN01273-01
 90 Diagrams and drawings .....	SEN00068-04
Hydraulic diagrams and drawings.....	SEN00072-01
Electrical diagrams and drawings .....	SEN00073-03

It's a preview. You can download the full file by  
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$