

Shop Manual

BULLDOZER

D85EX -15R

D85PX -15R

SERIAL NUMBERS

D85EX-20001

D85PX-20001

and up

KOMATSU

BULLDOZER

D85EX-15R

D85PX-15R

Machine model	Serial number
D85EX-15R	20001 and up
D85PX-15R	20001 and up

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN02947-09
00 Index and foreword	SEN02948-09
100 Index	SEN02956-09
200 Foreword and general information	SEN02957-01
01 Specification	SEN02949-01
100 Specification and technical data.....	SEN02958-01
10 Structure, function and maintenance standard.....	SEN02950-02
100 Engine and cooling system	SEN02959-00
201 Power train, Part 1	SEN02960-00
202 Power train, Part 2	SEN02961-00
300 Undercarriage and frame	SEN02962-00
401 Hydraulic system, Part 1	SEN02963-01
402 Hydraulic system, Part 2	SEN02964-00
403 Hydraulic system, Part 3	SEN02965-00
500 Work equipment	SEN02966-01
600 Cab and its attachments	SEN02967-00
700 Electrical system	SEN02968-00
20 Standard value table.....	SEN02951-00
100 Standard service value table	SEN03166-00
30 Testing and adjusting	SEN02952-02
101 Testing and adjusting, Part 1.....	SEN03167-02
102 Testing and adjusting, Part 2.....	SEN03168-01
103 Testing and adjusting, Part 3.....	SEN03169-00
40 Troubleshooting.....	SEN02953-01
100 Failure code table and fuse locations	SEN03170-00
200 General information on troubleshooting.....	SEN03171-01
301 Troubleshooting by failure code (Display of code), Part 1	SEN03172-00
302 Troubleshooting by failure code (Display of code), Part 2	SEN03173-00
303 Troubleshooting by failure code (Display of code), Part 3	SEN03174-00
304 Troubleshooting by failure code (Display of code), Part 4	SEN03175-01
400 Troubleshooting of electrical system (E-mode).....	SEN03176-00
500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN03177-00
600 Troubleshooting of engine (S-mode).....	SEN03178-00
50 Disassembly and assembly.....	SEN02954-05
100 General information on disassembly and assembly	SEN03309-03
201 Engine and cooling system, Part 1	SEN03310-01
202 Engine and cooling system, Part 2	SEN03311-00
301 Power train, Part 1	SEN03312-00
302 Power train, Part 2	SEN03313-01

401 Undercarriage and frame, Part 1	SEN03314-00
402 Undercarriage and frame, Part 2.....	SEN03315-01
500 Hydraulic system	SEN03316-00
600 Work equipment	SEN03317-02
700 Cab and its attachments.....	SEN03318-00
800 Electrical system	SEN03319-00
90 Diagrams and drawings.....	SEN02955-01
100 Hydraulic diagrams and drawings	SEN02969-01
200 Electrical diagrams and drawings.....	SEN02970-00

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$