

Shop Manual

FORKLIFT TRUCK

FB25-12

FB30-12

SERIAL NUMBERS

FB25-100001

FB30-100001

and up

KOMATSU

FORKLIFT TRUCK

FB25-12

FB30-12

Model	Serial number
-------	---------------

FB25-12	100001 and up
---------	---------------

FB30-12	100001 and up
---------	---------------

00 Index and foreword

Table of contents

00 Index and foreword

Table of contents	00-2
Foreword, safety, and general information	00-10
Safety notice	00-10
How to read the shop manual	00-20
Explanation of terms for maintenance standard	00-22
Handling of electric equipment and hydraulic component	00-24
How to read electric wire code	00-33
Precautions when carrying out operation	00-36
Standard tightening torque table	00-39
Conversion table	00-43

01 Specification

Specifications	01-3
Specification dimensions drawing	01-3
Specifications	01-5
Weight table	01-6
Oil and greasing chart	01-7
Table of fuel, coolant, and lubricants	01-8

10 Structure and function

Power train	10-3
Power train components	10-4
Front axle	10-5
Differential	10-9
Travel motor	10-12
Pump motor	10-13
Steering system	10-14
Steering piping diagram	10-14
Orbitrol valve	10-15
Power steering cylinder	10-17
Brake system	10-18
Brake control	10-18
Wheel brake	10-19
Brake master cylinder	10-21
Undercarriage and frame	10-22
Rear axle	10-22
Frame	10-23
Hydraulic system	10-24
Control valve piping diagram (tank to control valve)	10-24
Work equipment piping diagram (control valve to tilt cylinder/lift cylinder)	10-25
Attachment piping diagram	10-26
Work equipment control lever linkage	10-27
Hydraulic tank	10-28
Hydraulic pump	10-29
Control valve	10-30
Work equipment	10-44
Mast	10-44
Electrical system	10-50
Electrical control system	10-50
System component parts	10-66
Monitor system	10-79
KOMTRAX system	10-81
Sensor and switch	10-84

20 Standard value table

Standard value table	20-3
Standard value table	20-3

30 Testing and adjusting

Precautions before work	30-3
Related information on testing and adjusting	30-4
Tools for testing and adjusting	30-4
Power train	30-5
Adjusting accelerator pedal	30-5
Oil level check and changing oil in differential case	30-7
Brake system	30-8
Adjusting parking brake lever	30-8
Adjusting brake pedal	30-9
Adjusting wheel brake	30-11
Bleeding air from brake piping	30-13
Measuring brake performance	30-14
Hydraulic system	30-15
Releasing pressure from hydraulic piping	30-15
Testing steering oil pressure	30-16
Testing work equipment oil pressure	30-17
Checking oil level and change oil in hydraulic tank	30-19
Bleed air from lift cylinder	30-21
Emergency operation when lift lowering cannot be operated	30-22
Work equipment	30-24
Testing and adjusting work equipment lever	30-24
Measurement of amount of hydraulic drift and forward drift of hydraulic cylinder	30-26
Adjusting mast	30-27
Adjusting the lifting height detection sensor	30-30
Adjusting fork carriage	30-33
Electrical system	30-36
Checking battery electrolyte level	30-36
Checking fuse	30-38
Adjusting the charger to the source voltage tap	30-40
Special functions of monitor panel	30-41

40 Troubleshooting

Precautions before work	40-7
Information related to troubleshooting	40-8
Points to remember when troubleshooting	40-8
How to proceed in troubleshooting	40-9
Checks before troubleshooting	40-11
Classification and procedures of troubleshooting	40-12
Symptoms and troubleshooting numbers	40-13
Information described in troubleshooting table	40-15
Locations of fuses	40-17
Relay box arrangement and locations	40-20
Connector list	40-22
Location and removal of battery plug	40-36
Connector connection by pin No.	40-37
T-box and T-adaptor list	40-80
Failure codes table	40-83
Troubleshooting by failure code	40-90
Failure code [7REXKA] DISC) Seat SW	40-90
Failure code [7REXKB] SHORT) Seat SW	40-92
Failure code [989L00] Lock Caution 1	40-94
Failure code [989M00] Lock Caution 2	40-94
Failure code [989N00] Lock Caution 3	40-95

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$