

Shop Manual

FORKLIFT TRUCK

FH35-2

FH40-2

FH45-2

FH50-2

SERIAL NUMBERS 140001 and up

KOMATSU

FORKLIFT TRUCK

FH35-2

FH40-2

FH45-2

FH50-2

Machine model	Serial number
FH35-2	140001 and up
FH40-2	140001 and up
FH45-2	140001 and up
FH50-2	140001 and up

00 Index and foreword

Table of contents

00 Index and foreword

Table of contents	00-2
Foreword, safety, basic information	00-12
How to read the shop manual	00-12
Safety notice for operation	00-14
Precautions to prevent fire	00-23
Action if fire occurs.....	00-25
Precautions for handling hydraulic equipment	00-26
Precautions for disconnection and connection of pipings	00-28
Precautions for handling electrical equipment	00-35
Precautions for handling fuel system equipment	00-37
Precautions for handling intake system equipment	00-38
Precautions for replacing HST controller and monitor panel.....	00-39
Practical use of KOMTRAX.....	00-40
Disconnect and connect push-pull type coupler	00-41
Precautions for disconnection and connection of connectors	00-45
Method for disconnecting and connecting deutsch connector	00-50
Method for disconnecting and connecting slide lock type connector	00-51
Method for disconnecting and connecting connector with lock to pull	00-53
Method for disconnecting and connecting connector with lock to push	00-54
Method for disconnecting and connecting connector with housing to rotate	00-56
How to read electrical wire code	00-57
Explanation of terms for maintenance standard	00-61
Abbreviation list.....	00-63
Standard tightening torque table	00-68
Conversion table	00-75

01 Specification

Specifications.....	01-3
Specification Drawing.....	01-3
Weight Table	01-5
Lubricant List.....	01-6

10 Structure and function

Engine and cooling system.....	10-4
Variable flow turbocharger	10-4
Piping drawing of EGR system	10-8
Circuit diagram of EGR system.....	10-10
EGR valve.....	10-11
EGR cooler	10-13
Layout drawing of KCCV.....	10-15
KCCV ventilator	10-17
CDR valve.....	10-19
KDOC muffler.....	10-22
Cooling system	10-24
Power train	10-26
Power train.....	10-26
Power train system diagram	10-27
PTO.....	10-28
HST piping diagram	10-30
HST pump.....	10-31
HST motor.....	10-43
Axle	10-54
Differential.....	10-55
Steering system.....	10-58
Steering piping diagram (control valve - power steering cylinder)	10-58

Orbitrol valve.....	10-59
Brake system.....	10-61
Brake control.....	10-61
Brake piping diagram.....	10-62
Service brake.....	10-63
Accumulator charge valve.....	10-65
Brake valve.....	10-70
Slack adjuster.....	10-72
Accumulator (for brake).....	10-74
Parking brake.....	10-75
Undercarriage and frame.....	10-76
Rear axle.....	10-76
Frame.....	10-77
Hydraulic system.....	10-78
Control valve piping diagram (tank to control valve).....	10-78
Hydraulic tank piping diagram.....	10-79
Work equipment piping diagram (control valve to tilt cylinder/lift cylinder).....	10-80
Attachment piping diagram.....	10-81
Work equipment control lever linkage.....	10-82
Work equipment and steering pump.....	10-83
Control valve.....	10-91
CLSS.....	10-98
Each function and operation of each valve.....	10-100
Work equipment.....	10-115
Mast.....	10-115
Finger board.....	10-122
Fork.....	10-123
Electrical system.....	10-124
Electrical control system.....	10-124
HST controller.....	10-153
System component parts.....	10-155
Accelerator pedal sensor.....	10-160
EPACS controller.....	10-161
Monitor system.....	10-165
KOMTRAX system.....	10-166
Sensor.....	10-169
Combination switch.....	10-179
Seat switch, seat belt switch (Except European specification (including Turkey)).....	10-180
Flasher.....	10-182
Relay box.....	10-183
20 Standard value table	
Standard value table.....	20-3
Standard value table for engine.....	20-3
Standard value table for machine.....	20-11
30 Testing and adjusting	
Precautions before work.....	30-2-1
Related information on testing and adjusting.....	30-3
Tools for testing and adjusting.....	30-3
Engine and cooling system.....	30-5
Testing engine speed.....	30-5
Testing exhaust gas color.....	30-7
Testing and adjusting valve clearance.....	30-9
Testing compression pressure.....	30-11
Testing blowby pressure.....	30-14
Testing engine oil pressure.....	30-15
Visual check inside of EGR valve.....	30-16

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$