

Shop Manual

MOTOR GRADER

GD555-5

GD655-5

GD675-5

SERIAL NUMBERS

GD555-55001

GD655-55001 and up

GD675-55001

ecot3

KOMATSU

SHOP MANUAL

MOTOR GRADER

GD555-5

GD655-5

GD675-5

Machine model Serial number

GD555-5 55001 and up

GD655-5 55001 and up

GD675-5 55001 and up

00 Index and foreword

Table of contents

Composition of shop manual

00 Index and foreword	
Table of contents	00 - 2
Table of contents	00 - 2
Foreword and general information	00 - 5
Safety notice	00 - 5
How to read the shop manual	00 - 10
Explanation of terms for maintenance standard	00 - 12
Handling of electric equipment and hydraulic components.....	00 - 14
Handling of connectors newly used for engines	00 - 23
How to read electric wire code	00 - 26
Precautions when carrying out work	00 - 29
Method of disassembling and connecting push-pull type coupler.....	00 - 32
Standard tightening torque table.....	00 - 35
List of Abbreviation	00 - 39
Conversion table	00 - 43
01 Specification	
Specification drawing	01 - 3
Specifications.....	01 - 4
Weight table	01 - 10
Table of fuel, coolant and lubricants	01 - 11
10 Structure, function and maintenance standard	
Engine and Cooling.....	10 - 4
Cooling system	10 - 4
Cooling fan pump.....	10 - 6
Power train system	10 - 14
Power train system drawing.....	10 - 14
Power train piping drawing.....	10 - 16
Transmission control.....	10 - 18
Torque converter.....	10 - 20
Transmission.....	10 - 24
Transmission control valve	10 - 46
ECMV.....	10 - 50
Main relief and torque converter relief valve	10 - 58
Front axle.....	10 - 60
Final drive (no differential specification).....	10 - 64
Final drive (differential/ differential lock specification).....	10 - 66
Differential lock solenoid valve.....	10 - 68
Tandem drive	10 - 70
Steering system	10 - 72
Steering piping diagram	10 - 72
Priority valve	10 - 74
Steering valve	10 - 80
Brake system	10 - 88
Brake hydraulic piping diagram.....	10 - 88
Brake valve	10 - 89
Slack adjuster	10 - 96
Accumulator (for brake)	10 - 98
Charge valve.....	10 - 99

Wheel brake.....	10 -100
Parking brake and bank control valve.....	10 -102
Parking brake.....	10 -104
Undercarriage frame.....	10 -106
Frame.....	10 -106
Tire.....	10 -108
Hydraulic system.....	10 -110
Hydraulic system.....	10 -110
Work equipment hydraulic piping diagram.....	10 -114
Work equipment control.....	10 -118
Hydraulic tank.....	10 -120
Main pump.....	10 -122
Power train pump.....	10 -134
Control valve.....	10 -136
CLSS.....	10 -146
Functions and operation by valve.....	10 -150
Hydraulic cylinder.....	10 -160
Swivel joint.....	10 -162
Pilot check valve.....	10 -164
Accumulator (for blade).....	10 -172
Work equipment.....	10 -174
Circle and drawbar.....	10 -174
Blade.....	10 -176
Lifter.....	10 -178
Circle rotation motor.....	10 -180
Circle rotation gear.....	10 -182
Cab.....	10 -184
Cab.....	10 -184
Electrical system.....	10 -186
Machine monitor.....	10 -186
Automatic shift control system.....	10 -190
Transmission controller.....	10 -198
Engine controller.....	10 -202
KOMTRAX system.....	10 -206
Starting engine circuit.....	10 -208
Stopping engine circuit.....	10 -210
Preheating circuit.....	10 -212
Sensor.....	10 -214
Engine power mode select circuit.....	10 -226
Cooling fan control function.....	10 -228
20 Standard value table	
Standard value table.....	20- 3
Standard value table for engine.....	20- 3
Standard value table for machine.....	20- 5
30 Testing and adjusting	
Precautions before work.....	30- 3-1
Tools for testing, adjusting, and troubleshooting.....	30- 4
Tools for testing, adjusting, and troubleshooting.....	30- 4
Engine and cooling system.....	30- 10
Testing engine speed.....	30- 10
Testing intake air pressure (boost pressure).....	30- 12
Testing exhaust gas temperature.....	30- 14

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$