

Shop Manual

MOTOR GRADER

GD655-6

GD675-6

SERIAL NUMBERS

GD655-60001

GD675-60001

and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-21
Foreword, Safety, Basic Information	00-27
How to Read the Shop Manual	00-27
Safety Notice for Operation	00-29
Precautions to Prevent Fire	00-37
Procedures If Fire Occurs	00-39
Precautions When You Discard Waste Materials	00-40
Procedures for Exhaust Gas Regulations	00-41
Precautions for DEF	00-42
Store DEF	00-43
Precautions When You Handle Hydraulic Equipment	00-44
Precautions When You Disconnect and Connect Pipings	00-47
Precautions When You Handle Electrical Equipment	00-54
Precautions When You Handle Fuel System Equipment	00-56
Precautions When You Handle Intake System Equipment	00-57
Practical Use of KOMTRAX	00-58
Disconnect and Connect Push-Pull Type Coupler	00-59
Precautions for Disconnection and Connection of Connectors	00-63
Disconnect and Connect Deutsch Connector	00-67
How to Disconnect and Connect Slide Lock Type Connector	00-68
Disconnect and Connect Connector with Lock to Pull	00-70
Disconnect and Connect Connector with Lock to Push	00-71
Disconnect and Connect Connector with Housing to Rotate	00-73
How to Read the Codes for Electric Cable	00-74
Explanation of Terms for Maintenance Standard	00-78
Standard Tightening Torque Table	00-81
Conversion Table	00-88
01 Specification	01-1
Table of Contents	01-2
Abbreviation List	01-3
Specifications	01-9
Specification Drawing	01-9
Specifications	01-13
Weight Table	01-25
Table of Fuel, Coolant, and Lubricants	01-27
10 Structure and Function	10-1
Table of Contents	10-2
Abbreviation List	10-6
Urea SCR System	10-12
Layout Drawing of Urea SCR System	10-12
Urea SCR System Diagram	10-15
Function of Urea SCR System	10-16
Component Parts of Urea SCR System	10-39
Boot-up System	10-49
Layout Drawing of Boot-up System	10-49
System Operating Lamp System	10-50
Battery Disconnect Switch	10-53
Preheating System	10-56
Engine System	10-58
Layout Drawing of Engine System	10-58
Engine Control System	10-61
Engine Power Mode Selector System	10-64
Automatic Idle Stop System	10-65
Component Parts of Engine System	10-66
Cooling System	10-85

Layout Drawing of Cooling System	10-85
Cooling Fan Control System	10-88
Component Parts of Cooling System	10-91
Control System	10-100
Layout Drawing of Control System	10-100
Machine Monitor System.....	10-103
Rearview Monitor System	10-105
KOMTRAX System	10-106
Component Parts of Control System	10-108
Hydraulic System	10-161
Layout Drawing of Hydraulic System.....	10-161
Hydraulic System Diagram.....	10-163
CLSS	10-166
Component Parts of Hydraulic System.....	10-169
Power Train System.....	10-209
Layout Drawing of Power Train System	10-209
Operation of Power Train System	10-211
Automatic Shift Control System.....	10-212
Transmission Control System.....	10-213
Transmission Gear Shift Control System.....	10-217
Transmission Protection Function	10-219
Component Parts of Power Train System.....	10-220
Work Equipment System.....	10-273
Layout Drawing of Work Equipment System	10-273
Function of Work Equipment System	10-276
Component Parts of Work Equipment System	10-277
Steering System.....	10-286
Layout Drawing of Steering System	10-286
Function of Steering System	10-289
Component Parts of Steering System	10-290
Brake System.....	10-305
Layout Drawing of Brake System	10-305
Component Parts of Brake System	10-307
Undercarriage and Frame	10-318
Frame and Center Hinge Pin.....	10-318
Tires.....	10-320
Work Equipment	10-322
Structure of Circle and Drawbar	10-322
Function of Circle and Drawbar.....	10-323
Structure of Blade	10-324
Function of Blade	10-325
Structure of Lifter	10-326
Function of Lifter	10-327
CAB Related Parts.....	10-328
ROPS CAB	10-328
20 Standard Value Table	20-1
Table of Contents	20-2
Abbreviation List	20-3
Standard Value Table for Engine	20-9
Standard Value Table for Engine: GD655-6.....	20-9
Standard Value Table for Engine: GD675-6.....	20-13
Standard Value Table for Machine.....	20-17
Standard Value Table for Machine: GD655-6	20-17
Standard Value Table for Machine: GD675-6	20-35
Machine Posture and Procedures to Measure Performance	20-53
Standard Value Table for Electricity.....	20-54
Standard Value Table for Electricity.....	20-54
30 Testing and Adjusting	30-1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$