

Shop Manual

HYDRAULIC
EXCAVATOR

HB215LC-3

SERIAL NUMBERS 70001 and up

Hybrid

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-22
Foreword, Safety, Basic Information	00-25
How to Read the Shop Manual	00-25
Safety Notice for Operation	00-27
Precautions Particularly for Hybrid Machines	00-35
Precautions to Prevent Fire	00-36
Procedures If Fire Occurs	00-38
Precautions for Disposing of Waste Materials	00-39
Procedures for Exhaust Gas Regulations	00-40
Precautions for DEF	00-41
Store DEF	00-42
Precautions When You Handle Hydraulic Equipment	00-43
Precautions When You Disconnect and Connect Pipings	00-46
Precautions When You Handle Electrical Equipment	00-53
Precautions for Maintenance of Hybrid System	00-55
Precautions Against High Voltage and High Temperature	00-56
Precautions for Normal Check and Maintenance	00-57
Precautions for the Machine Not to be Tipped over and for Hybrid Components Not to be Damaged	00-58
Precautions for Machine Not to be Put in Water	00-59
In Cold Weather	00-60
Precautions When You Handle Fuel System Equipment	00-61
Precautions When You Handle Intake System Equipment	00-62
Practical Use of KOMTRAX	00-63
Disconnect and Connect Push-Pull Type Coupler	00-64
Precautions for Disconnection and Connection of Connectors	00-68
How to Disconnect and Connect Deutsch Connector	00-72
How to Disconnect and Connect Slide Lock Type Connector	00-73
How to Disconnect and Connect Connector with Lock to Pull	00-75
How to Disconnect and Connect Connector with Lock to Push	00-76
How to Disconnect and Connect Connector with Housing to Rotate	00-78
How to Read the Codes for Electric Cable	00-79
Explanation of Terms for Maintenance Standard	00-83
Standard Tightening Torque Table	00-86
Conversion Table	00-93
01 Specifications	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Working Range Drawings	01-5
Specifications	01-6
Weight Table	01-10
Fuel, Coolant, Lubricants (For North America)	01-12
10 Structure and Function	10-1
Table of Contents	10-2
Urea SCR System	10-6
Layout Drawing of Urea SCR System	10-6
Urea SCR System Diagram	10-11
Function of Urea SCR System	10-12
Component Parts of Urea SCR System	10-23
Boot-up System	10-32
Layout Drawing of Boot-up System	10-32
System Operating Lamp System	10-33
Battery Disconnect Switch	10-34
Engine System	10-35

Layout Drawing of Engine System	10-35
Engine Control System	10-37
Auto-Deceleration System.....	10-40
Engine Automatic Warm-up System.....	10-42
Overheat Prevention System	10-44
Turbocharger Protection System.....	10-48
Automatic Idle Stop System	10-50
Component Parts of Engine System	10-54
Cooling System.....	10-72
Layout Drawing of Cooling System	10-72
Fan Speed Control System of Fan Clutch	10-74
Engine Output Control System of Fan Clutch	10-76
Component Parts of Cooling System	10-79
Hybrid System.....	10-80
Layout Drawing of Hybrid System	10-80
System Diagram of Hybrid System.....	10-81
Structure of Hybrid System	10-82
Hybrid Protection System.....	10-83
Cooling System of Hybrid Components.....	10-85
Interlock System of Hybrid Components	10-86
Worker Protection System for When You Disassemble Hybrid Components	10-87
Component Parts of Hybrid System	10-89
Control System	10-96
Layout Drawing of Control System	10-96
Machine Monitor System.....	10-99
KomVision System.....	10-101
KOMTRAX System	10-106
Component Parts of Control System	10-107
Hydraulic System	10-152
Layout Drawing of Hydraulic System.....	10-152
CLSS	10-157
Engine and Pump Combined Control System	10-179
Pump and Valve Control System.....	10-185
Component Parts of Hydraulic System.....	10-188
Work Equipment System.....	10-275
Layout Drawing of Work Equipment System	10-275
One-Touch Power Maximizing System	10-279
PPC Lock System	10-281
Work Equipment and Travel Automatic Lock System	10-282
Attachment Oil Flow Adjuster System	10-284
Tool Control System.....	10-286
Component Parts of Work Equipment System	10-288
Swing System	10-319
Layout Drawing of Swing System.....	10-319
Swing Control System Diagram	10-322
Component Parts of Swing System.....	10-326
Travel System	10-330
Layout Drawing of Travel System.....	10-330
System Diagram of Travel Control System.....	10-334
Component Parts of Travel System.....	10-336
Undercarriage and Frame	10-358
Layout Drawing of Undercarriage.....	10-358
Work Equipment	10-360
Structure of Work Equipment	10-360
Function of Work Equipment.....	10-361
Work Equipment Clearance Adjustment Shim.....	10-362
Bucket Clearance Adjustment Shim	10-363
CAB Related Parts.....	10-364

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$