

Shop Manual

DUMP TRUCK

HD465-7E0

SERIAL NUMBERS 11497 and up

Extreme Cold Area Specification (- 40 degree C)

ecot3

KOMATSU

DUMP TRUCK

HD465-7E0

Machine model Serial number

HD465-7E0

11497 and up

00 Index and foreword

Table of contents

00 Index and foreword	
Table of contents.....	00-2
Foreword and general information	00-15
Safety notice.....	00-15
How to read the shop manual.....	00-20
Explanation of terms for maintenance standard	00-22
Handling of electric equipment and hydraulic component	00-24
Handling of connectors newly used for engines	00-33
How to read electric wire code	00-36
Precautions when carrying out operation	00-39
Method of disassembling and connecting push-pull type coupler	00-42
Standard tightening torque table	00-45
Conversion table.....	00-49
01 Specification	
Specification and technical data.....	01-3
Specification drawing.....	01-3
Specifications	01-4
Weight table.....	01-7
Fuel, coolant and lubricants.....	01-8
10 Structure, function and maintenance standard	
Engine and cooling system	10-4
Radiator, torque converter oil cooler, after cooler, work equipment oil cooler, fuel cooler	10-4
Fuel system	10-6
Brake oil cooler.....	10-7
Output shaft.....	10-8
Power train.....	10-10
Power train skeleton	10-10
Drive shaft	10-12
Torque converter and transmission hydraulic piping	10-14
Brake cooling oil control valve (BCV)	10-16
Torque converter	10-18
Torque converter valve.....	10-25
Transmission	10-27
Transmission control valve.....	10-43
ECMV	10-44
Axle.....	10-52
Differential	10-54
Final drive.....	10-55
Wheels.....	10-56
Steering system	10-58
Steering column.....	10-58
Steering linkage.....	10-59
Brake system	10-62
Brake piping.....	10-62
Brake valve.....	10-64
Secondary brake valve	10-67
Relay valve	10-68
Front brake off valve.....	10-69
Accumulator charge valve	10-70
Accumulator.....	10-74
Slack adjuster	10-75

Brake	10-77
Parking brake solenoid valve	10-81
Undercarriage and frame	10-82
Suspension.....	10-82
Suspension cylinder	10-84
Rear axle support.....	10-90
Hydraulic system.....	10-92
Steering and hoist hydraulic piping	10-92
Dump body control	10-94
Hydraulic tank.....	10-95
Steering valve.....	10-96
Crossover relief valve.....	10-100
Steering cylinder.....	10-101
Steering control valve.....	10-102
Hoist valve	10-108
Dump control valve (EPC valve)	10-114
Hoist cylinder	10-116
Hydraulic pump	10-117
Work equipment (Body)	10-122
Auto greasing system.....	10-122
Cab and its attachments	10-144
ROPS cab	10-144
Rear view monitor	10-145
Electrical system.....	10-150
Machine monitor system	10-150
Automatic shift control system.....	10-208
Transmission controller	10-212
External power supply heater.....	10-226
Automatic emergency steering system	10-227
Automatic suspension system.....	10-230
Retarder control system	10-233
Battery disconnecter switch.....	10-244
Dump control lever	10-248
Payload meter II (Card type)	10-252
VHMS controller related	10-282
ASR system (If equipped)	10-306
Sensors, switches	10-312
20 Standard value table	
Standard service value table.....	20-3
Standard value table for engine	20-3
Standard value table for machine.....	20-5
30 Testing and adjusting	
Related information on testing and adjusting.....	30-4
Tools for testing, adjusting, and troubleshooting.....	30-4
Sketch of special tool	30-10
Engine and cooling system.....	30-11
Testing engine speed.....	30-11
Testing air supply pressure (boost pressure).....	30-12
Testing exhaust temperature.....	30-13
Testing exhaust gas color	30-15
Adjustment of valve clearance	30-17
Testing of compression pressure	30-19
Testing blowby pressure	30-22
Testing engine oil pressure	30-23

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$