

# Shop Manual

DUMP TRUCK

**HD465-7E0**

Extreme Cold Area Specification (-40 degree C)

SERIAL NUMBERS 11497 and up

**ecot3**

**KOMATSU**



# **DUMP TRUCK**

## **HD465-7E0**

<b>Machine model</b>	<b>Serial number</b>
HD465-7E0	11497 and up

---

## **00 Index and foreword**

---

---

## Table of contents

00 Index and foreword	
Table of contents.....	00-2
Foreword and general information .....	00-15
Safety notice.....	00-15
How to read the shop manual.....	00-20
Explanation of terms for maintenance standard .....	00-22
Handling of electric equipment and hydraulic component .....	00-24
Handling of connectors newly used for engines .....	00-33
How to read electric wire code .....	00-36
Precautions when carrying out operation .....	00-39
Method of disassembling and connecting push-pull type coupler .....	00-42
Standard tightening torque table .....	00-45
Conversion table.....	00-49
01 Specification	
Specification and technical data.....	01-3
Specification drawing.....	01-3
Specifications .....	01-4
Weight table.....	01-7
Fuel, coolant and lubricants.....	01-8
10 Structure, function and maintenance standard	
Engine and cooling system .....	10-4
Radiator, torque converter oil cooler, after cooler, work equipment oil cooler, fuel cooler .....	10-4
Fuel system .....	10-6
Brake oil cooler.....	10-7
Output shaft.....	10-8
Power train.....	10-10
Power train skeleton .....	10-10
Drive shaft .....	10-12
Torque converter and transmission hydraulic piping .....	10-14
Brake cooling oil control valve (BCV) .....	10-16
Torque converter .....	10-18
Torque converter valve.....	10-25
Transmission .....	10-27
Transmission control valve.....	10-43
ECMV .....	10-44
Axle.....	10-52
Differential .....	10-54
Final drive.....	10-55
Wheels.....	10-56
Steering system .....	10-58
Steering column.....	10-58
Steering linkage.....	10-59
Brake system .....	10-62
Brake piping.....	10-62
Brake valve.....	10-64
Secondary brake valve .....	10-67
Relay valve .....	10-68
Front brake off valve.....	10-69
Accumulator charge valve .....	10-70
Accumulator.....	10-74
Slack adjuster .....	10-75

Brake .....	10-77
Parking brake solenoid valve .....	10-81
Undercarriage and frame .....	10-82
Suspension.....	10-82
Suspension cylinder .....	10-84
Rear axle support.....	10-90
Hydraulic system.....	10-92
Steering and hoist hydraulic piping .....	10-92
Dump body control .....	10-94
Hydraulic tank.....	10-95
Steering valve.....	10-96
Crossover relief valve.....	10-100
Steering cylinder.....	10-101
Steering control valve.....	10-102
Hoist valve .....	10-108
Dump control valve (EPC valve) .....	10-114
Hoist cylinder .....	10-116
Hydraulic pump .....	10-117
Work equipment (Body) .....	10-122
Auto greasing system.....	10-122
Cab and its attachments .....	10-144
ROPS cab .....	10-144
Rear view monitor .....	10-145
Electrical system.....	10-150
Machine monitor system .....	10-150
Automatic shift control system.....	10-208
Transmission controller .....	10-212
External power supply heater.....	10-226
Automatic emergency steering system .....	10-227
Automatic suspension system.....	10-230
Retarder control system .....	10-233
Battery disconnecter switch.....	10-244
Dump control lever .....	10-248
Payload meter II (Card type) .....	10-252
VHMS controller related .....	10-282
ASR system (If equipped) .....	10-306
Mobile communication terminal (if equipped).....	10-312
Sensors, switches .....	10-315
20 Standard value table	
Standard service value table.....	20-3
Standard value table for engine .....	20-3
Standard value table for machine.....	20-5
30 Testing and adjusting	
Related information on testing and adjusting.....	30-4
Tools for testing, adjusting, and troubleshooting.....	30-4
Sketch of special tool .....	30-10
Engine and cooling system.....	30-11
Testing engine speed.....	30-11
Testing air supply pressure (boost pressure).....	30-12
Testing exhaust temperature.....	30-13
Testing exhaust gas color .....	30-15
Adjustment of valve clearance .....	30-17
Testing of compression pressure .....	30-19
Testing blowby pressure .....	30-22

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$