

Shop Manual

DUMP TRUCK

HD465-7E0

HD605-7E0

SERIAL NUMBERS

HD465- 10001-10037

HD465- 10101 and up

HD605- 8001-8032

HD605- 10101 and up

ecot3

KOMATSU

DUMP TRUCK

HD465-7E0

HD605-7E0

Machine model	Serial number
HD465-7E0	10001 – 10037
HD465-7E0	10101 and up
HD605-7E0	8001 – 8032
HD605-7E0	10101 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN01081-28
00 Index and foreword	SEN01082-28
Index	SEN01083-28
Foreword and general information	SEN01084-07
01 Specification	SEN01085-04
Specification and technical data	SEN01086-04
10 Structure, function and maintenance standard	SEN01087-13
Engine and cooling system	SEN01088-02
Power train, Part 1	SEN01089-04
Power train, Part 2	SEN01090-01
Steering system	SEN01091-02
Brake system	SEN01092-02
Undercarriage and frame	SEN01093-04
Hydraulic system	SEN01094-03
Work equipment (Body)	SEN04679-01
Cab and its attachments	SEN01095-03
Electrical system, Part 1	SEN01096-05
Electrical system, Part 2	SEN01097-05
Electrical system, Part 3	SEN01098-02
Electrical system, Part 4	SEN01099-07
Electrical system, Part 5	SEN06912-00
20 Standard value table	SEN01100-04
Standard service value table	SEN01649-04
30 Testing and adjusting	SEN01101-12
Testing and adjusting, Part 1	SEN01650-08
Testing and adjusting, Part 2	SEN01651-09
Testing and adjusting, Part 3	SEN01652-06
Testing and adjusting, Part 4	SEN01653-02
Testing and adjusting, Part 5	SEN01654-05
Testing and adjusting, Part 6	SEN06913-01
40 Troubleshooting	SEN01102-12
General information on troubleshooting	SEN01661-05
Failure code table and fuse locations	SEN01660-05
Troubleshooting by failure code, Part 1	SEN01662-04
Troubleshooting by failure code, Part 2	SEN01663-05
Troubleshooting by failure code, Part 3	SEN01664-05
Troubleshooting by failure code, Part 4	SEN01665-05
Troubleshooting by failure code, Part 5	SEN01666-06

Troubleshooting by failure code, Part 6	SEN01667-06
Troubleshooting by failure code, Part 7	SEN01668-03
Troubleshooting by failure code, Part 8	SEN01669-03
Troubleshooting by failure code, Part 9	SEN01670-03
Troubleshooting of electrical system (E-mode)	SEN01671-07
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN01672-01
Troubleshooting of engine (S-mode)	SEN01673-03
50 Disassembly and assembly	SEN01103-13
General information on disassembly and assembly	SEN02483-06
Engine and cooling system	SEN02484-09
Power train, Part 1	SEN02485-03
Power train, Part 2	SEN02486-03
Steering system	SEN02487-02
Brake system	SEN02488-03
Undercarriage and frame	SEN02489-06
Hydraulic system	SEN02490-02
Body	SEN02491-04
Cab and its attachments	SEN02492-04
Electrical system, Part 1	SEN02493-03
Electrical system, Part 2	SEN06914-00
90 Diagrams and drawings	SEN01104-14
Hydraulic diagrams and drawings	SEN01105-05
Electrical diagrams and drawings	SEN01106-12

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$