

Shop Manual

DUMP TRUCK

HD465-7R

For Cold Area(-40 degree C)

SERIAL NUMBERS 16132 and up

KOMATSU

DUMP TRUCK

HD465-7R

Machine model	Serial number
HD465-7R	16132 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN06285-03
00 Index and foreword	SEN06286-03
Index	SEN06287-03 ●
Foreword and general information	SEN06288-00
01 Specification	SEN06289-00
Specification and technical data	SEN06290-00
10 Structure, function and maintenance standard	SEN06291-02
Engine and cooling system	SEN06292-00
Power train, Part 1	SEN06293-00
Power train, Part 2	SEN06294-00
Steering system	SEN06295-00
Brake system	SEN06296-00
Undercarriage and frame	SEN06297-00
Hydraulic system	SEN06298-00
Work equipment (Body)	SEN06299-00
Cab and its attachments	SEN06300-01 ●
Electrical system, Part 1	SEN06301-00
Electrical system, Part 2	SEN06302-01
Electrical system, Part 3	SEN06303-00
Electrical system, Part 4	SEN06304-01
20 Standard value table	SEN06305-00
Standard service value table	SEN06306-00
30 Testing and adjusting	SEN06307-03
Testing and adjusting, Part 1	SEN06308-02 ●
Testing and adjusting, Part 2	SEN06309-03 ●
Testing and adjusting, Part 3	SEN06310-01 ●
Testing and adjusting, Part 4	SEN06311-00
Testing and adjusting, Part 5	SEN06312-01 ●
40 Troubleshooting	SEN06313-01
Failure code table and fuse locations	SEN06314-01

General information on troubleshooting	SEN06315-01
Troubleshooting by failure code, Part 1	SEN06316-01
Troubleshooting by failure code, Part 2	SEN06317-01
Troubleshooting by failure code, Part 3	SEN06318-01
Troubleshooting by failure code, Part 4	SEN06319-01
Troubleshooting by failure code, Part 5	SEN06320-01
Troubleshooting by failure code, Part 6	SEN06321-00
Troubleshooting by failure code, Part 7	SEN06322-00
Troubleshooting by failure code, Part 8	SEN06323-00
Troubleshooting by failure code, Part 9	SEN06324-00
Troubleshooting of electrical system (E-mode)	SEN06325-01
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN06326-00
Troubleshooting of engine (S-mode)	SEN06327-01
50 Disassembly and assembly	SEN06328-02
General information on disassembly and assembly	SEN06329-02 ●
Engine and cooling system	SEN06330-01 ●
Power train, Part 1	SEN06331-01
Power train, Part 2	SEN06332-01
Steering system	SEN06333-00
Brake system	SEN06334-01
Undercarriage and frame	SEN06335-01
Hydraulic system	SEN06336-00
Body	SEN06337-00
Cab and its attachments	SEN06338-00
Electrical system	SEN06339-00
90 Diagrams and drawings	SEN06340-01
Hydraulic diagrams and drawings	SEN06341-01
Electrical diagrams and drawings	SEN06342-00

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$