

# Shop Manual

DUMP TRUCK

**HD465-7R**

Extreme Cold Area Specification (-40 degree C)

SERIAL NUMBERS 16132 and up

**KOMATSU**



---

# DUMP TRUCK

## HD465-7R

**Machine model      Serial number**

HD465-7R                      16132 and up

---

# 00 Index and foreword

## Index

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN06285-07
00 Index and foreword	SEN06286-07
Index	SEN06287-07
Foreword and general information	SEN06288-01
01 Specification	SEN06289-00
Specification and technical data	SEN06290-00
10 Structure, function and maintenance standard	SEN06291-04
Engine and cooling system	SEN06292-00
Power train, Part 1	SEN06293-00
Power train, Part 2	SEN06294-00
Steering system	SEN06295-01
Brake system	SEN06296-00
Undercarriage and frame	SEN06297-01
Hydraulic system	SEN06298-00
Work equipment (Body)	SEN06299-01
Cab and its attachments	SEN06300-01
Electrical system, Part 1	SEN06301-00
Electrical system, Part 2	SEN06302-01
Electrical system, Part 3	SEN06303-00
Electrical system, Part 4	SEN06304-02
Electrical system, Part 5	SEN06918-00
20 Standard value table	SEN06305-00
Standard service value table	SEN06306-00
30 Testing and adjusting	SEN06307-06
Testing and adjusting, Part 1	SEN06308-03
Testing and adjusting, Part 2	SEN06309-04
Testing and adjusting, Part 3	SEN06310-02
Testing and adjusting, Part 4	SEN06311-00
Testing and adjusting, Part 5	SEN06312-01
Testing and adjusting, Part 6	SEN06919-01
40 Troubleshooting	SEN06313-04
Failure code table and fuse locations	SEN06314-01
General information on troubleshooting	SEN06315-01
Troubleshooting by failure code, Part 1	SEN06316-01
Troubleshooting by failure code, Part 2	SEN06317-01
Troubleshooting by failure code, Part 3	SEN06318-01
Troubleshooting by failure code, Part 4	SEN06319-01
Troubleshooting by failure code, Part 5	SEN06320-01

---

Troubleshooting by failure code, Part 6	SEN06321-00
Troubleshooting by failure code, Part 7	SEN06322-00
Troubleshooting by failure code, Part 8	SEN06323-01
Troubleshooting by failure code, Part 9	SEN06324-00
Troubleshooting of electrical system (E-mode)	SEN06325-03
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN06326-00
Troubleshooting of engine (S-mode)	SEN06327-01
50 Disassembly and assembly	SEN06328-04
General information on disassembly and assembly	SEN06329-02
Engine and cooling system	SEN06330-02
Power train, Part 1	SEN06331-01
Power train, Part 2	SEN06332-01
Steering system	SEN06333-00
Brake system	SEN06334-01
Undercarriage and frame	SEN06335-02
Hydraulic system	SEN06336-00
Body	SEN06337-01
Cab and its attachments	SEN06338-00
Electrical system, Part 1	SEN06339-01
Electrical system, Part 2	SEN06920-00
90 Diagrams and drawings	SEN06340-03
Hydraulic diagrams and drawings	SEN06341-01
Electrical diagrams and drawings	SEN06342-02

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$