

Shop Manual

DUMP TRUCK

HD465-7R

HD605-7R

SERIAL NUMBERS

HD465- 15001

HD605- 15001

and up

KOMATSU

DUMP TRUCK

HD465-7R HD605-7R

Machine model	Serial number
HD465-7R	15001 and up
HD605-7R	15001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN02283-21
00 Index and foreword	SEN02284-21
Index	SEN02285-21
Foreword and general information	SEN02286-05
01 Specification	SEN02287-03
Specification and technical data	SEN02289-03
10 Structure, function and maintenance standard	SEN02290-08
Engine and cooling system	SEN02291-01
Power train, Part 1	SEN02292-02
Power train, Part 2	SEN02293-01
Steering system	SEN02294-02
Brake system	SEN02295-01
Undercarriage and frame	SEN02296-02
Hydraulic system	SEN02297-01
Work equipment (Body)	SEN04680-01
Cab and its attachments	SEN02298-02
Electrical system, Part 1	SEN02299-03
Electrical system, Part 2	SEN02300-02
Electrical system, Part 3	SEN02301-01
Electrical system, Part 4	SEN02302-04
Electrical system, Part 5	SEN06915-00
20 Standard value table	SEN02308-02
Standard service value table	SEN02527-02
30 Testing and adjusting	SEN02309-10
Testing and adjusting, Part 1	SEN02528-06
Testing and adjusting, Part 2	SEN02529-06
Testing and adjusting, Part 3	SEN02530-03
Testing and adjusting, Part 4	SEN02531-02
Testing and adjusting, Part 5	SEN02532-04
Testing and adjusting, Part 6	SEN06916-01
40 Troubleshooting	SEN02310-08
Failure code table and fuse locations	SEN02717-03
General information on troubleshooting	SEN02718-03
Troubleshooting by failure code, Part 1	SEN02533-03
Troubleshooting by failure code, Part 2	SEN02534-03
Troubleshooting by failure code, Part 3	SEN02535-03
Troubleshooting by failure code, Part 4	SEN02536-03

Troubleshooting by failure code, Part 5	SEN02537-03
Troubleshooting by failure code, Part 6	SEN02538-04
Troubleshooting by failure code, Part 7	SEN02539-01
Troubleshooting by failure code, Part 8	SEN02540-04
Troubleshooting by failure code, Part 9	SEN02541-02
Troubleshooting of electrical system (E-mode)	SEN02542-04
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN02543-02
Troubleshooting of engine (S-mode)	SEN02544-03
50 Disassembly and assembly	SEN02311-08
General information on disassembly and assembly	SEN02726-05
Engine and cooling system	SEN02727-06
Power train, Part 1	SEN02728-03
Power train, Part 2	SEN02729-03
Steering system	SEN02730-02
Brake system	SEN02731-03
Undercarriage and frame	SEN02732-04
Hydraulic system	SEN02733-02
Body	SEN02734-03
Cab and its attachments	SEN02735-03
Electrical system, Part 1	SEN02736-03
Electrical system, Part 2	SEN06917-00
90 Diagrams and drawings	SEN02312-09
Hydraulic diagrams and drawings	SEN02313-03
Electrical diagrams and drawings	SEN02314-08

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$