

Shop Manual

DUMP TRUCK

**HD465-8
HD605-8**

SERIAL NUMBERS

HD465-8 30001 and up
HD605-8 30001 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-22
Foreword, Safety, Basic Information.....	00-25
How to Read the Shop Manual	00-25
Safety Notice for Operation	00-27
Precautions to Prevent Fire.....	00-35
Procedures If Fire Occurs	00-37
Precautions When You Dispose of Waste Materials	00-38
Engine Technology to Conform Exhaust Gas Emission	00-39
Precautions When You Handle Hydraulic Equipment	00-40
Precautions When You Disconnect and Connect Pipings.....	00-43
Precautions When You Handle Electrical Equipment	00-49
Precautions When You Handle Fuel System Equipment	00-51
Precautions When You Handle Intake System Equipment	00-52
Practical Use of KOMTRAX	00-53
Disconnect and Connect Push-Pull Type Coupler	00-54
Precautions for Disconnection and Connection of Connectors	00-58
How to Disconnect and Connect Deutsch Connector	00-62
How to Disconnect and Connect Slide Lock Type Connector	00-63
How to Disconnect and Connect Connector with Lock to Pull	00-65
How to Disconnect and Connect Connector with Lock to Push	00-66
How to Disconnect and Connect Connector with Housing to Rotate	00-68
How to Read the Codes for Electric Cable	00-69
Explanation of Terms for Maintenance Standard	00-73
Standard Tightening Torque Table.....	00-76
Conversion Table	00-83
01 Specifications	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing.....	01-3
Specifications.....	01-7
Weight Table	01-17
Fuel, Coolant, Lubricant	01-19
10 Structure and Function	10-1
Table of Contents	10-2
Boot-up System	10-6
Layout Drawing of Boot-up System	10-6
Layout Drawing of Boot-up System (Machine with Emergency Engine Stop Switch).....	10-7
System Operating Lamp System.....	10-9
Battery Disconnect Switch.....	10-10
Engine Shutdown Secondary Switch.....	10-13
Engine System	10-15
Layout Drawing of Engine System	10-15
Engine Control System	10-18
Engine Power Mode Selector System (Machine with Engine Power Mode Selector System).....	10-22
Automatic Idle Stop System	10-23
Component Parts of Engine System	10-25
Cooling System	10-46
Layout Drawing of Cooling System	10-46
Radiator Fan Control System	10-48
Component Parts of Cooling System	10-50
Control System	10-64
Layout Drawing of Control System	10-64
Layout Drawing of Control System (Machine with Mobile Communication Terminal).....	10-66
Retarder and Hoist Control System.....	10-67
Machine Monitor System	10-69

Rearview Monitor System	10-71
KOMTRAX Plus System	10-72
Payload Meter System	10-78
Machine Lock-out System	10-90
Drowsiness Detection System.....	10-92
Component Parts of Control System	10-97
Hydraulic System	10-174
Layout Drawing of Hydraulic System.....	10-174
Component Parts of Hydraulic System.....	10-175
Power Train System	10-196
Layout Drawing of Power Train System	10-196
Transmission Control System.....	10-198
Gear Shift Control System.....	10-204
Direction Control System	10-208
Komatsu Traction Control System (KTCS)	10-209
Travel Speed Limitation System.....	10-211
Component Parts of Power Train System.....	10-215
Work Equipment System	10-261
Work Equipment Control	10-261
Hoist Control	10-262
Component Parts of Work Equipment System	10-265
Steering System.....	10-271
Layout Drawing of Steering System	10-271
Function of Steering System	10-272
Steering Column	10-273
Steering Linkage	10-274
Component Parts of Steering System	10-275
Brake System.....	10-293
Layout Drawing of Brake System	10-293
Retarder Control	10-295
ARSC System	10-296
Component Parts of Brake System	10-297
ABS	10-319
Auto-Greasing System	10-327
Layout Drawing of Auto-Greasing System.....	10-327
Auto-Greasing System Diagram.....	10-330
Function of Auto-Greasing System.....	10-331
Auto-Greasing System	10-332
Undercarriage and Frame	10-338
Suspension	10-338
Front Suspension	10-340
Rear Suspension	10-342
Suspension Cylinder	10-344
Work Equipment	10-346
Structure of Work Equipment	10-346
Function of Work Equipment	10-347
CAB Related Parts	10-348
ROPS CAB	10-348
CAB Mount	10-349
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Engine: HD465-8	20-3
Standard Value Table for Engine: HD605-8	20-7
Standard Value Table for Machine.....	20-10
Standard Value Table for Machine: HD465-8.....	20-10
Standard Value Table for Machine: HD605-8.....	20-28
Machine Posture and Procedures to Measure Performance	20-46

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$