

# Shop Manual

DUMP TRUCK

***HD465-8E0***  
***HD605-8E0***

SERIAL NUMBERS

HD465-35001 and up  
HD605-35001 and up

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-22
Foreword, Safety, Basic Information .....	00-25
How to Read the Shop Manual .....	00-25
Safety Notice for Operation .....	00-27
Precautions to Prevent Fire .....	00-35
Procedures If Fire Occurs .....	00-37
Precautions When You Dispose of Waste Materials .....	00-38
Engine Technology to Conform Exhaust Gas Emission .....	00-39
Precautions When You Handle Hydraulic Equipment .....	00-40
Precautions When You Disconnect and Connect Pippings .....	00-43
Precautions When You Handle Electrical Equipment .....	00-50
Precautions When You Handle Fuel System Equipment .....	00-52
Precautions When You Handle Intake System Equipment .....	00-53
Practical Use of KOMTRAX .....	00-54
Disconnect and Connect Push-Pull Type Coupler .....	00-55
Precautions for Disconnection and Connection of Connectors .....	00-59
How to Disconnect and Connect Deutsch Connector .....	00-63
How to Disconnect and Connect Slide Lock Type Connector .....	00-64
How to Disconnect and Connect Connector with Lock to Pull .....	00-66
How to Disconnect and Connect Connector with Lock to Push .....	00-67
How to Disconnect and Connect Connector with Housing to Rotate .....	00-69
How to Read the Codes for Electric Cable .....	00-70
Explanation of Terms for Maintenance Standard .....	00-74
Standard Tightening Torque Table .....	00-77
Conversion Table .....	00-84
01 Specifications .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Specifications .....	01-7
Weight Table .....	01-17
Fuel, Coolant, Lubricant .....	01-19
10 Structure and Function .....	10-1
Table of Contents .....	10-2
NOx Control System .....	10-6
Function of NOx Control System .....	10-6
Boot-up System .....	10-9
Layout Drawing of Boot-up System .....	10-9
Layout Drawing of Boot-up System (Machine with Emergency Engine Stop Switch) .....	10-10
System Operating Lamp System .....	10-12
Battery Disconnect Switch .....	10-13
Engine Shutdown Secondary Switch .....	10-16
Engine System .....	10-18
Layout Drawing of Engine System .....	10-18
Engine Control System .....	10-21
Engine Power Mode Selector System (Machine with Engine Power Mode Selector System) .....	10-25
Automatic Idle Stop System .....	10-26
Component Parts of Engine System .....	10-28
Cooling System .....	10-49
Layout Drawing of Cooling System .....	10-49
Radiator Fan Control System .....	10-51
Component Parts of Cooling System .....	10-53
Control System .....	10-67
Layout Drawing of Control System .....	10-67
Layout Drawing of Control System (Machine with Mobile Communication Terminal) .....	10-69

Retarder and Hoist Control System.....	10-70
Machine Monitor System.....	10-72
Rearview Monitor System .....	10-74
KOMTRAX Plus System .....	10-75
Payload Meter System .....	10-81
Machine Lock-out System.....	10-93
Drowsiness Detection System.....	10-95
Component Parts of Control System .....	10-100
Hydraulic System .....	10-177
Layout Drawing of Hydraulic System.....	10-177
Component Parts of Hydraulic System.....	10-178
Power Train System.....	10-199
Layout Drawing of Power Train System .....	10-199
Transmission Control System.....	10-201
Gear Shift Control System.....	10-207
Direction Control System .....	10-211
Komatsu Traction Control System (KTCS) .....	10-212
Travel Speed Limitation System.....	10-214
Component Parts of Power Train System.....	10-218
Work Equipment System.....	10-264
Work Equipment Control .....	10-264
Hoist Control .....	10-265
Component Parts of Work Equipment System .....	10-268
Steering System.....	10-274
Layout Drawing of Steering System .....	10-274
Function of Steering System .....	10-275
Steering Column .....	10-276
Steering Linkage.....	10-277
Component Parts of Steering System .....	10-278
Brake System.....	10-296
Layout Drawing of Brake System .....	10-296
Retarder Control .....	10-298
ARSC System.....	10-299
Component Parts of Brake System .....	10-300
ABS .....	10-322
Auto-Greasing System .....	10-330
Layout Drawing of Auto-Greasing System.....	10-330
Auto-Greasing System Diagram.....	10-333
Function of Auto-Greasing System.....	10-334
Auto-Greasing System .....	10-335
Undercarriage and Frame .....	10-341
Suspension .....	10-341
Front Suspension.....	10-343
Rear Suspension .....	10-345
Suspension Cylinder .....	10-347
Work Equipment .....	10-349
Structure of Work Equipment .....	10-349
Function of Work Equipment .....	10-350
CAB Related Parts.....	10-351
ROPS CAB .....	10-351
CAB Mount .....	10-352
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Engine .....	20-3
Standard Value Table for Engine: HD465-8E0.....	20-3
Standard Value Table for Engine: HD605-8E0.....	20-6
Standard Value Table for Machine.....	20-9
Standard Value Table for Machine: HD465-8E0 .....	20-9

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$