

Shop Manual

ARTICULATED
DUMP TRUCK

HM300-2

SERIAL NUMBERS 2001 and up

ecot3

KOMATSU

ARTICULATED DUMP TRUCK

HM300-2

Machine model	Serial number
HM300-2	2001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00237-16
00 Index and foreword	SEN00323-16
Index	SEN00324-16 ●
Foreword and general information	SEN00325-04
01 Specification	SEN00326-01
Specification and technical data	SEN00327-01
10 Structure, function and maintenance standard	SEN00328-03
Engine and cooling system	SEN00329-01
Power train, Part 1	SEN00330-01
Power train, Part 2	SEN00417-01
Steering system	SEN00331-01
Brake system	SEN00332-02
Undercarriage and frame	SEN00333-01
Hydraulic system	SEN00334-02
Cab and its attachments	SEN00335-01
Electrical system, Part 1	SEN00336-01
Electrical system, Part 2	SEN00418-02
Electrical system, Part 3	SEN04841-00
Electrical system, Part 4	SEN00419-02
20 Standard value table	SEN00340-03
Standard service value table	SEN00416-03
30 Testing and adjusting	SEN00341-09
Testing and adjusting, Part 1	SEN00667-07 ●
Testing and adjusting, Part 2	SEN00668-08 ●
Testing and adjusting, Part 3	SEN00669-04 ●
40 Troubleshooting	SEN00342-07
Failure code table and fuse locations	SEN03229-01
General information on troubleshooting	SEN00670-05
Troubleshooting by failure code, Part 1	SEN00671-03
Troubleshooting by failure code, Part 2	SEN00672-04

Troubleshooting by failure code, Part 3	SEN00673-04 ●
Troubleshooting by failure code, Part 4	SEN00674-03
Troubleshooting of electrical system (E-mode)	SEN00675-04
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN00676-02
Troubleshooting of engine (S-mode)	SEN00677-02
50 Disassembly and assembly	SEN00343-07
General information on disassembly and assembly	SEN00683-05
Engine and cooling system, Part 1	SEN00684-04
Engine and cooling system, Part 2	SEN00685-04
Power train, Part 1	SEN00686-04 ●
Power train, Part 2	SEN00688-03
Power train, Part 3	SEN00689-02
Power train, Part 4	SEN00690-04 ●
Power train, Part 5	SEN00691-03 ●
Undercarriage and frame	SEN00692-04
Hydraulic system	SEN00693-02
Body	SEN00694-02
Cab and its attachments	SEN00695-03 ●
Electrical system	SEN00696-02
90 Diagrams and drawings	SEN00337-08
Hydraulic diagrams and drawings	SEN00338-02
Electrical diagrams and drawings	SEN00339-08

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$