

# Shop Manual

ARTICULATED  
DUMP TRUCK

***HM300-3***

SERIAL NUMBERS 3001 and up

**KOMATSU**



# ARTICULATED DUMP TRUCK

## HM300-3

Model                      Serial Number

HM300-3                  3001 and up

---

## 00 Index and foreword

---

---

**Index**

00 Index and foreword .....	00-1
Index .....	00-2
Foreword, safety and general information .....	00-17
Important safety notice .....	00-17
How to read the shop manual .....	00-24
Explanation of terms for maintenance standard .....	00-26
Handling equipment of fuel system devices .....	00-28
Handling of intake system parts .....	00-29
Handling of hydraulic equipment .....	00-30
Method of disconnecting and connecting of push-pull type coupler .....	00-32
Handling of electrical equipment .....	00-35
How to read electric wire code .....	00-43
Precautions when performing operation .....	00-46
Practical use of KOMTRAX .....	00-51
Standard tightening torque table .....	00-52
List of abbreviation .....	00-58
Conversion table .....	00-63
01 Specification .....	01-1
Table of contents .....	01-2
Specifications .....	01-3
Specification drawing .....	01-3
Specifications .....	01-5
Weight table .....	01-11
Table of fuel, coolant, and lubricants .....	01-12
10 Structure and function .....	10-1
Table of contents .....	10-2
Engine and cooling system .....	10-4
Engine related parts .....	10-4
Output shaft .....	10-6
KVTG .....	10-7
EGR system piping drawing .....	10-13
EGR system circuit diagram .....	10-15
EGR valve .....	10-17
EGR cooler .....	10-19
KCCV layout drawing .....	10-21
KCCV ventilator .....	10-23
KDPF .....	10-25
Cooling system .....	10-31
Radiator fan pump .....	10-33
Aftercooler fan motor .....	10-43
Radiator fan motor .....	10-54
Oil cooler bypass valve .....	10-60
Power train .....	10-61
Power train system .....	10-61
Drive shaft .....	10-63
Torque converter and transmission hydraulic piping .....	10-64
Torque converter .....	10-66
Transmission .....	10-72
Transmission control valve .....	10-96
Forward and reverse clutch ECMV and gear speed clutch ECMV .....	10-99
Lockup clutch ECMV .....	10-106
Differential lock clutch ECMV .....	10-110
Main relief valve, torque converter relief valve, and main flow selector valve .....	10-114
Axle .....	10-120
Differential .....	10-123
Final drive .....	10-127
Steering system .....	10-130

Layout of steering devices .....	10-130
Steering column .....	10-131
Flow amplifier valve .....	10-132
Steering valve .....	10-136
Emergency steering pump .....	10-141
Brake system .....	10-143
Layout of brake parts .....	10-143
Parking brake solenoid and accumulator charge valve .....	10-145
Accumulator .....	10-151
Shut off solenoid valve .....	10-152
Brake valve .....	10-153
Proportional pressure reducing valve .....	10-158
Slack adjuster .....	10-160
Brake .....	10-164
Brake system tank .....	10-167
Parking brake .....	10-168
Undercarriage and frame .....	10-171
Suspension .....	10-171
Suspension cylinder .....	10-177
Oscillation hitch .....	10-179
Hydraulic system .....	10-181
Hydraulic component layout .....	10-181
Dump body control .....	10-182
Hydraulic tank .....	10-183
Steering and hoist control pump .....	10-184
Hoist valve .....	10-196
Steering pump selector solenoid valve .....	10-202
Hoist and radiator fan direction selector solenoid valve .....	10-203
Dump EPC valve .....	10-204
Brake cooling oil control valve .....	10-206
Front brake cooling relief valve .....	10-207
Cab and its attachments .....	10-208
ROPS cab .....	10-208
Cab tilt .....	10-209
Electrical system .....	10-210
Electrical control system .....	10-210
Machine monitor system .....	10-240
Rear view monitor system .....	10-264
KOMTRAX system .....	10-268
System component parts .....	10-272
Sensor .....	10-297
20 Standard value tables .....	20-1
Table of contents .....	20-2
Standard service value table .....	20-3
Standard value table for engine .....	20-3
Standard value table for machine .....	20-5
30 Testing and adjusting .....	30-1
Table of contents .....	30-2
Precautions before work .....	30-3-1
Related information on testing and adjusting .....	30-4
Tools for testing and adjusting .....	30-4
Sketch of tools for testing and adjusting .....	30-10
Engine and cooling system .....	30-13
Testing engine speed .....	30-13
Testing boost pressure .....	30-14
Testing exhaust gas temperature .....	30-16
Testing exhaust gas color .....	30-18
Test mass air flow and temperature sensor .....	30-19-1
Testing and adjusting valve clearance .....	30-20
Testing compression pressure .....	30-22

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$