

Shop Manual

ARTICULATED
DUMP TRUCK

HM400-3M0

SERIAL NUMBERS 5001 and up

ecot3

KOMATSU

ARTICULATED DUMP TRUCK

HM400-3M0

Model Serial Number

HM400-3M0 5001 and up

00 Index and foreword

Index

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-16
Important safety notice	00-16
How to read the shop manual	00-23
Explanation of terms for maintenance standard	00-25
Handling equipment of fuel system devices	00-27
Handling of intake system parts	00-28
Handling of hydraulic equipment	00-29
Method of disconnecting and connecting of push-pull type coupler	00-31
Handling of electrical equipment	00-34
How to read electric wire code	00-42
Precautions when performing operation	00-45
Practical use of KOMTRAX	00-50
Standard tightening torque table	00-51
List of abbreviation	00-57
Conversion table	00-62
01 Specification	01-1
Table of contents	01-2
Specifications	01-3
Specification drawing	01-3
Specifications	01-5
Weight table	01-11
Table of fuel, coolant, and lubricants	01-12
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-4
Engine related parts	10-4
Output shaft	10-5
Turbocharger	10-6
EGR system layout drawing	10-8
EGR system circuit diagram	10-9
EGR valve	10-11
Bypass valve	10-13
Venturi system	10-15
EGR cooler	10-17
Muffler	10-19
Cooling system	10-20
Radiator fan pump	10-22
Aftercooler fan motor	10-30
Radiator fan motor	10-41
Center brake cooling remote motor	10-50
Center brake cooling remote pump	10-54
Oil cooler bypass valve	10-55
Power train	10-56
Power train system	10-56
Drive shaft	10-58
Torque converter and transmission hydraulic piping	10-59
Torque converter	10-60
Transmission	10-66
Transmission control valve	10-91
Forward and reverse clutch ECMV and gear speed clutch ECMV	10-94
Lockup clutch ECMV	10-101
Differential lock clutch ECMV	10-105
Main relief valve, torque converter relief valve, and main flow selector valve	10-109
Axle	10-115
Differential	10-118
Final drive	10-122

Steering system.....	10-125
Layout of steering devices	10-125
Steering column.....	10-126
Flow amplifier valve.....	10-127
Steering valve.....	10-131
Emergency steering pump	10-137
Emergency steering motor	10-138
Brake system	10-139
Layout of brake parts.....	10-139
Parking brake solenoid and accumulator charge valve	10-141
Accumulator	10-147
Shut off solenoid valve.....	10-148
Brake valve	10-149
Proportional pressure reducing valve	10-154
Slack adjuster.....	10-156
Brake	10-160
Brake system tank	10-163
Parking brake	10-164
Undercarriage and frame.....	10-167
Suspension	10-167
Suspension cylinder.....	10-171
Oscillation hitch	10-174
Hydraulic system	10-175
Hydraulic component layout.....	10-175
Dump body control.....	10-177
Hydraulic tank.....	10-178
Steering and hoist pump.....	10-179
Hoist valve	10-190
Steering pump selector solenoid valve	10-196
Dump EPC valve	10-197
Center brake cooling remote motor.....	10-199
Front brake cooling relief valve	10-208
Center brake cooling relief valve.....	10-209
Cab and its attachments.....	10-210
ROPS cab.....	10-210
Cab tilt	10-211
Electrical system	10-212
Electrical control system	10-212
Machine monitor system.....	10-241
Rear view monitor system.....	10-264
KOMTRAX system.....	10-268
System component parts	10-271
Sensor	10-297
20 Standard value tables.....	20-1
Table of contents	20-2
Standard service value table.....	20-3
Standard value table for engine	20-3
Standard value table for machine	20-5
30 Testing and adjusting	30-1
Table of contents	30-2
Precautions before work	30-2-2
Related information on testing and adjusting	30-3
Tools for testing and adjusting	30-3
Sketch of tools for testing and adjusting	30-8
Engine and cooling system.....	30-9
Testing engine speed	30-9
Testing boost pressure	30-10
Testing exhaust gas temperature.....	30-12
Testing exhaust gas color	30-14
Adjusting valve clearance	30-16

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$