

# Shop Manual

ARTICULATED  
DUMP TRUCK

***HM400-5E0***

SERIAL NUMBERS 20001 and up

**KOMATSU**



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-21
FOREWORD, SAFETY, BASIC INFORMATION .....	00-27
HOW TO READ THE SHOP MANUAL.....	00-27
SAFETY NOTICE FOR OPERATION.....	00-29
PRECAUTIONS TO PREVENT FIRE.....	00-37
ACTIONS IF FIRE OCCURS .....	00-39
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....	00-40
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-41
PRECAUTIONS FOR DEF.....	00-42
STORE AdBlue/DEF .....	00-43
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-44
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-47
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-54
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-56
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-57
PRACTICAL USE OF KOMTRAX .....	00-58
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-59
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-63
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-67
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-68
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-71
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-73
HOW TO READ ELECTRICAL WIRE CODE .....	00-74
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-78
STANDARD TIGHTENING TORQUE TABLE.....	00-81
CONVERSION TABLE .....	00-88
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATIONS .....	01-9
SPECIFICATION DRAWING .....	01-9
SPECIFICATIONS .....	01-11
WEIGHT TABLE .....	01-17
TABLE OF FUEL, COOLANT, AND LUBRICANTS .....	01-19
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
ABBREVIATION LIST .....	10-6
UREA SCR SYSTEM.....	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM .....	10-12
UREA SCR SYSTEM DIAGRAM .....	10-14
FUNCTION OF UREA SCR SYSTEM.....	10-15
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-25
BOOT-UP SYSTEM .....	10-34
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-34
SYSTEM OPERATING LAMP SYSTEM .....	10-36
BATTERY DISCONNECT SWITCH .....	10-37
ENGINE SYSTEM .....	10-39
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-39
AUTOMATIC IDLE STOP SYSTEM .....	10-42
COMPONENT PARTS OF ENGINE SYSTEM .....	10-44
COOLING SYSTEM.....	10-62
LAYOUT DRAWING OF COOLING SYSTEM .....	10-62
RADIATOR FAN CONTROL SYSTEM .....	10-64

AFTERCOOLER FAN CONTROL SYSTEM .....	10-66
COMPONENT PARTS OF COOLING SYSTEM.....	10-68
CONTROL SYSTEM.....	10-95
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-95
RETARDER AND HOIST CONTROL SYSTEM .....	10-96
MACHINE MONITOR SYSTEM .....	10-97
REARVIEW MONITOR SYSTEM.....	10-99
KOMTRAX SYSTEM.....	10-100
PAYLOAD METER SYSTEM.....	10-101
COMPONENT PARTS OF CONTROL SYSTEM.....	10-105
HYDRAULIC SYSTEM.....	10-157
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-157
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-158
POWER TRAIN SYSTEM .....	10-177
LAYOUT DRAWING OF POWER TRAIN SYSTEM.....	10-177
TRANSMISSION CONTROL SYSTEM .....	10-179
GEAR SHIFT CONTROL SYSTEM.....	10-184
SHIFT HOLD SYSTEM .....	10-187
DIRECTION CONTROL SYSTEM .....	10-188
KOMATSU TRACTION CONTROL SYSTEM (KTCS).....	10-189
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-192
WORK EQUIPMENT SYSTEM .....	10-247
WORK EQUIPMENT CONTROL .....	10-247
HOIST CONTROL .....	10-248
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-250
STEERING SYSTEM.....	10-258
LAYOUT DRAWING OF STEERING SYSTEM .....	10-258
FUNCTION OF STEERING SYSTEM.....	10-259
STEERING COLUMN .....	10-260
COMPONENT PARTS OF STEERING SYSTEM.....	10-261
BRAKE SYSTEM.....	10-273
LAYOUT DRAWING OF BRAKE SYSTEM .....	10-273
RETARDER CONTROL .....	10-275
PARKING BRAKE INTERLOCK FUNCTION.....	10-278
ARAC SYSTEM .....	10-279
COMPONENT PARTS OF BRAKE SYSTEM.....	10-280
UNDERCARRIAGE AND FRAME.....	10-305
FRONT SUSPENSION .....	10-305
CENTER AND REAR SUSPENSIONS .....	10-307
SUSPENSION CYLINDER.....	10-309
OSCILLATION HITCH.....	10-312
WORK EQUIPMENT.....	10-314
STRUCTURE OF WORK EQUIPMENT .....	10-314
FUNCTION OF WORK EQUIPMENT .....	10-315
CAB AND ITS ATTACHMENTS .....	10-316
ROPS CAB .....	10-316
CAB TILT .....	10-317
20 STANDARD VALUE TABLE .....	20-1
CONTENTS .....	20-2
ABBREVIATION LIST .....	20-3
STANDARD VALUE TABLE FOR ENGINE .....	20-9
STANDARD VALUE TABLE FOR ENGINE: HM400-5E0 .....	20-9
STANDARD VALUE TABLE FOR MACHINE.....	20-13
STANDARD VALUE TABLE FOR MACHINE: HM400-5E0.....	20-13
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE .....	20-27
STANDARD VALUE TABLE FOR ELECTRICAL .....	20-28
STANDARD VALUE TABLE FOR ELECTRICITY .....	20-28
30 TESTING AND ADJUSTING.....	30-1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$