

# Shop Manual

HYDRAULIC  
EXCAVATOR

***PC1250 -11***  
***PC1250LC -11***  
***PC1250SP-11***

SERIAL NUMBERS      PC1250- 50001  
                                 PC1250LC- 50001      and up  
                                 PC1250SP- 50001

**KOMATSU**



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-20
FOREWORD, SAFETY, BASIC INFORMATION .....	00-26
HOW TO READ THE SHOP MANUAL.....	00-26
SAFETY NOTICE FOR OPERATION.....	00-28
PRECAUTIONS TO PREVENT FIRE.....	00-36
ACTIONS IF FIRE OCCURS .....	00-38
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....	00-39
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-40
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-43
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-49
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-51
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-52
PRACTICAL USE OF KOMTRAX .....	00-53
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-54
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-58
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-62
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-63
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-65
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-66
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-68
HOW TO READ ELECTRICAL WIRE CODE .....	00-69
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-73
STANDARD TIGHTENING TORQUE TABLE.....	00-76
CONVERSION TABLE .....	00-83
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATIONS .....	01-9
SPECIFICATION DRAWING .....	01-9
WORKING RANGE DRAWINGS .....	01-12
SPECIFICATIONS .....	01-15
WEIGHT TABLE .....	01-24
FUEL, COOLANT, LUBRICANTS (FOR NORTH AMERICA) .....	01-30
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
ABBREVIATION LIST .....	10-6
BOOT-UP SYSTEM .....	10-12
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-12
SYSTEM OPERATING LAMP SYSTEM .....	10-13
BATTERY DISCONNECT SWITCH .....	10-14
ENGINE SYSTEM .....	10-15
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-15
ENGINE CONTROL SYSTEM .....	10-18
AUTO-DECELERATION SYSTEM.....	10-21
AUTOMATIC LOW IDLE SYSTEM.....	10-23
ENGINE AUTOMATIC WARM-UP SYSTEM.....	10-25
OVERHEAT PREVENTION SYSTEM.....	10-27
TURBOCHARGER PROTECTION SYSTEM.....	10-28
AUTOMATIC IDLE STOP SYSTEM .....	10-29
COMPONENT PARTS OF ENGINE SYSTEM .....	10-32
COOLING SYSTEM.....	10-51
LAYOUT DRAWING OF COOLING SYSTEM .....	10-51
FAN SPEED CONTROL SYSTEM OF HYDRAULIC FAN.....	10-53
ENGINE OUTPUT CONTROL SYSTEM OF HYDRAULIC FAN.....	10-55

FAN REVERSE ROTATION SYSTEM OF HYDRAULIC FAN.....	10-57
COMPONENT PARTS OF COOLING SYSTEM.....	10-58
CONTROL SYSTEM.....	10-80
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-80
MACHINE MONITOR SYSTEM .....	10-82
KomVision SYSTEM .....	10-83
KOMTRAX Plus SYSTEM.....	10-88
COMPONENT PARTS OF CONTROL SYSTEM.....	10-93
HYDRAULIC SYSTEM.....	10-145
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-145
OLSS .....	10-148
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-161
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-165
WORK EQUIPMENT SYSTEM .....	10-238
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-238
MACHINE PUSH-UP SYSTEM.....	10-244
HEAVY LIFT SYSTEM .....	10-246
BOOM SHOCKLESS CONTROL SYSTEM .....	10-249
PPC LOCK SYSTEM .....	10-251
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM .....	10-252
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-254
SWING SYSTEM .....	10-263
LAYOUT DRAWING OF SWING SYSTEM .....	10-263
SWING CONTROL SYSTEM DIAGRAM .....	10-266
SWING PRIORITY SYSTEM DIAGRAM.....	10-270
SWING COMPENSATION SYSTEM DIAGRAM .....	10-273
COMPONENT PARTS OF SWING SYSTEM.....	10-274
TRAVEL SYSTEM.....	10-289
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-289
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-293
COMPONENT PARTS OF TRAVEL SYSTEM .....	10-296
PNEUMATIC SYSTEM.....	10-315
LAYOUT DRAWING OF PNEUMATIC SYSTEM.....	10-315
PNEUMATIC SYSTEM DIAGRAM .....	10-316
COMPONENT PARTS OF PNEUMATIC SYSTEM .....	10-317
LIFTING SYSTEM .....	10-322
HYDRAULICALLY OPERATED STAIRWAY SYSTEM .....	10-322
COMPONENT PARTS OF LIFTING SYSTEM .....	10-325
UNDERCARRIAGE AND FRAME.....	10-328
LAYOUT DRAWING OF UNDERCARRIAGE .....	10-328
WORK EQUIPMENT.....	10-330
STRUCTURE OF WORK EQUIPMENT .....	10-330
FUNCTION OF WORK EQUIPMENT .....	10-330
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-331
BUCKET CLEARANCE ADJUSTMENT SHIM .....	10-331
CAB AND ITS ATTACHMENTS .....	10-332
CAB .....	10-332
CAB MOUNT .....	10-333
CAB TIPPING STOPPER .....	10-334
20 STANDARD VALUE TABLE .....	20-1
CONTENTS .....	20-2
ABBREVIATION LIST .....	20-3
STANDARD VALUE TABLE FOR ENGINE .....	20-9
STANDARD VALUE TABLE FOR ENGINE: PC1250-11.....	20-9
STANDARD VALUE TABLE FOR ENGINE: PC1250SP-11 .....	20-14
STANDARD VALUE TABLE FOR ENGINE: PC1250LC-11 .....	20-19
STANDARD VALUE TABLE FOR MACHINE.....	20-24
STANDARD VALUE TABLE FOR MACHINE: PC1250-11 .....	20-24

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$