

Shop Manual

HYDRAULIC
EXCAVATOR

PC1250 -11R
PC1250SP-11R

SERIAL NUMBERS

PC1250- 50090
PC1250SP- 50090

and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-17
Foreword, Safety, Basic Information.....	00-20
How to Read the Shop Manual	00-20
Safety Notice for Operation	00-22
Precautions to Prevent Fire.....	00-30
Procedures If Fire Occurs	00-32
Precautions When You Discard Waste Materials.....	00-33
Precautions When You Handle Hydraulic Equipment	00-34
Precautions When You Disconnect and Connect Pipings.....	00-37
Precautions When You Handle Electrical Equipment	00-43
Precautions When You Handle Fuel System Equipment	00-45
Precautions When You Handle Intake System Equipment	00-46
Practical Use of KOMTRAX	00-47
Disconnect and Connect Push-Pull Type Coupler	00-48
Precautions for Disconnection and Connection of Connectors	00-52
How to Disconnect and Connect Deutsch Connector	00-56
How to Disconnect and Connect Slide Lock Type Connector	00-57
How to Disconnect and Connect Connector with Lock to Pull	00-59
How to Disconnect and Connect Connector with Lock to Push	00-60
How to Disconnect and Connect Connector with Housing to Rotate	00-62
How to Read the Codes for Electric Cable	00-63
Explanation of Terms for Maintenance Standard	00-67
Standard Tightening Torque Table.....	00-70
Conversion Table	00-77
01 Specifications	01-1
Table of Contents	01-2
Specifications.....	01-3
Specification Drawing.....	01-3
Working Range Drawings.....	01-6
Specifications.....	01-9
Weight Table	01-19
Fuel, Coolant and Lubricant to Meet Ambient Temperature.....	01-24
10 Structure and Function	10-1
Table of Contents	10-2
Boot-up System	10-5
Layout Drawing of Boot-up System	10-5
System Operating Lamp System.....	10-6
Battery Disconnect Switch.....	10-8
Engine System.....	10-9
Layout Drawing of Engine System	10-9
Engine Control System	10-11
Auto-Deceleration System.....	10-14
Automatic Low Idle System	10-16
Engine Automatic Warm-up System.....	10-18
Overheat Prevention System	10-20
Turbocharger Protection System.....	10-21
Automatic Idle Stop System	10-22
Component Parts of Engine System	10-25
Cooling System.....	10-28
Layout Drawing of Cooling System	10-28
Fan Speed Control System of Hydraulic Fan	10-30
Engine Output Control System of Hydraulic Fan	10-32
Fan Reverse Rotation System of Hydraulic Fan	10-34
Component Parts of Cooling System	10-35
Control System	10-56

Layout Drawing of Control System	10-56
Machine Monitor System.....	10-58
KomVision System	10-59
KOMTRAX Plus System	10-63
Component Parts of Control System	10-67
Hydraulic System	10-112
Layout Drawing of Hydraulic System.....	10-112
OLSS	10-115
Engine and Pump Combined Control System	10-127
Component Parts of Hydraulic System.....	10-131
Work Equipment System	10-201
Layout Drawing of Work Equipment System	10-201
Machine Push-up System	10-207
Heavy Lift System	10-209
Boom Shockless Control System	10-212
PPC Lock System	10-214
Work Equipment and Travel Automatic Lock System	10-215
Component Parts of Work Equipment System	10-217
Swing System	10-229
Layout Drawing of Swing System.....	10-229
Swing Control System Diagram	10-232
Swing Priority System Diagram.....	10-236
Swing Compensation System Diagram	10-239
Component Parts of Swing System.....	10-240
Travel System	10-254
Layout Drawing of Travel System.....	10-254
System Diagram of Travel Control System.....	10-258
Component Parts of Travel System.....	10-261
Lifting System	10-278
Hydraulically Operated Stairway System.....	10-278
Component Parts of Lifting System	10-281
Undercarriage and Frame	10-284
Layout Drawing of Undercarriage.....	10-284
Work Equipment	10-285
Structure of Work Equipment	10-285
Function of Work Equipment	10-286
Work Equipment Clearance Adjustment Shim.....	10-287
Bucket Clearance Adjustment Shim	10-288
CAB Related Parts	10-289
CAB	10-289
CAB Mount	10-290
CAB Tipping Stopper	10-291
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Engine: PC1250-11R	20-3
Standard Value Table for Engine: PC1250SP-11R	20-8
Standard Value Table for Machine.....	20-13
Standard Value Table for Machine: PC1250-11R.....	20-13
Standard Value Table for Machine: PC1250-11R (Loading Shovel Specification).....	20-27
Standard Value Table for Machine: PC1250SP-11R.....	20-42
Machine Posture and Procedures to Measure Performance	20-56
Machine Posture and Procedures to Measure Performance (Loading Shovel Specification).....	20-60
30 Testing and Adjusting	30-1
Table of Contents	30-2
Precautions Before Work	30-6
Related Information on Testing and Adjusting	30-7
Tools for Testing and Adjusting.....	30-7

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$