

# Shop Manual

HYDRAULIC  
EXCAVATOR

**PC1250 -11R**  
**PC1250SP-11R**

SERIAL NUMBERS PC1250- 50121 and up  
PC1250SP- 50121

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-17
Foreword, Safety, Basic Information .....	00-20
How to Read the Shop Manual .....	00-20
Safety Notice for Operation .....	00-22
Precautions to Prevent Fire .....	00-30
Procedures If Fire Occurs .....	00-32
Precautions When You Discard Waste Materials .....	00-33
Precautions When You Handle Hydraulic Equipment .....	00-34
Precautions When You Disconnect and Connect Pipings .....	00-37
Precautions When You Handle Electrical Equipment .....	00-43
Precautions When You Handle Fuel System Equipment .....	00-45
Precautions When You Handle Intake System Equipment .....	00-46
Practical Use of KOMTRAX .....	00-47
Disconnect and Connect Push-Pull Type Coupler .....	00-48
Precautions for Disconnection and Connection of Connectors .....	00-52
How to Disconnect and Connect Deutsch Connector .....	00-56
How to Disconnect and Connect Slide Lock Type Connector .....	00-57
How to Disconnect and Connect Connector with Lock to Pull .....	00-59
How to Disconnect and Connect Connector with Lock to Push .....	00-60
How to Disconnect and Connect Connector with Housing to Rotate .....	00-62
How to Read the Codes for Electric Cable .....	00-63
Explanation of Terms for Maintenance Standard .....	00-67
Standard Tightening Torque Table .....	00-70
Conversion Table .....	00-77
01 Specifications .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Working Range Drawings .....	01-6
Specifications .....	01-9
Weight Table .....	01-19
Fuel, Coolant, Lubricant .....	01-24
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Boot-up System .....	10-5
Layout Drawing of Boot-up System .....	10-5
System Operating Lamp System .....	10-6
Battery Disconnect Switch .....	10-8
Engine System .....	10-9
Layout Drawing of Engine System .....	10-9
Engine Control System .....	10-11
Auto-Deceleration System .....	10-14
Automatic Low Idle System .....	10-16
Engine Automatic Warm-up System .....	10-18
Overheat Prevention System .....	10-20
Turbocharger Protection System .....	10-21
Automatic Idle Stop System .....	10-22
Component Parts of Engine System .....	10-25
Cooling System .....	10-28
Layout Drawing of Cooling System .....	10-28
Fan Speed Control System of Hydraulic Fan .....	10-30
Engine Output Control System of Hydraulic Fan .....	10-32
Fan Reverse Rotation System of Hydraulic Fan .....	10-34
Component Parts of Cooling System .....	10-35
Control System .....	10-56

Layout Drawing of Control System .....	10-56
Machine Monitor System.....	10-58
KomVision System.....	10-59
KOMTRAX Plus System .....	10-63
Component Parts of Control System .....	10-67
Hydraulic System .....	10-112
Layout Drawing of Hydraulic System.....	10-112
OLSS .....	10-115
Engine and Pump Combined Control System .....	10-127
Component Parts of Hydraulic System.....	10-131
Work Equipment System.....	10-201
Layout Drawing of Work Equipment System .....	10-201
Machine Push-up System .....	10-207
Heavy Lift System .....	10-209
Boom Shockless Control System .....	10-212
PPC Lock System .....	10-214
Work Equipment and Travel Automatic Lock System .....	10-215
Component Parts of Work Equipment System .....	10-217
Swing System .....	10-229
Layout Drawing of Swing System.....	10-229
Swing Control System Diagram .....	10-232
Swing Priority System Diagram.....	10-236
Swing Compensation System Diagram .....	10-239
Component Parts of Swing System.....	10-240
Travel System .....	10-254
Layout Drawing of Travel System.....	10-254
System Diagram of Travel Control System.....	10-258
Component Parts of Travel System.....	10-261
Lifting System .....	10-278
Hydraulically Operated Stairway System.....	10-278
Component Parts of Lifting System .....	10-281
Undercarriage and Frame .....	10-284
Layout Drawing of Undercarriage.....	10-284
Work Equipment .....	10-285
Structure of Work Equipment .....	10-285
Function of Work Equipment.....	10-286
Work Equipment Clearance Adjustment Shim.....	10-287
Bucket Clearance Adjustment Shim .....	10-288
CAB Related Parts.....	10-289
CAB .....	10-289
CAB Mount .....	10-290
CAB Tipping Stopper .....	10-291
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Engine .....	20-3
Standard Value Table for Engine: PC1250-11R.....	20-3
Standard Value Table for Engine: PC1250SP-11R .....	20-8
Standard Value Table for Machine.....	20-13
Standard Value Table for Machine: PC1250-11R.....	20-13
Standard Value Table for Machine: PC1250-11R (Loading Shovel Specification).....	20-27
Standard Value Table for Machine: PC1250SP-11R.....	20-42
Machine Posture and Procedures to Measure Performance .....	20-56
Machine Posture and Procedures to Measure Performance (Loading Shovel Specification).....	20-60
30 Testing and Adjusting .....	30-1
Table of Contents .....	30-2
Precautions Before Work .....	30-6
Related Information on Testing and Adjusting .....	30-7
Tools for Testing and Adjusting.....	30-7

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$