

Shop Manual

HYDRAULIC
EXCAVATOR

PC1250 -8

PC1250SP-8

PC1250LC -8

| | | |
|----------------|-----------------|--------|
| SERIAL NUMBERS | PC1250- 30001 | and up |
| | PC1250SP- 30001 | |
| | PC1250LC- 30001 | |

ecot3

KOMATSU

HYDRAULIC EXCAVATOR

PC1250-8
PC1250SP-8
PC1250LC-8

Machine model Serial number

| | |
|------------|--------------|
| PC1250-8 | 30001 and up |
| PC1250SP-8 | 30001 and up |
| PC1250LC-8 | 30001 and up |

00 Index and foreword

Index

| | |
|----------------------------------|---|
| Composition of shop manual | 2 |
| Table of contents | 4 |

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

| Section Title | Form Number |
|---|-------------|
| Shop Manual, contents binder, binder label and tabs | SEN00889-28 |
| 00 Index and foreword | SEN00890-28 |
| Index | SEN00891-28 |
| Foreword and general information | SEN00892-05 |
| 01 Specification..... | SEN00893-03 |
| Specification and technical data..... | SEN00894-03 |
| 10 Structure, function and maintenance standard | SEN00895-12 |
| Engine and cooling system..... | SEN00896-01 |
| Power train..... | SEN00897-02 |
| Undercarriage and frame | SEN00898-01 |
| Hydraulic system, Part 1 | SEN00900-02 |
| Hydraulic system, Part 2..... | SEN00901-02 |
| Work equipment..... | SEN00902-01 |
| Cab and its attachments | SEN00903-00 |
| Electrical system | SEN00904-05 |
| 20 Standard value table | SEN00905-04 |
| Standard service value table..... | SEN01631-04 |
| 30 Testing and adjusting | SEN00906-07 |
| Testing and adjusting, Part 1..... | SEN01632-04 |
| Testing and adjusting, Part 2..... | SEN01633-03 |
| Testing and adjusting, Part 3..... | SEN01634-02 |
| Testing and adjusting, Part 4..... | SEN01635-05 |
| Testing and adjusting, Part 5..... | SEN01636-01 |
| Testing and adjusting, Part 6..... | SEN01674-02 |
| 40 Troubleshooting | SEN00907-08 |
| Failure code table and fuse locations | SEN01638-03 |
| General information on troubleshooting..... | SEN01637-04 |
| Troubleshooting by failure code (Display of code), Part 1 | SEN01639-01 |
| Troubleshooting by failure code (Display of code), Part 2 | SEN01640-04 |
| Troubleshooting by failure code (Display of code), Part 3 | SEN01641-02 |
| Troubleshooting by failure code (Display of code), Part 4 | SEN01642-00 |
| Troubleshooting of electrical system (E-mode)..... | SEN01643-02 |
| Troubleshooting of hydraulic and mechanical system (H-mode) | SEN01644-01 |
| Troubleshooting of engine (S-mode)..... | SEN01645-02 |
| 50 Disassembly and assembly | SEN00908-11 |
| General information on disassembly and assembly | SEN01195-05 |
| Engine and cooling system, Part 1 | SEN01197-04 |

| | |
|---|-------------|
| Engine and cooling system, Part 2 | SEN01196-03 |
| Power train..... | SEN01198-08 |
| Undercarriage and frame..... | SEN01199-07 |
| Hydraulic system | SEN01200-05 |
| Work equipment..... | SEN01201-04 |
| Cab and its attachments | SEN01202-02 |
| Electrical system..... | SEN01203-04 |
| | |
| 90 Diagrams and drawings..... | SEN00909-08 |
| Hydraulic circuit diagrams..... | SEN00910-03 |
| Electrical diagrams and drawings | SEN00911-05 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$