

Shop Manual

HYDRAULIC
EXCAVATOR

PC1250 -8R
PC1250SP-8R

SERIAL NUMBERS PC1250- 35001 and up
PC1250SP- 35001

KOMATSU

HYDRAULIC EXCAVATOR

PC1250-8R PC1250SP-8R

Machine model	Serial number
PC1250-8R	35001 and up
PC1250SP-8R	35001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN02048-26
00 Index and foreword	SEN02049-26
Index	SEN02050-26
Foreword and general information	SEN02051-03
01 Specification	SEN02052-04
Specification and technical data	SEN02053-04
10 Structure, function and maintenance standard	SEN02054-11
Engine and cooling system	SEN02055-02
Power train	SEN02056-02
Undercarriage and frame	SEN02057-00
Hydraulic system, Part 1	SEN02059-02
Hydraulic system, Part 2	SEN02060-02
Work equipment	SEN02061-01
Cab and its attachments	SEN02062-01
Electrical system	SEN02063-03
20 Standard value table	SEN02064-02
Standard service value table	SEN02071-02
30 Testing and adjusting	SEN02065-06
Testing and adjusting, Part 1	SEN02072-03
Testing and adjusting, Part 2	SEN02073-04
Testing and adjusting, Part 3	SEN02074-02
Testing and adjusting, Part 4	SEN02075-04
Testing and adjusting, Part 5	SEN02076-01
Testing and adjusting, Part 6	SEN02077-02
40 Troubleshooting	SEN02066-10
Failure code table and fuse locations	SEN02078-02
General information on troubleshooting	SEN02079-04
Troubleshooting by failure code (Display of code), Part 1	SEN02080-00
Troubleshooting by failure code (Display of code), Part 2	SEN02081-03
Troubleshooting by failure code (Display of code), Part 3	SEN02082-02
Troubleshooting by failure code (Display of code), Part 4	SEN02083-01
Troubleshooting of electrical system (E-mode)	SEN02085-02
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN02086-02
Troubleshooting of engine (S-mode)	SEN02087-02
50 Disassembly and assembly	SEN02067-11
General information on disassembly and assembly	SEN02785-06
Engine and cooling system (SAA6D170E-5)	SEN02786-01

Engine (SAA6D170E-5)	SEN02787-03
Power train	SEN02788-07
Undercarriage and frame	SEN02789-07
Hydraulic system	SEN02790-04
Work equipment	SEN02791-02
Cab and its attachments	SEN02792-01
Electrical system	SEN02793-02
90 Diagrams and drawings	SEN02068-09
Hydraulic circuit diagrams	SEN02069-03
Electrical diagrams and drawings	SEN02070-06

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$