

Shop Manual

HYDRAULIC
EXCAVATOR

PC130 -11
PC130LC-11

SERIAL NUMBERS PC130- 90001 and up
 PC130LC-90001

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Foreword, Safety, Basic Information	00-19
How to Read the Shop Manual	00-19
Safety Notice for Operation	00-21
Precautions to Prevent Fire	00-29
Procedures If Fire Occurs	00-31
Precautions for Disposing of Waste Materials	00-32
Procedures for Exhaust Gas Regulations	00-33
Precautions for DEF	00-34
Store DEF	00-35
Precautions When You Handle Hydraulic Equipment	00-36
Precautions When You Disconnect and Connect Pipings	00-39
Precautions When You Handle Electrical Equipment	00-46
Precautions When You Handle Fuel System Equipment	00-48
Precautions When You Handle Intake System Equipment	00-49
Practical Use of KOMTRAX	00-50
Disconnect and Connect Push-Pull Type Coupler	00-51
Precautions for Disconnection and Connection of Connectors	00-55
How to Disconnect and Connect Deutsch Connector	00-59
How to Disconnect and Connect Slide Lock Type Connector	00-60
How to Disconnect and Connect Connector with Lock to Pull	00-62
How to Disconnect and Connect Connector with Lock to Push	00-63
How to Disconnect and Connect Connector with Housing to Rotate	00-65
How to Read the Codes for Electric Cable	00-66
Explanation of Terms for Maintenance Standard	00-70
Standard Tightening Torque Table	00-73
Conversion Table	00-80
Abbreviation List	00-85
01 Specifications	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Working Range Drawings	01-6
Specifications	01-8
Weight Table	01-14
Fuel, Coolant, Lubricant	01-17
10 Structure and Function	10-1
Table of Contents	10-2
Urea SCR System	10-5
Layout Drawing of Urea SCR System	10-5
Urea SCR System Diagram	10-8
Function of Urea SCR System	10-9
Component Parts of Urea SCR System	10-21
Boot-up System	10-30
Layout Drawing of Boot-Up System (Serial No.: 90001 to 92188)	10-30
Layout Drawing of Boot-Up System (Serial No.: 92189 and up)	10-31
System Operating Lamp System	10-32
Battery Disconnect Switch	10-34
Engine System	10-36
Layout Drawing of Engine System	10-36
Engine Control System	10-38
Auto-Deceleration System	10-41
Engine Automatic Warm-up System	10-43
Overheat Prevention System	10-45
Turbocharger Protection System	10-47
Automatic Idle Stop System	10-48

Component Parts of Engine System	10-51
Cooling System.....	10-68
Layout Drawing of Cooling System	10-68
Fan Speed Control System of Fan Clutch	10-70
Engine Output Control System of Fan Clutch.....	10-72
Component Parts of Cooling System	10-74
Control System	10-75
Layout Drawing of Control System	10-75
Machine Monitor System.....	10-77
KomVision System.....	10-79
KOMTRAX System	10-82
Component Parts of Control System	10-83
Hydraulic System	10-121
Layout Drawing of Hydraulic System.....	10-121
CLSS	10-123
Engine and Pump Combined Control System	10-126
Component Parts of Hydraulic System.....	10-131
Work Equipment System.....	10-218
Layout Drawing of Work Equipment System	10-218
Structure of Valve Control	10-220
PPC Lock System	10-221
Work Equipment and Travel Automatic Lock System	10-222
Component Parts of Work Equipment System	10-224
Swing System	10-247
Layout Drawing of Swing System.....	10-247
Swing Control System Diagram	10-249
Component Parts of Swing System.....	10-252
Travel System	10-263
Layout Drawing of Travel System.....	10-263
System Diagram of Travel Control System.....	10-265
Component Parts of Travel System.....	10-269
Undercarriage and Frame	10-285
Layout Drawing of Undercarriage.....	10-285
Idler Cushion.....	10-287
Work Equipment	10-288
Structure of Work Equipment	10-288
Function of Work Equipment.....	10-289
Work Equipment Clearance Adjustment Shim.....	10-290
Bucket Clearance Adjustment Shim	10-291
CAB Related Parts.....	10-292
ROPS CAB	10-292
CAB Mount	10-293
CAB Tipping Stopper	10-294
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Engine: PC130-11	20-3
Standard Value Table for Engine: PC130LC-11	20-6
Standard Value Table for Machine.....	20-9
Standard Value Table for Machine: PC130-11	20-9
Standard Value Table for Machine: PC130LC-11.....	20-23
Machine Posture and Procedures to Measure Performance	20-37
30 Testing and Adjusting	30-1
Table of Contents	30-2
Precautions Before Work	30-5
Related Information on Testing and Adjusting	30-6
Differences In Machine Monitor Symbols	30-6
Tools for Testing and Adjusting.....	30-7

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$