

Shop Manual

HYDRAULIC
EXCAVATOR

PC138E-11

SERIAL NUMBERS 1 and up

Electric

KOMATSU

00 Index and Foreword

Index

| | |
|---|-------|
| 00 Index and Foreword | 00-1 |
| Abbreviation List | 00-14 |
| Foreword, Safety, Basic Information | 00-17 |
| How to Read the Shop Manual | 00-17 |
| Safety Notice for Operation | 00-19 |
| Precautions for Battery-Powered Hydraulic Excavator | 00-27 |
| Precautions to Prevent Fire | 00-28 |
| Precautions When You Discard Waste Materials | 00-32 |
| Precautions When You Handle Hydraulic Equipment | 00-33 |
| Precautions When You Disconnect and Connect Pipings | 00-36 |
| Precautions When You Handle Electrical Equipment | 00-42 |
| Precautions for Maintenance of Power Electronics Components | 00-44 |
| Precautions Against High Voltage and High Temperature | 00-45 |
| Procedure for Inspection and Maintenance of Power Electronics Components | 00-46 |
| Precautions for Normal Inspection and Maintenance | 00-48 |
| Precautions When Machine Falls over and Power Electronics Components Have Damage | 00-49 |
| Precautions for Machine Not to be Put in Water | 00-50 |
| Practical Use of KOMTRAX | 00-51 |
| Disconnect and Connect Push-Pull Type Coupler | 00-52 |
| Precautions for Disconnection and Connection of Connectors | 00-56 |
| How to Disconnect and Connect Deutsch Connector | 00-60 |
| How to Disconnect and Connect Slide Lock Type Connector | 00-61 |
| How to Disconnect and Connect Connector with Lock to Pull | 00-63 |
| How to Disconnect and Connect Connector with Lock to Push | 00-64 |
| How to Disconnect and Connect Connector with Housing to Rotate | 00-66 |
| How to Disconnect and Connect High Voltage Wiring Connector of Power Electronics Components | 00-67 |
| How to Read the Codes for Electric Cable | 00-71 |
| Explanation of Terms for Maintenance Standard | 00-75 |
| Standard Tightening Torque Table | 00-78 |
| Conversion Table | 00-83 |
| 01 Specifications | 01-1 |
| Table of Contents | 01-2 |
| Specifications | 01-3 |
| Specification Drawing | 01-3 |
| Working Range Drawings | 01-4 |
| Specifications | 01-5 |
| Weight Table | 01-8 |
| Coolant, Lubricant | 01-10 |
| 10 Structure and Function | 10-1 |
| Table of Contents | 10-2 |
| Boot-up System | 10-5 |
| Layout Drawing of Boot-up System | 10-5 |
| System Operating Lamp System | 10-7 |
| Auxiliary Battery Disconnect Switch | 10-8 |
| Function of Electric Motor Shutdown Secondary Switch | 10-9 |
| Electric Drive System | 10-10 |
| Layout Drawing of Electric Drive System | 10-10 |
| System Diagram of Electric Drive System | 10-12 |
| Structure of Electric Drive System | 10-13 |
| Worker Protection System When You Disassemble Power Electronics Components | 10-14 |
| High Voltage Wiring (Power Cable) | 10-15 |
| Component Parts of Electric Drive System | 10-16 |
| Electric Motor System | 10-34 |
| Layout Drawing of Electric Motor System | 10-34 |
| Electric Motor Control System | 10-35 |

| | |
|---|--------|
| Auto-Deceleration System..... | 10-37 |
| Overheat Prevention System | 10-39 |
| Component Parts of Electric Motor System | 10-42 |
| Cooling System..... | 10-43 |
| Layout Drawing of Cooling System | 10-43 |
| Fan Speed Control System of Electric Fan..... | 10-46 |
| Component Parts of Cooling System | 10-47 |
| Control System | 10-48 |
| Layout Drawing of Control System | 10-48 |
| Machine Monitor System..... | 10-49 |
| KomVision System | 10-51 |
| KOMTRAX System | 10-55 |
| Component Parts of Control System | 10-56 |
| Hydraulic System | 10-97 |
| Layout Drawing of Hydraulic System..... | 10-97 |
| CLSS | 10-99 |
| Electric Motor and Pump Combined Control System..... | 10-102 |
| Component Parts of Hydraulic System..... | 10-107 |
| Work Equipment System..... | 10-196 |
| Layout Drawing of Work Equipment System | 10-196 |
| Structure of Valve Control | 10-199 |
| PPC Lock System | 10-200 |
| Work Equipment and Travel Automatic Lock System | 10-201 |
| Attachment Oil Flow Adjuster System | 10-203 |
| Component Parts of Work Equipment System | 10-205 |
| Swing System | 10-228 |
| Layout Drawing of Swing System..... | 10-228 |
| Swing Control System Diagram | 10-230 |
| Component Parts of Swing System..... | 10-233 |
| Travel System | 10-246 |
| Layout Drawing of Travel System..... | 10-246 |
| System Diagram of Travel Control System..... | 10-248 |
| Component Parts of Travel System..... | 10-252 |
| Undercarriage and Frame | 10-268 |
| Layout Drawing of Undercarriage..... | 10-268 |
| Idler Cushion..... | 10-269 |
| Work Equipment | 10-270 |
| Structure of Work Equipment | 10-270 |
| Function of Work Equipment..... | 10-271 |
| Work Equipment Clearance Adjustment Shim..... | 10-272 |
| Bucket Clearance Adjustment Shim | 10-273 |
| CAB Related Parts..... | 10-274 |
| ROPS CAB | 10-274 |
| CAB Mount | 10-275 |
| Remove Wiring Harness Out of Cab | 10-277 |
| 20 Standard Value Table | 20-1 |
| Table of Contents | 20-2 |
| Standard Value Table for Electric Motor | 20-3 |
| Standard Value Table for Electric Motor: PC138E-11 | 20-3 |
| Standard Value Table for Machine..... | 20-4 |
| Standard Value Table for Machine: PC138E-11..... | 20-4 |
| Machine Posture and Procedures to Measure Performance | 20-16 |
| 30 Testing and Adjusting | 30-1 |
| Table of Contents | 30-2 |
| Precautions Before Work | 30-5 |
| Related Information on Testing and Adjusting | 30-6 |
| Differences In Machine Monitor Symbols | 30-6 |
| Tools for Testing and Adjusting..... | 30-7 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$