

Shop Manual

HYDRAULIC
EXCAVATOR

PC138US-10

SERIAL NUMBERS PC138US-10 F40003 and up

KOMATSU

SHOP MANUAL

HYDRAULIC EXCAVATOR PC138US-10

Machine model	Serial number
PC138US-10	F40003 and up

00 Index and foreword

Table of contents

00 Index and foreword

Table of contents.....	2
Foreword, safety and general information.....	15
Important safety notice.....	15
Fire prevention.....	20
Dispose of waste materials.....	21
How to read the shop manual.....	22
Explanation of terms for maintenance standard.....	24
Handling equipment of fuel system devices.....	26
Handling of intake system parts.....	27
Handling of hydraulic equipment.....	28
Method of disconnecting and connecting of push-pull type coupler.....	30
Handling of electrical equipment.....	33
How to read electric wire code.....	41
Precautions when performing operation.....	44
Practical use of KOMTRAX.....	49
Standard tightening torque table.....	50
List of abbreviation.....	56
Conversion table.....	61

01 Specification

Specifications.....	3
Specification drawing.....	3
Working range drawings.....	5
Specifications.....	6
Weight table.....	10
Table of fuel, coolant, and lubricants.....	12

10 Structure and function

Engine and cooling system.....	4
Engine related parts.....	4
PTO.....	6
VFT.....	7
EGR system piping drawing.....	11
EGR system circuit diagram.....	13
EGR valve.....	14
EGR cooler.....	16
KCCV layout drawing.....	18
KCCV ventilator.....	20
CDR valve.....	21
KDOC muffler.....	22
Cooling system.....	24
Power train.....	26
Power train system.....	26
Swing circle.....	28
Swing machinery.....	29
Undercarriage and frame.....	31
Track frame.....	31
Idler cushion.....	32
Hydraulic system.....	33

Hydraulic component layout	33
Valve control	35
Hydraulic tank	36
CLSS	38
Main pump	42
Control valve	69
Swing motor	119
Travel motor	131
Work equipment and swing PPC valve	142
Travel PPC valve	149
Blade PPC valve	155
2-piece boom PPC valve	157
1st-line attachment PPC valve (with EPC valve)	159
Solenoid valve	167
Attachment circuit selector valve (for low pressure circuit)	173
Quick coupler control valve	176
Center swivel joint	180
PPC circuit accumulator	182
Attachment circuit accumulator (for low pressure circuit)	183
Work equipment	184
Work equipment	184
Work equipment shim	185
Bucket play adjustment shim	186
Cab and its attachments	187
Cab mount and cab tipping stopper	187
ROPS cab	188
Take wiring harness out of cab	189
Electrical system	190
Electrical control system	190
Engine control function	193
Engine and pump combined control function	195
Auto-deceleration function	201
Engine automatic warm-up function	203
Overheat prevention function	206
Turbocharger protection function	208
Travel control function	212
PPC lock function	216
System operating lamp function	217
Battery disconnect switch function	218
Oil flow adjuster function for attachment	220
Machine monitor system	222
Display	226
KOMTRAX system	243
Sensor	260
20 Standard value tables	
Standard value table for engine	3
Standard value table for machine	4
Machine posture and procedure for measuring performance	15
Standard value table for electrical system	20
30 Testing and adjusting	

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$