

# Shop Manual

HYDRAULIC  
EXCAVATOR

***PC138USLC-11***

SERIAL NUMBERS 50001 and up

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-20
Foreword, Safety, Basic Information .....	00-26
How to Read the Shop Manual .....	00-26
Safety Notice for Operation .....	00-28
Precautions to Prevent Fire .....	00-36
Procedures If Fire Occurs .....	00-38
Precautions When You Discard Waste Materials .....	00-39
Procedures for Exhaust Gas Regulations .....	00-40
Precautions for DEF .....	00-41
Store DEF .....	00-42
Precautions When You Handle Hydraulic Equipment .....	00-43
Precautions When You Disconnect and Connect Pipings .....	00-46
Precautions When You Handle Electrical Equipment .....	00-53
Precautions When You Handle Fuel System Equipment .....	00-55
Precautions When You Handle Intake System Equipment .....	00-56
Practical Use of KOMTRAX .....	00-57
Disconnect and Connect Push-Pull Type Coupler .....	00-58
Precautions for Disconnection and Connection of Connectors .....	00-62
Disconnect and Connect Deutsch Connector .....	00-66
How to Disconnect and Connect Slide Lock Type Connector .....	00-67
Disconnect and Connect Connector with Lock to Pull .....	00-69
Disconnect and Connect Connector with Lock to Push .....	00-70
Disconnect and Connect Connector with Housing to Rotate .....	00-72
How to Read the Codes for Electric Cable .....	00-73
Explanation of Terms for Maintenance Standard .....	00-77
Standard Tightening Torque Table .....	00-80
Conversion Table .....	00-87
01 Specification .....	01-1
Table of Contents .....	01-2
Abbreviation List .....	01-3
Specifications .....	01-9
Specification Drawing .....	01-9
Working Range Drawings .....	01-11
Specifications .....	01-12
Weight Table .....	01-16
Table of Fuel, Coolant, and Lubricants .....	01-18
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Abbreviation List .....	10-5
Urea SCR System .....	10-11
Layout Drawing of Urea SCR System .....	10-11
Urea SCR System Diagram .....	10-13
Function of Urea SCR System .....	10-14
Component Parts of Urea SCR System .....	10-38
Boot-up System .....	10-47
Layout Drawing of Boot-Up System (Serial No.: 50001 to 62010) .....	10-47
Layout Drawing of Boot-Up System (Serial No.: 62011 and up) .....	10-48
System Operating Lamp System .....	10-49
Battery Disconnect Switch .....	10-52
Engine System .....	10-54
Layout Drawing of Engine System .....	10-54
Engine Control System .....	10-56
Auto-Deceleration System .....	10-62
Engine Automatic Warm-up System .....	10-64
Overheat Prevention System .....	10-66

Turbocharger Protection System .....	10-68
Automatic Idle Stop System .....	10-69
Component Parts of Engine System .....	10-73
Cooling System .....	10-93
Layout Drawing of Cooling System .....	10-93
Control System .....	10-95
Layout Drawing of Control System (Machine with KOMTRAX Terminal) .....	10-95
Layout Drawing of Control System (Machine with Gateway Function Controller) .....	10-97
Machine Monitor System .....	10-99
KomVision System .....	10-102
KOMTRAX System .....	10-106
Component Parts of Control System .....	10-108
Hydraulic System .....	10-153
Layout Drawing of Hydraulic System .....	10-153
CLSS .....	10-155
Engine and Pump Combined Control System .....	10-158
Component Parts of Hydraulic System .....	10-163
Work Equipment System .....	10-252
Layout Drawing of Work Equipment System .....	10-252
Structure of Valve Control .....	10-255
PPC Lock System .....	10-256
Work Equipment and Travel Automatic Lock System .....	10-257
Attachment Oil Flow Adjuster System .....	10-259
Tool Control System .....	10-261
Component Parts of Work Equipment System .....	10-263
Swing System .....	10-292
Layout Drawing of Swing System .....	10-292
Swing Control System Diagram .....	10-294
Component Parts of Swing System .....	10-297
Travel System .....	10-310
Layout Drawing of Travel System .....	10-310
System Diagram of Travel Control System .....	10-312
Component Parts of Travel System .....	10-316
Undercarriage and Frame .....	10-335
Layout Drawing of Undercarriage .....	10-335
Idler Cushion .....	10-336
Work Equipment .....	10-337
Structure of Work Equipment .....	10-337
Function of Work Equipment .....	10-338
Work Equipment Clearance Adjustment Shim .....	10-339
Bucket Clearance Adjustment Shim .....	10-340
CAB Related Parts .....	10-341
ROPS CAB .....	10-341
CAB Mount .....	10-343
Remove Wiring Harness Out of Cab .....	10-345
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Abbreviation List .....	20-3
Standard Value Table for Engine .....	20-9
Standard Value Table for Engine: PC138USLC-11 .....	20-9
Standard Value Table for Machine .....	20-13
Standard Value Table for Machine: PC138USLC-11 .....	20-13
Machine Posture and Procedures to Measure Performance .....	20-27
30 Testing and Adjusting .....	30-1
Table of Contents .....	30-2
Precautions Before Work .....	30-5
Abbreviation List .....	30-6
Related Information on Testing and Adjusting .....	30-12

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$