

Shop Manual

COMPACT HYDRAULIC EXCAVATOR

PC18MR-5

SERIAL NUMBERS F10001 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Foreword, Safety, Basic Information	00-8
How to Read the Shop Manual	00-8
Safety Notice for Operation	00-10
Precautions to Prevent Fire	00-18
Procedures If Fire Occurs	00-20
Precautions When You Dispose of Waste Materials	00-21
Precautions When You Handle Hydraulic Equipment	00-22
Precautions When You Disconnect and Connect Pipings	00-25
Precautions When You Handle Electrical Equipment	00-32
Precautions When You Handle Fuel System Equipment	00-34
Precautions When You Handle Intake System Equipment	00-35
Practical Use of KOMTRAX	00-36
Disconnect and Connect Push-Pull Type Coupler	00-37
Precautions for Disconnection and Connection of Connectors	00-41
How to Disconnect and Connect Deutsch Connector	00-45
How to Disconnect and Connect Slide Lock Type Connector	00-46
How to Disconnect and Connect Connector with Lock to Pull	00-48
How to Disconnect and Connect Connector with Lock to Push	00-49
How to Disconnect and Connect Connector with Housing to Rotate	00-51
Standard Tightening Torque Table	00-52
Conversion Table	00-59
Abbreviation List	00-64
01 Specifications	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Working Range Drawings	01-5
Specifications	01-6
Weight Table	01-11
Fuel, Coolant, Lubricant	01-13
10 Structure and Function	10-1
Table of Contents	10-2
Boot-up System	10-4
Layout Drawing of Boot-up System	10-4
System Operating Lamp System	10-5
Battery Disconnect Switch	10-7
Engine System	10-8
Layout Drawing of Engine System	10-8
Engine Control System	10-9
Component Parts of Engine System	10-11
Cooling System	10-12
Layout Drawing of Cooling System	10-12
Control System	10-14
Layout Drawing of Control System	10-14
Machine Monitor System	10-15
KOMTRAX System	10-16
Component Parts of Control System	10-17
Hydraulic System	10-24
Layout Drawing of Hydraulic System	10-24
CLSS	10-25
Component Parts of Hydraulic System	10-28
Work Equipment System	10-67
Layout Drawing of Work Equipment System	10-67
Structure of Valve Control	10-70
PPC Lock System	10-74

Work Equipment Double Lock System	10-77
Attachment Oil Flow Adjuster System	10-78
Component Parts of Work Equipment System	10-79
Swing System	10-93
Layout Drawing of Swing System.....	10-93
Component Parts of Swing System.....	10-94
Travel System	10-100
Layout Drawing of Travel System.....	10-100
System Diagram of Travel Control System.....	10-102
Component Parts of Travel System.....	10-104
Undercarriage and Frame	10-118
Layout Drawing of Undercarriage.....	10-118
Specifications of Undercarriage	10-119
Idler Cushion.....	10-120
Work Equipment	10-122
Structure of Work Equipment	10-122
Function of Work Equipment.....	10-123
Work Equipment Clearance Adjustment Shim.....	10-124
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Engine PC18MR-5.....	20-3
Standard Value Table for Machine.....	20-5
Standard Value Table for Machine PC18MR-5	20-5
Machine Posture and Procedures to Measure Performance	20-15
30 Testing and Adjusting	30-1
Table of Contents	30-2
Related Information on Testing and Adjusting	30-4
Tools for Testing and Adjusting.....	30-4
Engine and Cooling System	30-8
Examine Engine Speed.....	30-8
Examine Exhaust Gas Color	30-13
Examine and Adjust Valve Clearance.....	30-15
Examine Compression Pressure	30-20
Examine Engine Oil Pressure	30-22
Examine and Adjust Fuel Injection Timing.....	30-25
Bleed Air from Fuel System.....	30-30
Examine Fuel Circuit for Leakage	30-31
Examine and Adjust Alternator Belt.....	30-32
Adjust Fuel Lever Linkage.....	30-35
Power Train.....	30-36
Examine Swing Circle Bearing Clearance	30-36
Undercarriage and Frame	30-38
Examine and Adjust Track Tension	30-38
Hydraulic System	30-40
Release Remained Pressure in Hydraulic Circuit	30-40
Examine and Adjust Oil Pressure in Work Equipment, Travel, and Swing Circuits	30-43
Examine and Adjust Oil Pressure in Control Circuit.....	30-50
Examine and Adjust Oil Pressure in Pump LS Control Circuit	30-53
Examine Outlet Pressure of Solenoid Valve	30-56
Examine PPC Valve Outlet Pressure.....	30-60
Adjust Play of Work Equipment and Swing PPC Valves	30-63
Examine Swing Parking Brake Release Pressure	30-64
Examine Travel Deviation	30-66
Examine Parts Which Cause Hydraulic Drift of Work Equipment.....	30-67
Examine Oil Leakage	30-70
Pressurize Hydraulic Tank.....	30-76
Floor	30-81

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$