

# Shop Manual

HYDRAULIC  
EXCAVATOR

***PC210LC-11***

SERIAL NUMBERS 500001 and up

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

- 00 Index and Foreword ..... 00-1
  - Abbreviation List ..... 00-19
  - Foreword, Safety, Basic Information ..... 00-22
    - How to Read the Shop Manual ..... 00-22
    - Safety Notice for Operation ..... 00-24
    - Precautions to Prevent Fire ..... 00-32
    - Procedures If Fire Occurs ..... 00-34
    - Precautions When You Discard Waste Materials ..... 00-35
    - Procedures for Exhaust Gas Regulations ..... 00-36
    - Precautions for DEF ..... 00-37
    - Precautions When You Handle Hydraulic Equipment ..... 00-38
    - Precautions When You Disconnect and Connect Pipings ..... 00-41
    - Precautions When You Handle Electrical Equipment ..... 00-48
    - Precautions When You Handle Fuel System Equipment ..... 00-50
    - Precautions When You Handle Intake System Equipment ..... 00-51
    - Practical Use of KOMTRAX ..... 00-52
    - Disconnect and Connect Push-Pull Type Coupler ..... 00-53
    - Precautions for Disconnection and Connection of Connectors ..... 00-57
    - Disconnect and Connect Deutsch Connector ..... 00-61
    - How to Disconnect and Connect Slide Lock Type Connector ..... 00-62
    - Disconnect and Connect Connector with Lock to Pull ..... 00-64
    - Disconnect and Connect Connector with Lock to Push ..... 00-65
    - Disconnect and Connect Connector with Housing to Rotate ..... 00-67
    - How to Read the Codes for Electric Cable ..... 00-68
    - Explanation of Terms for Maintenance Standard ..... 00-72
    - Standard Tightening Torque Table ..... 00-75
    - Conversion Table ..... 00-82
- 01 Specification ..... 01-1
  - Table of Contents ..... 01-2
  - Specifications ..... 01-3
    - Specification Drawing ..... 01-3
    - Working Range Drawings ..... 01-5
    - Specifications ..... 01-6
    - Weight Table ..... 01-9
    - Table of Fuel, Coolant, and Lubricants ..... 01-11
    - Fuel, Coolant, Lubricant ..... 01-12
- 10 Structure and Function ..... 10-1
  - Table of Contents ..... 10-2
  - Urea SCR System ..... 10-6
    - Layout Drawing of Urea SCR System ..... 10-7
    - Urea SCR System Diagram ..... 10-12
    - Function of Urea SCR System ..... 10-13
    - Component Parts of Urea SCR System ..... 10-29
  - Boot-up System ..... 10-38
    - Layout Drawing of Boot-up System ..... 10-38
    - System Operating Lamp System ..... 10-40
    - Battery Disconnect Switch ..... 10-41
  - Engine System ..... 10-42
    - Layout Drawing of Engine System ..... 10-42
    - Engine Control System ..... 10-44
    - Auto-Deceleration System ..... 10-47
    - Engine Automatic Warm-up System ..... 10-49
    - Overheat Prevention System ..... 10-51
    - Turbocharger Protection System ..... 10-54
    - Automatic Idle Stop System ..... 10-56
    - Component Parts of Engine System ..... 10-59

Cooling System.....	10-78
Layout Drawing of Cooling System .....	10-78
Fan Speed Control System of Fan Clutch .....	10-80
Engine Output Control System of Fan Clutch .....	10-82
Component Parts of Cooling System .....	10-84
Control System .....	10-85
Layout Drawing of Control System .....	10-85
Machine Monitor System.....	10-88
KomVision System.....	10-90
KOMTRAX System .....	10-94
Component Parts of Control System .....	10-95
Hydraulic System .....	10-135
Layout Drawing of Hydraulic System.....	10-135
CLSS .....	10-141
Engine and Pump Combined Control System .....	10-163
Pump and Valve Control System.....	10-169
Component Parts of Hydraulic System.....	10-172
Work Equipment System.....	10-259
Layout Drawing of Work Equipment System .....	10-259
Structure of Valve Control .....	10-264
One-Touch Power Maximizing System .....	10-266
PPC Lock System .....	10-268
Work Equipment and Travel Automatic Lock System .....	10-269
Attachment Oil Flow Adjuster System .....	10-271
Tool Control System.....	10-273
Component Parts of Work Equipment System .....	10-275
Swing System .....	10-317
Layout Drawing of Swing System.....	10-317
Swing Control System Diagram .....	10-321
Component Parts of Swing System.....	10-325
Travel System .....	10-340
Layout Drawing of Travel System.....	10-340
System Diagram of Travel Control System.....	10-344
Component Parts of Travel System.....	10-346
Undercarriage and Frame .....	10-367
Layout Drawing of Undercarriage.....	10-367
Work Equipment .....	10-369
Structure of Work Equipment .....	10-369
Function of Work Equipment.....	10-369
Work Equipment Clearance Adjustment Shim.....	10-370
Bucket Clearance Adjustment Shim .....	10-370
CAB Related Parts.....	10-371
ROPS CAB .....	10-371
CAB Mount .....	10-372
CAB Tipping Stopper .....	10-373
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Engine .....	20-3
Standard Value Table for Engine: PC210LC-11 .....	20-3
Standard Value Table for Machine.....	20-7
Standard Value Table for Machine: PC210LC-11.....	20-7
Machine Posture and Procedures to Measure Performance .....	20-20
Standard Value Table for Electricity.....	20-24
Standard Value Table for Electricity.....	20-24
30 Testing and Adjusting .....	30-1
Table of Contents .....	30-2
Precautions Before Work .....	30-5
Related Information on Testing and Adjusting .....	30-6

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$