

Shop Manual

COMPACT HYDRAULIC EXCAVATOR

PC24MR-5

SERIAL NUMBERS 25001 and up
F20001 and up

PC26MR-5

SERIAL NUMBERS 23001 and up
F10001 and up

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
FOREWORD, SAFETY, BASIC INFORMATION	00-9
HOW TO READ THE SHOP MANUAL	00-9
SAFETY NOTICE FOR OPERATION	00-11
PRECAUTIONS TO PREVENT FIRE	00-19
ACTIONS IF FIRE OCCURS	00-21
PRECAUTIONS WHEN YOU DISPOSE OF WASTE MATERIALS	00-22
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-23
PRECAUTIONS WHEN YOU DISCONNECT AND CONNECT PIPINGS	00-26
PRECAUTIONS WHEN YOU HANDLE ELECTRICAL EQUIPMENT	00-33
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-35
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-36
PRACTICAL USE OF KOMTRAX	00-37
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-38
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-42
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-46
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-47
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-49
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-50
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-52
STANDARD TIGHTENING TORQUE TABLE	00-53
CONVERSION TABLE	00-60
ABBREVIATION LIST	00-65
01 SPECIFICATION	01-1
CONTENTS	01-2
SPECIFICATIONS	01-3
SPECIFICATION DRAWING	01-3
WORKING RANGE DRAWINGS	01-7
SPECIFICATIONS	01-9
WEIGHT TABLE	01-19
FUEL, COOLANT, LUBRICANT	01-23
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
BOOT-UP SYSTEM	10-4
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-4
SYSTEM OPERATING LAMP SYSTEM	10-5
BATTERY DISCONNECT SWITCH	10-7
ENGINE SYSTEM	10-8
LAYOUT DRAWING OF ENGINE SYSTEM	10-8
ENGINE CONTROL SYSTEM	10-9
ENGINE SYSTEM	10-11
COOLING SYSTEM	10-12
LAYOUT DRAWING OF COOLING SYSTEM	10-12
CONTROL SYSTEM	10-14
LAYOUT DRAWING OF CONTROL SYSTEM	10-14
MACHINE MONITOR SYSTEM	10-15
KOMTRAX SYSTEM	10-16
CONTROL SYSTEM	10-17
HYDRAULIC SYSTEM	10-28
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-28
CLSS	10-29
HYDRAULIC SYSTEM	10-32
WORK EQUIPMENT SYSTEM	10-70
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-70
STRUCTURE OF VALVE CONTROL	10-73

PPC LOCK SYSTEM	10-75
WORK EQUIPMENT DOUBLE LOCK SYSTEM	10-77
WORK EQUIPMENT SYSTEM	10-78
SWING SYSTEM	10-103
LAYOUT DRAWING OF SWING SYSTEM	10-103
SWING SYSTEM	10-104
TRAVEL SYSTEM.....	10-117
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-117
SYSTEM DIAGRAM OF TRAVEL CONTROL SYSTEM.....	10-119
TRAVEL SYSTEM	10-121
UNDERCARRIAGE AND FRAME.....	10-138
LAYOUT DRAWING OF UNDERCARRIAGE	10-138
SPECIFICATIONS OF UNDERCARRIAGE.....	10-140
IDLER CUSHION	10-141
WORK EQUIPMENT.....	10-144
STRUCTURE OF WORK EQUIPMENT	10-144
FUNCTION OF WORK EQUIPMENT	10-145
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-146
CAB RELATED PARTS.....	10-147
ROPS CAB	10-147
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
STANDARD VALUE TABLE FOR ENGINE	20-3
STANDARD VALUE TABLE FOR ENGINE: PC24MR-5.....	20-3
STANDARD VALUE TABLE FOR ENGINE: PC26MR-5.....	20-5
STANDARD VALUE TABLE FOR MACHINE.....	20-7
STANDARD VALUE TABLE FOR MACHINE: PC24MR-5	20-7
STANDARD VALUE TABLE FOR MACHINE: PC26MR-5	20-17
GEAR PUMP: PC24MR-5.....	20-27
PISTON PUMP: PC24MR-5.....	20-28
GEAR PUMP: PC26MR-5.....	20-29
PISTON PUMP: PC26MR-5.....	20-30
MACHINE POSTURE AND PROCEDURES TO MEASURE PERFORMANCE	20-31
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2
RELATED INFORMATION ON TESTING AND ADJUSTING	30-4
TOOLS FOR TESTING AND ADJUSTING.....	30-4
ENGINE AND COOLING SYSTEM.....	30-8
TEST ENGINE SPEED	30-8
TEST EXHAUST GAS COLOR.....	30-13
CHECK AND ADJUST VALVE CLEARANCE.....	30-16
TEST COMPRESSION PRESSURE.....	30-20
TEST ENGINE OIL PRESSURE	30-24
TEST AND ADJUST FUEL INJECTION TIMING	30-26
BLEED AIR FROM FUEL SYSTEM	30-29
TEST FUEL SYSTEM FOR LEAKAGE	30-30
TEST AND ADJUST ALTERNATOR BELT TENSION	30-31
POWER TRAIN.....	30-33
TEST SWING CIRCLE BEARING CLEARANCE	30-33
UNDERCARRIAGE AND FRAME.....	30-35
TEST AND ADJUST TRACK TENSION.....	30-35
HYDRAULIC SYSTEM.....	30-37
RELEASE PRESSURE REMAINED IN HYDRAULIC CIRCUIT	30-37
TEST AND ADJUST OIL PRESSURE IN WORK EQUIPMENT, TRAVEL, AND BOOM SWING CIRCUITS	30-45
TEST AND ADJUST OIL PRESSURE IN SWING AND BLADE CIRCUITS	30-53
TEST AND ADJUST OIL PRESSURE IN CONTROL CIRCUIT	30-58
TEST AND ADJUST OIL PRESSURE IN PUMP LS CONTROL CIRCUIT.....	30-60

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$