

Shop Manual

HYDRAULIC
EXCAVATOR

PC270 -8
PC270LC-8

SERIAL NUMBERS PC270- 20001 and up
PC270LC-20001

ecot3

KOMATSU

HYDRAULIC EXCAVATOR

PC270-8 PC270LC-8

Machine model	Serial number
PC270-8	2001 and up
PC270LC-8	2001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00420-16
00 Index and foreword	SEN00421-16
Index	SEN00422-16 ●
Foreword and general information	SEN00423-03
01 Specification.....	SEN00424-02
Specification and technical data.....	SEN00425-02
10 Structure, function and maintenance standard	SEN00426-08
Engine and cooling system.....	SEN00427-01
Power train.....	SEN00428-01
Undercarriage and frame	SEN00429-03
Hydraulic system, Part 1	SEN00430-04 ●
Hydraulic system, Part 2	SEN00431-03
Hydraulic system, Part 3	SEN00432-05
Work equipment.....	SEN00433-01
Cab and its attachments	SEN00434-01
Electrical system	SEN00435-05
20 Standard value table	SEN00436-06
Standard service value table.....	SEN00641-06
30 Testing and adjusting	SEN00437-06
Testing and adjusting, Part 1.....	SEN00642-06
Testing and adjusting, Part 2.....	SEN00643-07
Testing and adjusting, Part 3.....	SEN00644-04

40 Troubleshooting	SEN00438-06
Failure code table and fuse locations	SEN03239-02
General information on troubleshooting.....	SEN00645-05
Troubleshooting by failure code (Display of code), Part 1	SEN00646-05
Troubleshooting by failure code (Display of code), Part 2	SEN00647-04
Troubleshooting by failure code (Display of code), Part 3	SEN00648-06
Troubleshooting by failure code (Display of code), Part 4	SEN00649-04
Troubleshooting of electrical system (E-mode).....	SEN00650-04
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN00651-03
Troubleshooting of engine (S-mode)	SEN00652-04
50 Disassembly and assembly	SEN00439-06
General information on disassembly and assembly	SEN00865-03
Engine and cooling system	SEN00866-03
Power train.....	SEN00867-03
Undercarriage and frame	SEN00868-04
Hydraulic system	SEN00869-04
Work equipment.....	SEN00870-01
Cab and its attachments	SEN00871-03
Electrical system.....	SEN00872-03
90 Diagrams and drawings	SEN00440-06
Hydraulic diagrams and drawings.....	SEN00441-01
Electrical diagrams and drawings	SEN00442-04

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$