

Shop Manual

HYDRAULIC
EXCAVATOR

PC300 -8M0

PC300LC-8M0

PC350 -8M0

PC350LC-8M0

SERIAL NUMBERS

PC300- 80001

PC300LC-80001

PC350- 80001

PC350LC-80001

and up

ecot3

KOMATSU

HYDRAULIC EXCAVATOR

PC300-8M0

PC300LC-8M0

PC350-8M0

PC350LC-8M0

Machine model	Serial number
---------------	---------------

PC300-8M0	80001 and up
PC300LC-8M0	80001 and up
PC350-8M0	80001 and up
PC350LC-8M0	80001 and up

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN06257-11
00 Index and foreword	SEN06258-11
100 Index	SEN06259-11
200 Foreword and general information	SEN06260-02
01 Specification	SEN06261-01
100 Specification and technical data	SEN06262-01
10 Structure, function and maintenance standard	SEN06263-04
100 Engine and cooling system	SEN06264-01
200 Power train	SEN06265-01
300 Undercarriage and frame	SEN06266-01
401 Hydraulic system, Part 1	SEN06267-02
402 Hydraulic system, Part 2	SEN06268-01
403 Hydraulic system, Part 3	SEN06269-03
500 Work equipment	SEN06270-02
600 Electrical system	SEN06271-01
20 Standard value table	SEN06275-00
100 Standard service value table	SEN06276-00
30 Testing and adjusting	SEN06277-03
101 Testing and adjusting, Part 1	SEN06278-03
102 Testing and adjusting, Part 2	SEN06279-00
103 Testing and adjusting, Part 3	SEN06280-00
40 Troubleshooting	SEN06353-00
100 Failure code table and fuse locations	SEN06354-00
200 General Information on troubleshooting	SEN06355-00
301 Troubleshooting by failure code, Part 1	SEN06356-00
302 Troubleshooting by failure code, Part 2	SEN06357-00
303 Troubleshooting by failure code, Part 3	SEN06358-00
304 Troubleshooting by failure code, Part 4	SEN06359-00
305 Troubleshooting by failure code, Part 5	SEN06360-00
400 Troubleshooting of electrical system (E-mode)	SEN06361-00
500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN06362-00
600 Troubleshooting of engine (S-mode)	SEN06363-00
50 Disassembly and assembly	SEN06344-04
100 Related information on disassembly and assembly	SEN06345-01
200 Engine and cooling system	SEN06346-01
300 Power train system	SEN06347-00
400 Undercarriage and frame	SEN06348-01

500 Hydraulic system	SEN06349-00
600 Work equipment	SEN06350-01
700 Cab and its attachments	SEN06351-01
800 Electrical system	SEN06352-00
80 Appendix	SEN06364-01
100 Air conditioner	SEN06365-01
90 Diagrams and drawings	SEN06272-01
100 Hydraulic diagrams and drawings	SEN06273-00
200 Electrical diagrams and drawings	SEN06274-01

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$