

Shop Manual

HYDRAULIC
EXCAVATOR

PC300 -8M0

PC300LC-8M0

PC350 -8M0

PC350LC-8M0

SERIAL NUMBERS

PC300-	C90001	
PC300LC-	C90001	and up
PC350-	C90415	
PC350-	C90415	

ecot3

KOMATSU

HYDRAULIC EXCAVATOR

PC300-8M0

PC300LC-8M0

PC350-8M0

PC350LC-8M0

Machine model	Serial number
---------------	---------------

PC300-8M0	C90001 and up
PC300LC-8M0	C90001 and up
PC350-8M0	C90145 and up
PC350LC-8M0	C90145 and up

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN06257-C6
00 Index and foreword	SEN06258-06
100 Index	SEN06259-06 ●
200 Foreword and general information	SEN06260-01
01 Specification	SEN06261-01
100 Specification and technical data	SEN06262-01
10 Structure, function and maintenance standard	SEN06263-03
100 Engine and cooling system	SEN06264-01
200 Power train	SEN06265-01
300 Undercarriage and frame	SEN06266-01
401 Hydraulic system, Part 1	SEN06267-02 ●
402 Hydraulic system, Part 2	SEN06268-01
403 Hydraulic system, Part 3	SEN06269-02
500 Work equipment	SEN06270-01
600 Electrical system	SEN06271-01
20 Standard value table	SEN06275-00
100 Standard service value table	SEN06276-00
30 Testing and adjusting	SEN06277-02
101 Testing and adjusting, Part 1	SEN06278-02 ●
102 Testing and adjusting, Part 2	SEN06279-00
103 Testing and adjusting, Part 3	SEN06280-00
40 Troubleshooting	SEN06353-00
100 Failure code table and fuse locations	SEN06354-00
200 General Information on troubleshooting	SEN06355-00
301 Troubleshooting by failure code, Part 1	SEN06356-00
302 Troubleshooting by failure code, Part 2	SEN06357-00
303 Troubleshooting by failure code, Part 3	SEN06358-00
304 Troubleshooting by failure code, Part 4	SEN06359-00
305 Troubleshooting by failure code, Part 5	SEN06360-00
400 Troubleshooting of electrical system (E-mode)	SEN06361-00

500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN06362-00
600 Troubleshooting of engine (S-mode)	SEN06363-00
50 Disassembly and assembly	SEN06344-01
100 Related information on disassembly and assembly	SEN06345-00
200 Engine and cooling system	SEN06346-00
300 Power train system	SEN06347-00
400 Undercarriage and frame	SEN06348-00
500 Hydraulic system	SEN06349-00
600 Work equipment	SEN06350-01
700 Cab and its attachments	SEN06351-00
800 Electrical system	SEN06352-00
80 Appendix	SEN06364-00
100 Air conditioner	SEN06365-00
90 Diagrams and drawings	SEN06272-00
100 Hydraulic diagrams and drawings	SEN06273-00
200 Electrical diagrams and drawings	SEN06274-00

Table of contents

00 Index and foreword	
100 Index	SEN06259-06
Composition of shop manual	2
Table of contents.....	4
200 Foreword and general information	SEN06260-01
Foreword, safety and general information	2
How to read the shop manual.....	9
Explanation of terms for maintenance standard	11
Handling equipment of fuel system devices	13
Handling of intake system parts.....	14
Handling of hydraulic equipment	15
Method of disconnecting and connecting of push-pull type coupler	17
Handling of electrical equipment.....	20
How to read electric wire code.....	29
Precautions when performing operation	32
Practical use of KOMTRAX	35
Standard tightening torque table.....	36
List of abbreviation.....	40
Conversion table.....	45
01 Specification	
100 Specification and technical data	SEN06262-01
Specification dimension drawings.....	2
Specifications.....	4
Weight table.....	10
Table of fuel, coolant and lubricants	12
10 Structure, function and maintenance standard	
100 Engine and cooling system	SEN06264-01
Engine related parts.....	2
Radiator, oil cooler and aftercooler	3
200 Power train	SEN06265-01
Power train.....	2
Swing circle.....	3
Swing machinery	4
Final drive	6
Sprocket.....	8
300 Undercarriage and frame	SEN06266-01
Track frame and recoil spring	2
Idler.....	4
Carrier roller.....	6
Track roller	7
Track shoe	9
401 Hydraulic system, Part 1	SEN06267-02
Hydraulic equipment layout drawing.....	2
Hydraulic tank and filter	4
Hydraulic pump.....	6
402 Hydraulic system, Part 2	SEN06268-01
Control valve.....	2
CLSS	14
Functions and operation by valve	18
Attachment circuit selector valve	57
Hydraulic drift prevention valve.....	60

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$