

# Shop Manual

HYDRAULIC  
EXCAVATOR

***PC360LC-11***

SERIAL NUMBERS 91005 and up

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-19
Foreword, Safety, Basic Information .....	00-22
How to Read the Shop Manual .....	00-22
Safety Notice for Operation .....	00-24
Precautions to Prevent Fire .....	00-32
Procedures If Fire Occurs .....	00-34
Precautions for Disposing of Waste Materials .....	00-35
Procedures for Exhaust Gas Regulations .....	00-36
Precautions for DEF .....	00-37
Store DEF .....	00-38
Precautions When You Handle Hydraulic Equipment .....	00-39
Precautions When You Disconnect and Connect Pipings .....	00-42
Precautions When You Handle Electrical Equipment .....	00-49
Precautions When You Handle Fuel System Equipment .....	00-51
Precautions When You Handle Intake System Equipment .....	00-52
Practical Use of KOMTRAX .....	00-53
Disconnect and Connect Push-Pull Type Coupler .....	00-54
Precautions for Disconnection and Connection of Connectors .....	00-58
How to Disconnect and Connect Deutsch Connector .....	00-62
How to Disconnect and Connect Slide Lock Type Connector .....	00-63
How to Disconnect and Connect Connector with Lock to Pull .....	00-65
How to Disconnect and Connect Connector with Lock to Push .....	00-66
How to Disconnect and Connect Connector with Housing to Rotate .....	00-68
How to Read the Codes for Electric Cable .....	00-69
Explanation of Terms for Maintenance Standard .....	00-73
Standard Tightening Torque Table .....	00-76
Conversion Table .....	00-83
01 Specifications .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Working Range Drawings .....	01-5
Specifications .....	01-6
Weight Table .....	01-9
Table of Fuel, Coolant, and Lubricants .....	01-11
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Urea SCR System .....	10-5
Layout Drawing of Urea SCR System (Applicable Machine: 90156 to 92053) .....	10-5
Layout Drawing of Urea SCR System (Applicable Machine: 92054 and up) .....	10-10
Urea SCR System Diagram .....	10-14
Function of Urea SCR System .....	10-15
Component Parts of Urea SCR System .....	10-33
Boot-up System .....	10-43
Layout Drawing of Boot-up System .....	10-43
System Operating Lamp System .....	10-45
Battery Disconnect Switch .....	10-46
Engine System .....	10-47
Layout Drawing of Engine System .....	10-47
Engine Control System .....	10-49
Auto-Deceleration System .....	10-52
Engine Automatic Warm-up System .....	10-54
Overheat Prevention System .....	10-56
Turbocharger Protection System .....	10-58
Automatic Idle Stop System .....	10-60

Component Parts of Engine System .....	10-63
Cooling System.....	10-79
Layout Drawing of Cooling System .....	10-79
Control System .....	10-81
Layout Drawing of Control System .....	10-81
Machine Monitor System.....	10-84
KomVision System.....	10-86
KOMTRAX System .....	10-90
Component Parts of Control System .....	10-91
Hydraulic System .....	10-125
Layout Drawing of Hydraulic System.....	10-125
CLSS .....	10-128
Engine and Pump Combined Control System .....	10-151
Pump and Valve Control System.....	10-157
Component Parts of Hydraulic System.....	10-160
Work Equipment System.....	10-249
Layout Drawing of Work Equipment System .....	10-249
Structure of Valve Control .....	10-255
One-Touch Power Maximizing System .....	10-257
Machine Push-up System .....	10-259
PPC Lock System .....	10-261
Work Equipment and Travel Automatic Lock System .....	10-262
Attachment Oil Flow Adjuster System .....	10-264
Tool Control System.....	10-266
Component Parts of Work Equipment System .....	10-268
Swing System .....	10-301
Layout Drawing of Swing System.....	10-301
Swing Control System Diagram .....	10-304
Component Parts of Swing System.....	10-308
Travel System .....	10-322
Layout Drawing of Travel System.....	10-322
System Diagram of Travel Control System.....	10-326
Component Parts of Travel System.....	10-328
Undercarriage and Frame .....	10-348
Layout Drawing of Undercarriage.....	10-348
Work Equipment .....	10-350
Structure of Work Equipment .....	10-350
Function of Work Equipment.....	10-351
Work Equipment Clearance Adjustment Shim.....	10-352
Bucket Clearance Adjustment Shim .....	10-353
CAB Related Parts.....	10-354
ROPS CAB .....	10-354
CAB Mount .....	10-355
CAB Tipping Stopper .....	10-356
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Engine .....	20-3
Standard Value Table for Engine: PC360LC-11 .....	20-3
Standard Value Table for Machine.....	20-8
Standard Value Table for Machine: PC360LC-11.....	20-8
Machine Posture and Procedures to Measure Performance .....	20-23
Standard Value Table for Electricity.....	20-27
Standard Value Table for Electricity.....	20-27
30 Testing and Adjusting .....	30-1
Table of Contents .....	30-2
Precautions Before Work .....	30-5
Related Information on Testing and Adjusting .....	30-6
Tools for Testing and Adjusting.....	30-6

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$