

Shop Manual

HYDRAULIC
EXCAVATOR

PC390LC-8MO

SERIAL NUMBERS 82062 and up

ecot3

KOMATSU

00 Index and foreword

Table of contents

| | |
|---|--------|
| 00 Index and foreword | |
| Foreword and general information | 00-11 |
| Foreword, safety and general information | 00-11 |
| How to read the shop manual | 00-18 |
| Explanation of terms for maintenance standard | 00-20 |
| Handling equipment of fuel system devices..... | 00-22 |
| Handling of intake system parts | 00-23 |
| Handling of hydraulic equipment..... | 00-24 |
| Method of disconnecting and connectingof push-pull type coupler | 00-26 |
| Handling of electrical equipment..... | 00-29 |
| How to read electric wire code | 00-38 |
| Precautions when performing operation | 00-41 |
| Practical use of KOMTRAX..... | 00-44 |
| Standard tightening torque table | 00-45 |
| List of abbreviation..... | 00-49 |
| Conversion table | 00-54 |
| 01 Specification | |
| Specification and technical data | 01-3 |
| Specification dimension drawings | 01-3 |
| Specifications | 01-5 |
| Weight table | 01-8 |
| Table of fuel, coolant and lubricants..... | 01-9 |
| 10 Structure, function and maintenance standard | |
| Engine and cooling system | 10-3 |
| Engine related parts | 10-3 |
| Radiator, oil cooler and aftercooler | 10-4 |
| Power train..... | 10-5 |
| Power train..... | 10-5 |
| Swing circle..... | 10-6 |
| Swing machinery..... | 10-8 |
| Final drive | 10-10 |
| Sprocket..... | 10-12 |
| Undercarriage and frame | 10-14 |
| Track frame and recoil spring..... | 10-14 |
| Idler | 10-16 |
| Carrier roller | 10-18 |
| Track roller | 10-19 |
| Track shoe | 10-20 |
| Hydraulic system..... | 10-24 |
| Hydraulic equipment layout drawing | 10-24 |
| Hydraulic tank and filter | 10-26 |
| Hydraulic pump | 10-28 |
| Control valve | 10-52 |
| CLSS..... | 10-64 |
| Functions and operation by valve | 10-68 |
| Attachment circuit selector valve | 10-107 |
| Hydraulic drift prevention valve..... | 10-110 |
| Valve control | 10-116 |
| PPC valve | 10-117 |
| Solenoid valve..... | 10-136 |
| PPC accumulator | 10-138 |
| Center swivel joint..... | 10-139 |
| Travel motor | 10-141 |

| | |
|---|--------|
| Swing motor..... | 10-153 |
| Work equipment cylinder..... | 10-161 |
| Work equipment..... | 10-164 |
| Work equipment..... | 10-164 |
| Dimensions of components | 10-166 |
| Electrical system..... | 10-170 |
| Engine control system | 10-170 |
| Electronic control system..... | 10-179 |
| Machine monitor system..... | 10-204 |
| Sensor | 10-224 |
| KOMTRAX system..... | 10-227 |
| 20 Standard value table | |
| Standard service value table | 20-3 |
| Standard value table for engine related parts | 20-3 |
| Standard value table for chassis related parts | 20-4 |
| 30 Testing and adjusting | |
| Related information on testing and adjusting..... | 30-3 |
| Tools for testing, adjusting and troubleshooting..... | 30-3 |
| Sketches of special tools | 30-7 |
| Engine and cooling system..... | 30-8 |
| Testing engine speed..... | 30-8 |
| Testing air boost pressure..... | 30-9 |
| Testing exhaust gas color | 30-10 |
| Adjusting valve clearance | 30-12 |
| Testing compression pressure | 30-14 |
| Testing blowby pressure | 30-18 |
| Testing engine oil pressure | 30-19 |
| Testing fuel pressure..... | 30-20 |
| Handling during cylinder cutout operation | 30-25 |
| Handling during no-injection cranking operation..... | 30-25 |
| Testing fuel return rate and leakage | 30-26 |
| Bleeding air from fuel circuit | 30-28 |
| Checking fuel circuit for leakage..... | 30-29 |
| Testing and adjusting air compressor belt tension..... | 30-30 |
| Replacing fan belt | 30-31 |
| Replacing alternator belt..... | 30-32 |
| Power train..... | 30-33 |
| Testing clearance in swing circle bearings..... | 30-33 |
| Undercarriage and frame | 30-34 |
| Testing and adjusting track tension | 30-34 |
| Hydraulic system | 30-35 |
| Testing and adjusting oil pressure in work equipment, swing and travel circuit..... | 30-35 |
| Testing control circuit oil pressure..... | 30-39 |
| Testing and adjusting pump PC control circuit oil pressure | 30-40 |
| Testing and adjusting pump LS control circuit oil pressure | 30-43 |
| Testing solenoid valve output pressure..... | 30-48 |
| Testing PPC valve output pressure | 30-52 |
| Adjusting play of work equipment and swing PPC valves | 30-53 |
| Inspecting locations of hydraulic drift of work equipment | 30-54 |
| Releasing remaining pressure in hydraulic circuit | 30-56 |
| Testing oil leakage amount | 30-57 |
| Bleeding air from various parts | 30-59 |
| Testing and charging accumulator (manufactured by NOK) nitrogen gas pressure for attachment (low pressure side) | 30-61 |
| Testing and charging accumulator nitrogen gas pressure for attachment (high pressure side)..... | 30-63 |
| Replacing accumulator bladder on high pressure side for accumulator piping | 30-65 |

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$