

Shop Manual

HYDRAULIC
EXCAVATOR

PC490LC-11

SERIAL NUMBERS 85416 and up

KOMATSU

00 Index and Foreword

Index

- 00 Index and Foreword 00-1
 - Abbreviation List 00-19
 - Foreword, Safety, Basic Information 00-22
 - How to Read the Shop Manual 00-22
 - Safety Notice for Operation 00-24
 - Precautions to Prevent Fire 00-32
 - Procedures If Fire Occurs 00-34
 - Precautions for Disposing of Waste Materials 00-35
 - Procedures for Exhaust Gas Regulations 00-36
 - Precautions for DEF 00-37
 - Store DEF 00-38
 - Precautions When You Handle Hydraulic Equipment 00-39
 - Precautions When You Disconnect and Connect Pipings 00-42
 - Precautions When You Handle Electrical Equipment 00-49
 - Precautions When You Handle Fuel System Equipment 00-51
 - Precautions When You Handle Intake System Equipment 00-52
 - Practical Use of KOMTRAX 00-53
 - Disconnect and Connect Push-Pull Type Coupler 00-54
 - Precautions for Disconnection and Connection of Connectors 00-58
 - How to Disconnect and Connect Deutsch Connector 00-62
 - How to Disconnect and Connect Slide Lock Type Connector 00-63
 - How to Disconnect and Connect Connector with Lock to Pull 00-65
 - How to Disconnect and Connect Connector with Lock to Push 00-66
 - How to Disconnect and Connect Connector with Housing to Rotate 00-68
 - How to Read the Codes for Electric Cable 00-69
 - Explanation of Terms for Maintenance Standard 00-73
 - Standard Tightening Torque Table 00-76
 - Conversion Table 00-83
- 01 Specifications 01-1
 - Table of Contents 01-2
 - Specifications 01-3
 - Specification Drawing 01-3
 - Working Range Drawings 01-5
 - Specifications 01-6
 - Weight Table 01-9
 - Table of Fuel, Coolant, and Lubricants 01-11
- 10 Structure and Function 10-1
 - Table of Contents 10-2
 - Urea SCR System 10-5
 - Layout Drawing of Urea SCR System 10-5
 - Urea SCR System Diagram 10-9
 - Function of Urea SCR System 10-10
 - Component Parts of Urea SCR System 10-26
 - Boot-up System 10-35
 - Layout Drawing of Boot-up System 10-35
 - System Operating Lamp System 10-37
 - Battery Isolator 10-38
 - Engine System 10-39
 - Layout Drawing of Engine System 10-39
 - Engine Control System 10-42
 - Auto-Deceleration System 10-46
 - Engine Automatic Warm-up System 10-48
 - Overheat Prevention System 10-50
 - Turbocharger Protection System 10-53
 - Automatic Idle Stop System 10-55
 - Component Parts of Engine System 10-58

Cooling System.....	10-74
Layout Drawing of Cooling System	10-74
Fan Speed Control System of Hydraulic Fan	10-77
Engine Output Control System of Hydraulic Fan	10-79
Fan Reverse Rotation System of Hydraulic Fan.....	10-82
Component Parts of Cooling System	10-83
Control System	10-97
Layout Drawing of Control System	10-97
Machine Monitor System.....	10-100
KOMTRAX System	10-101
Component Parts of Control System	10-102
Hydraulic System	10-133
Layout Drawing of Hydraulic System.....	10-133
CLSS	10-135
Engine and Pump Combined Control System	10-158
Pump and Valve Control System.....	10-165
Component Parts of Hydraulic System.....	10-168
Work Equipment System.....	10-259
Layout Drawing of Work Equipment System	10-259
Structure of Valve Control	10-264
One-Touch Power Maximizing System	10-265
Machine Push-up System	10-267
PPC Lock System	10-269
Work Equipment and Travel Automatic Lock System	10-270
Attachment Oil Flow Adjuster System	10-272
Component Parts of Work Equipment System	10-274
Swing System	10-299
Layout Drawing of Swing System.....	10-299
Swing Control System Diagram	10-305
Component Parts of Swing System.....	10-309
Travel System	10-324
Layout Drawing of Travel System.....	10-324
System Diagram of Travel Control System.....	10-328
Component Parts of Travel System.....	10-330
Undercarriage and Frame	10-351
Layout Drawing of Undercarriage.....	10-351
Work Equipment	10-352
Structure of Work Equipment	10-352
Function of Work Equipment.....	10-353
Work Equipment Clearance Adjustment Shim.....	10-354
Bucket Clearance Adjustment Shim	10-355
CAB Related Parts.....	10-356
ROPS CAB	10-356
CAB Mount	10-357
CAB Tipping Stopper	10-358
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Engine: PC490LC-11	20-3
Standard Value Table for Machine.....	20-6
Standard Value Table for Machine: PC490LC-11.....	20-6
Machine Posture and Procedures to Measure Performance	20-22
Standard Value Table for Electricity.....	20-26
Standard Value Table for Electricity.....	20-26
30 Testing and Adjusting	30-1
Table of Contents	30-2
Precautions Before Work	30-5
Related Information on Testing and Adjusting	30-6

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$