

Shop Manual

HYDRAULIC
EXCAVATOR

PC490LC-11

SERIAL NUMBERS 85416 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-20
Foreword, Safety, Basic Information	00-23
How to Read the Shop Manual	00-23
Safety Notice for Operation	00-25
Precautions to Prevent Fire	00-33
Procedures If Fire Occurs	00-35
Precautions When You Discard Waste Materials	00-36
Procedures for Exhaust Gas Regulations	00-37
Precautions for DEF	00-38
Store DEF	00-39
Precautions When You Handle Hydraulic Equipment	00-40
Precautions When You Disconnect and Connect Pippings	00-43
Precautions When You Handle Electrical Equipment	00-50
Precautions When You Handle Fuel System Equipment	00-52
Precautions When You Handle Intake System Equipment	00-53
Practical Use of KOMTRAX	00-54
Disconnect and Connect Push-Pull Type Coupler	00-55
Precautions for Disconnection and Connection of Connectors	00-59
Disconnect and Connect Deutsch Connector	00-63
How to Disconnect and Connect Slide Lock Type Connector	00-64
Disconnect and Connect Connector with Lock to Pull	00-66
Disconnect and Connect Connector with Lock to Push	00-67
Disconnect and Connect Connector with Housing to Rotate	00-69
How to Read the Codes for Electric Cable	00-70
Explanation of Terms for Maintenance Standard	00-74
Standard Tightening Torque Table	00-77
Conversion Table	00-84
01 Specification	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Working Range Drawings	01-5
Specifications	01-6
Weight Table	01-9
Table of Fuel, Coolant, and Lubricants	01-11
10 Structure and Function	10-1
Table of Contents	10-2
Urea SCR System	10-6
Layout Drawing of Urea SCR System (Applicable Machine: 85001 to 86052)	10-6
Layout Drawing of Urea SCR System (Applicable Machine: 86053 to 86205)	10-10
Layout Drawing of Urea SCR System (Applicable Machine: 86206 and up)	10-14
Urea SCR System Diagram	10-18
Function of Urea SCR System	10-19
Component Parts of Urea SCR System	10-31
Boot-up System	10-43
Layout Drawing of Boot-up System	10-43
System Operating Lamp System	10-45
Battery Isolator	10-47
Engine System	10-48
Layout Drawing of Engine System (Applicable Machine: 85001 to 86205)	10-48
Layout Drawing of Engine System (Applicable Machine: 86206 and up)	10-51
Engine Control System	10-54
Auto-Deceleration System	10-58
Engine Automatic Warm-up System	10-60
Overheat Prevention System	10-62

Turbocharger Protection System	10-65
Automatic Idle Stop System	10-67
Component Parts of Engine System	10-70
Cooling System	10-87
Layout Drawing of Cooling System	10-87
Fan Speed Control System of Hydraulic Fan	10-90
Engine Output Control System of Hydraulic Fan	10-92
Fan Reverse Rotation System of Hydraulic Fan	10-95
Component Parts of Cooling System	10-96
Control System	10-110
Layout Drawing of Control System	10-110
Machine Monitor System	10-113
KomVision System	10-114
KOMTRAX System	10-118
PPC Levers	10-119
Automatic Grease System	10-121
Component Parts of Control System	10-133
Hydraulic System	10-172
Layout Drawing of Hydraulic System	10-172
CLSS	10-174
Engine and Pump Combined Control System	10-197
Pump and Valve Control System	10-204
Component Parts of Hydraulic System	10-207
Work Equipment System	10-299
Layout Drawing of Work Equipment System	10-299
Structure of Valve Control	10-304
One-Touch Power Maximizing System	10-305
Machine Push-up System	10-307
PPC Lock System	10-309
Work Equipment and Travel Automatic Lock System	10-310
Attachment Oil Flow Adjuster System	10-312
Component Parts of Work Equipment System	10-314
Swing System	10-339
Layout Drawing of Swing System	10-339
Swing Control System Diagram	10-345
Component Parts of Swing System	10-349
Travel System	10-364
Layout Drawing of Travel System	10-364
System Diagram of Travel Control System	10-368
Component Parts of Travel System	10-370
Undercarriage and Frame	10-391
Layout Drawing of Undercarriage	10-391
Work Equipment	10-392
Structure of Work Equipment	10-392
Function of Work Equipment	10-393
Work Equipment Clearance Adjustment Shim	10-394
Bucket Clearance Adjustment Shim	10-395
CAB Related Parts	10-396
ROPS CAB	10-396
CAB Mount	10-397
CAB Tipping Stopper	10-398
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Engine: PC490LC-11	20-3
Standard Value Table for Machine	20-6
Standard Value Table for Machine: PC490LC-11	20-6
Machine Posture and Procedures to Measure Performance	20-22

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$