

Shop Manual

HYDRAULIC
EXCAVATOR

PC490LC-11E0

SERIAL NUMBERS 86088 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

(ALL-A-0310-001-10-B)

00 INDEX AND FOREWORD 00-1

 ABBREVIATION LIST 00-20

 FOREWORD, SAFETY, BASIC INFORMATION 00-26

 HOW TO READ THE SHOP MANUAL 00-26

 SAFETY NOTICE FOR OPERATION 00-28

 PRECAUTIONS TO PREVENT FIRE 00-36

 ACTIONS IF FIRE OCCURS 00-38

 PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS 00-39

 ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS 00-40

 METHOD FOR CHECKING ENGINE TYPE 00-41

 PRECAUTIONS FOR DEF 00-43

 STORE AdBlue/DEF 00-44

 PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT 00-45

 PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS 00-48

 PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT 00-55

 PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT 00-57

 PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT 00-58

 PRACTICAL USE OF KOMTRAX 00-59

 DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER 00-60

 PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS 00-64

 METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR 00-68

 METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR 00-69

 METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ... 00-71

 METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH .. 00-72

 METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .
..... 00-74

 HOW TO READ ELECTRICAL WIRE CODE 00-75

 EXPLANATION OF TERMS FOR MAINTENANCE STANDARD 00-79

 STANDARD TIGHTENING TORQUE TABLE 00-82

 CONVERSION TABLE 00-89

01 SPECIFICATIONS 01-1

 CONTENTS 01-2

 ABBREVIATION LIST 01-3

 SPECIFICATIONS 01-9

 SPECIFICATION DRAWING 01-9

 WORKING RANGE DRAWINGS 01-11

 SPECIFICATIONS 01-12

 WEIGHT TABLE 01-15

 TABLE OF FUEL, COOLANT, AND LUBRICANTS 01-17

10 STRUCTURE AND FUNCTION 10-1

 CONTENTS 10-2

 ABBREVIATION LIST 10-6

 UREA SCR SYSTEM 10-12

 LAYOUT DRAWING OF UREA SCR SYSTEM 10-12

 UREA SCR SYSTEM DIAGRAM 10-16

 FUNCTION OF UREA SCR SYSTEM 10-17

 COMPONENT PARTS OF UREA SCR SYSTEM 10-38

 BOOT-UP SYSTEM 10-47

 LAYOUT DRAWING OF BOOT-UP SYSTEM 10-47

 SYSTEM OPERATING LAMP SYSTEM 10-49

 FUNCTION OF SYSTEM OPERATING LAMP SYSTEM 10-50

 OPERATION OF SYSTEM OPERATING LAMP SYSTEM 10-51

 BATTERY DISCONNECT SWITCH 10-52

 ENGINE SYSTEM 10-53

 LAYOUT DRAWING OF ENGINE SYSTEM 10-53

 ENGINE CONTROL SYSTEM 10-56

AUTO-DECELERATION SYSTEM	10-59
ENGINE AUTOMATIC WARM-UP SYSTEM	10-61
OVERHEAT PREVENTION SYSTEM	10-63
TURBOCHARGER PROTECTION SYSTEM	10-66
AUTOMATIC IDLE STOP SYSTEM	10-68
COMPONENT PARTS OF ENGINE SYSTEM	10-71
COOLING SYSTEM.....	10-87
LAYOUT DRAWING OF COOLING SYSTEM	10-87
FAN SPEED CONTROL SYSTEM OF HYDRAULIC FAN.....	10-90
ENGINE OUTPUT CONTROL SYSTEM OF HYDRAULIC FAN.....	10-92
FAN REVERSE ROTATION SYSTEM OF HYDRAULIC FAN.....	10-95
COMPONENT PARTS OF COOLING SYSTEM.....	10-97
CONTROL SYSTEM.....	10-111
LAYOUT DRAWING OF CONTROL SYSTEM	10-111
MACHINE MONITOR SYSTEM	10-114
KomVision SYSTEM	10-115
KOMTRAX SYSTEM.....	10-119
PPC LEVERS	10-120
COMPONENT PARTS OF CONTROL SYSTEM.....	10-122
SENSOR.....	10-161
HYDRAULIC SYSTEM.....	10-163
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-163
CLSS	10-165
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-185
PUMP AND VALVE CONTROL SYSTEM	10-192
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-195
WORK EQUIPMENT SYSTEM	10-285
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-285
STRUCTURE OF VALVE CONTROL.....	10-290
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-291
MACHINE PUSH-UP SYSTEM.....	10-293
PPC LOCK SYSTEM	10-295
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-296
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-298
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-300
SWING SYSTEM.....	10-319
LAYOUT DRAWING OF SWING SYSTEM	10-319
SWING CONTROL SYSTEM DIAGRAM	10-325
COMPONENT PARTS OF SWING SYSTEM.....	10-329
TRAVEL SYSTEM.....	10-344
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-344
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-348
COMPONENT PARTS OF TRAVEL SYSTEM	10-350
UNDERCARRIAGE AND FRAME.....	10-372
LAYOUT DRAWING OF UNDERCARRIAGE	10-372
WORK EQUIPMENT.....	10-373
STRUCTURE OF WORK EQUIPMENT	10-373
FUNCTION OF WORK EQUIPMENT	10-374
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-375
BUCKET CLEARANCE ADJUSTMENT SHIM	10-376
CAB AND ITS ATTACHMENTS	10-377
ROPS CAB	10-377
CAB MOUNT	10-378
CAB TIPPING STOPPER	10-379
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$