

# Shop Manual

HYDRAULIC  
EXCAVATOR

**PC500LC-8R**

SERIAL NUMBERS 75979 and up

**KOMATSU**



---

# 00 Index and foreword

---

## Table of contents

00 Index and foreword	
Foreword and general information .....	00-9
Safety notice .....	00-9
How to read the shop manual .....	00-14
Explanation of terms for maintenance standard .....	00-16
Handling of electric equipment and hydraulic component .....	00-18
Handling of connectors newly used for engines .....	00-27
How to read electric wire code .....	00-30
Precautions when carrying out operation.....	00-33
Method of disassembling and connecting push-pull type coupler.....	00-36
Standard tightening torque table .....	00-39
Conversion table .....	00-43
01 Specification	
Specification and technical data.....	01-3
Specification dimension drawings .....	01-3
Specifications .....	01-5
Weight table .....	01-8
Table of fuel, coolant and lubricants.....	01-10
10 Structure, function and maintenance standard	
Engine and cooling system .....	10-3
Engine related parts .....	10-3
Radiator, oil cooler and aftercooler .....	10-4
Power train .....	10-5
Power train .....	10-5
Swing circle .....	10-6
Swing machinery .....	10-8
Final drive .....	10-10
Sprocket .....	10-14
Undercarriage and frame .....	10-17
Track frame and idler cushion.....	10-17
Track shoe .....	10-18
Triple-grouser shoe .....	10-20
Idler .....	10-22
Carrier roller .....	10-24
Track roller .....	10-25
Hydraulic system.....	10-26
Hydraulic equipment layout drawing .....	10-26
Hydraulic tank and filter .....	10-28
Hydraulic pump .....	10-30
Control valve .....	10-54
CLSS.....	10-66
Functions and operation by valve .....	10-70
Merge-divider valve.....	10-85
Attachment circuit selector valve .....	10-110
Holding valve .....	10-112
Valve control .....	10-117
PPC valve .....	10-118
Solenoid valve.....	10-134
PPC accumulator .....	10-136
Return oil filter.....	10-137
Center swivel joint.....	10-138
Travel motor .....	10-139
Swing motor .....	10-155

Hydraulic cylinder .....	10-164
Work equipment.....	10-166
Work equipment.....	10-166
Dimensions of components .....	10-168
Cab and its attachments .....	10-172
Air conditioner piping .....	10-172
Electrical system .....	10-173
Engine control.....	10-173
Electronic control system.....	10-183
Monitor system .....	10-208
Sensors.....	10-235
KOMTRAX system.....	10-238
20 Standard value table	
Standard service value table.....	20-3
Standard value table for engine related parts .....	20-3
Standard value table for chassis related parts .....	20-4
30 Testing and adjusting	
Related information on testing and adjusting.....	30-3
Tools for testing, adjusting and troubleshooting.....	30-3
Sketches of special tools .....	30-7
Engine and cooling system.....	30-8
Measuring engine speed .....	30-8
Measuring air boost pressure .....	30-9
Measuring exhaust gas temperature .....	30-10
Measuring exhaust gas color.....	30-11
Adjusting valve clearance .....	30-12
Measuring compression pressure.....	30-14
Measuring blow-by pressure.....	30-16
Testing engine oil pressure .....	30-17
Handling fuel system parts.....	30-18
Releasing residual pressure from fuel system.....	30-18
Measuring fuel pressure .....	30-19
Handling during cylinder cut-out operation .....	30-20
Handling during no injection cranking operation.....	30-20
Measuring fuel return rate and leakage .....	30-21
Bleeding air from fuel circuit .....	30-23
Checking fuel circuit for leakage.....	30-27
Checking and adjusting fan belt and alternator belt.....	30-28
Checking and adjusting air conditioner compressor belt tension.....	30-29
Power train.....	30-30
Testing swing circle bearing clearance .....	30-30
Undercarriage and frame.....	30-31
Testing and adjusting track shoe tension.....	30-31
Hydraulic system .....	30-32
Measuring and adjusting oil pressure in work equipment, swing, and travel circuits.....	30-32
Measuring control circuit basic pressure .....	30-36
Checking and adjusting pump PC control circuit oil pressure.....	30-37
Checking and adjusting pump LS control circuit oil pressure .....	30-40
Measuring solenoid valve output pressure .....	30-45
Measuring PPC valve output pressure .....	30-48
Adjusting play of work equipment and swing PPC valves .....	30-49
Inspecting locations of hydraulic drift of work equipment .....	30-50
Releasing residual pressure from hydraulic circuit .....	30-52
Measuring oil leakage amount.....	30-53
Bleeding air from various parts .....	30-56
Electrical system.....	30-60

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$