

# Shop Manual

HYDRAULIC  
EXCAVATOR

**PC600 -8**

**PC600LC-8**

SERIAL NUMBERS 30001 and up

**ecot3**

**KOMATSU**



# HYDRAULIC EXCAVATOR

## PC600-8

## PC600LC-8

Machine model	Serial number
PC600-8	30001 and up
PC600LC-8	30001 and up

---

# 00 Index and foreword

## Index

---

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00128-24 ●
00 Index and foreword	SEN00129-24 ●
Index	SEN00130-24 ●
Foreword and general information	SEN00131-04
01 Specification	SEN00132-04 ●
Specification and technical data	SEN00133-04 ●
10 Structure, function and maintenance standard	SEN00134-13
Engine and cooling system	SEN00135-02
Power train	SEN00136-03
Undercarriage and frame	SEN00137-01
Hydraulic system, Part 1	SEN00138-02
Hydraulic system, Part 2	SEN00139-06
Work equipment	SEN00140-04 ●
Cab and its attachments	SEN00141-00
Electrical system	SEN00142-06
20 Standard value table	SEN00394-06
Standard service value table	SEN00395-06
30 Testing and adjusting	SEN00443-05
Testing and adjusting, Part 1	SEN00444-05
Testing and adjusting, Part 2	SEN00445-04
40 Troubleshooting	SEN00446-06
Failure code table and fuse locations	SEN03960-04
General information on troubleshooting	SEN00447-04
Troubleshooting by failure code (Display of code), Part 1	SEN00448-03
Troubleshooting by failure code (Display of code), Part 2	SEN00449-02
Troubleshooting by failure code (Display of code), Part 3	SEN00450-02
Troubleshooting of electrical system (E-mode)	SEN00451-03
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN00452-02
Troubleshooting of engine (S-mode)	SEN00453-02

---

50 Disassembly and assembly	SEN01061-11 ●
General information on disassembly and assembly	SEN01062-05
Engine and cooling system, Part 1	SEN01063-03 ●
Engine and cooling system, Part 2	SEN01064-04 ●
Power train	SEN01065-05 ●
Undercarriage and frame	SEN01066-06 ●
Hydraulic system	SEN01067-05 ●
Work equipment	SEN01068-04 ●
Cab and its attachments	SEN01069-02 ●
Electrical system	SEN01070-03 ●
90 Diagrams and drawings	SEN00143-05
Hydraulic diagrams and drawings	SEN00144-03
Electrical diagrams and drawings	SEN00145-04

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$